

Operations Manual, 3RU Rack Mountable SSPA

Drawing Number: 214418
Revision K
ECO 18789



- **General Information** (216512-1)
- **Unit Description** (214418-1)
- **External N+1 Power Supply** (216512-2)
- **Controller Card** (216512-3)
- **Touchscreen Overview** (216512-4)
- **Touchscreen Menu Structure** (216512-5)
- **Touchscreen Operation, Systems** (216512-6)
- **SSPA Operational Basics** (216512-7)
- **L-Band Operation** (216594-3)
- **Maintenance and Troubleshooting** (216512-8)
- **Internal 1:1 Redundant System Operation** (216512-9)
- **Internal 1:2 Redundant System Operation** (216512-10)
- **Remote Control Protocol** (216512-11)
- **Ethernet Interface Set-up and Cabling** (216512-12)
- **Unit Control with Universal M&C Software** (216594-2)
- **Use and Disclosure of Data** (216594-1)

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/214418/214418.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>

Last Modified: 24 May 2019

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, General Information

Teledyne Paradise Datacom
Drawing Number: 216512-1 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-1.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

This section provides the general information for the Teledyne Paradise Datacom Indoor Rack Mount Solid State Power Amplifier (SSPA) Chassis. This includes a description of the unit and safety precautions for operation of the unit.

Description

The Teledyne Paradise Datacom family of Indoor SSPA Chassis includes the 3RU (rack unit), 5RU, 6RU and 7RU configurations. Generally, the larger the rack space used, the higher the RF output power. See Table 1.

Table 1: Indoor Rack Mount SSPA Configurations

Chassis Type	Band Availability	Width	Height	Depth	Weight (typical)
3RU	S, C, X, Ku	19.00 in. [483 mm]	5.22 in. [133 mm]	25.25 in. [641 mm]	85 lbs. [38.5 kg]
5RU	S, C, X, Ku	19.00 in. [483 mm]	8.75 in. [222 mm]	30.25 in. [768 mm]	150 lbs. [68 kg]
6RU (GaAs only)	C (X, Ku)	19.00 in. [483 mm]	10.47 in. [266 mm]	30.25 in. [768 mm]	180 lbs. [82 kg]
7RU	C, X, Ku	19.00 in. [483 mm]	12.22 in. [310 mm]	30.00 in. [762 mm]	160 lbs. [72.5 kg]

These units are available with Gallium Arsenide (GaAs) or Gallium Nitride (GaN) RF modules. GaN amplifiers utilize innovative linearization techniques that produce linear output power with the same efficiency as tube based amplifier systems. S-Band units are only available with GaN RF modules.

3RU SSPA Chassis

The 3RU chassis was specially designed to accommodate applications where rack space is at a premium. At only 3RU in height, this SSPA Chassis is perfect for use in Satellite News Gathering or flyaway applications. See the Unit Description section of the 3RU manual for details.

5RU SSPA Chassis

The 5RU chassis is available with one of the highest power densities in the industry, with up to 2kW of output power in S-Band, 1.6kW in C and X-Band, and 1kW in Ku-Band. See the Unit Description section of the 5RU manual for details.

6RU SSPA Chassis

The 6RU chassis is only available using Gallium Arsenide (GaAs) RF modules, with up to 1.1kW of output power in C-Band, 1kW in X-Band, and 500W in Ku-Band. See the Unit Description section of the 6RU manual for details.

7RU SSPA Chassis

The 7RU chassis offers redundant RF power in a single unit. The 7RU chassis features four (4) RF modules, which can be accessed from the front panel. With Auto Gain enabled, a failure of a single RF module will not adversely affect amplifier performance. The RF modules are hot-swappable, and can be removed from the chassis without taking the amplifier offline. See the **Removable Module** description in the Unit Description section of the 7RU manual for details.

Rack Mount SSPA Features

All indoor rack mount SSPAs use a separate 1RU power supply chassis, which includes up to four power supply modules. The power supply has one more module than is necessary to operate the amplifier, resulting in N+1 redundancy for the power source.

A rich feature set has been maintained for all chassis configurations. For field maintainability, this chassis features:

- Front and rear panel removable fan trays;
- Front panel removable power supply modules;
- Rear panel removable controller card assembly;
- RF output sample port (Front panel for 3RU/5RU; Rear panel for 7RU).

The indoor RM SSPA chassis includes a wide array of standard interfaces:

- Front Panel Local Interface and Status Indicators
- RS232/RS485 (4-wire) Serial Communication (with either Windows-based M&C or third-party M&C drivers available)
- Ethernet Port (SNMP, UDP Serial Programming, Web Browser Interface)
- Parallel I/O (Form C Contact Outputs, Opto Isolated Inputs)

The chassis' microprocessor monitors various voltages, currents and temperatures within the unit for a full fault analysis. The user also may select additional faults related to the RF output level, an optional reflected RF power level and operating temperature.

An internal attenuator allows up to 20.0 dB of attenuation to be applied to the RF signal. Temperature compensation limits the amplifier's output response from varying significantly over the operating temperature. Also, the system contains input and output sample ports.

Specifications

Refer to the SSPA's specification sheet for complete specifications. The latest revision of the specification sheet is available on the Teledyne Paradise Datacom web site: www.paradisedata.com.

Inspection

When the unit is received, an initial inspection should be completed. First ensure that the shipping container is not damaged. If it is, have a representative from the shipping company present when the container is opened. Perform a visual inspection of the equipment to make sure that all items on the packing list are enclosed. If any damage has occurred or if items are missing, contact:

Teledyne Paradise Datacom
11361 Sunrise Park Drive
Rancho Cordova, CA 95742 USA
Phone: +1 (814) 238-3450

Rack Mounting and Installation

The SSPA Chassis is designed to fit in a standard 19" (483 mm) wide EIA rack. Optional rack slides are available, which will ship with the unit.

If Teledyne Paradise Datacom is supplying the equipment cabinet along with a system, a portion of the rack slides may be secured to each SSPA chassis at the factory.

Install the rack slides into the equipment cabinet using the rack slide manufacturer's recommended installation instructions.

Extend the sliding section of the rack slide from the cabinet until it locks into place. See Figure 1.

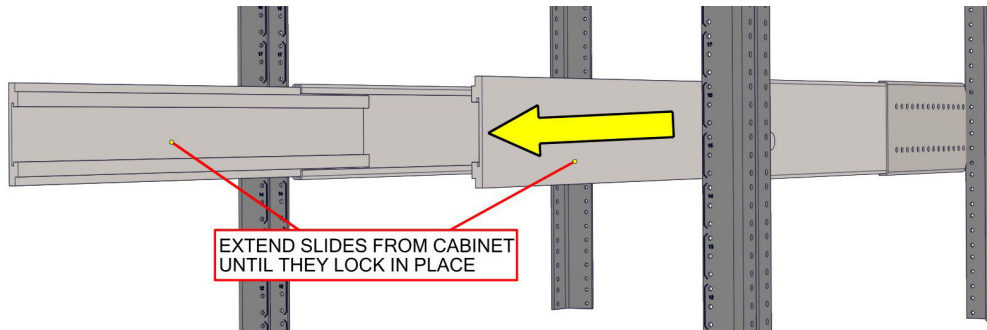


Figure 1: Extend Rack Slide from Cabinet

Insert the rack slide section attached to the SSPA into the sliding section. See Figure 2.

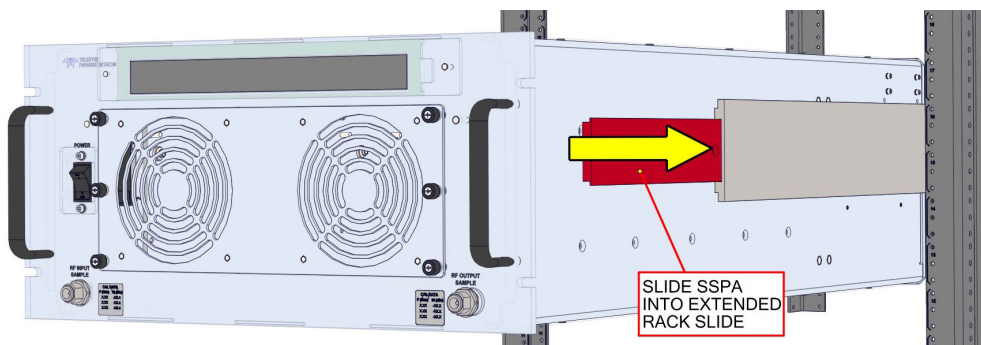


Figure 2: Install SSPA into Rack Slide (5RU SSPA Shown)

Release the locking mechanism on the sliding section, and push the SSPA into the cabinet. Secure the front panel to the cabinet rails. See Figure 3. Hardware may not be included if Teledyne Paradise Datacom is not supplying the equipment cabinet.

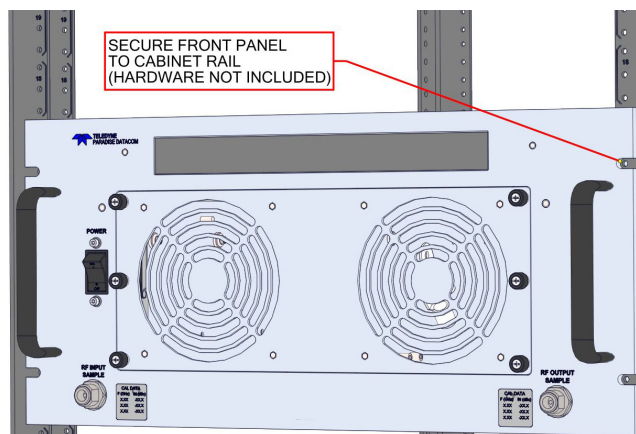


Figure 3: Slide SSPA into Cabinet; Secure to Cabinet Rails

Installation Notes

When installing the SSPA, make sure to use the lifting handles on the front and back of the chassis. Do not lift by the waveguide flange or other connectors.

At least two persons, or a mechanical lift, should be available to set the amplifier into place.

Shipment


To protect the SSPA Chassis during shipment, use high quality commercial packing methods. When possible, use the original shipping container and its materials. Reliable commercial packing and shipping companies have facilities and materials to adequately repack the instrument.

Safety Considerations

Potential safety hazards exist unless proper precautions are observed when working with this unit. To ensure safe operation, the user must follow the information, cautions and warnings provided in this manual as well as the warning labels placed on the unit itself.


High Voltage Hazards


High Voltage, for the purpose of this section, is any voltage in excess of 30V. Voltages above this value can be hazardous and even lethal under certain circumstances. Care should be taken when working with devices that operate at high voltage.

 **All probes and tools that contact the equipment should be properly insulated to prevent the operator from coming in contact with the voltage.**

 **The work area should be secure and free from nonessential items.**


 **Operators should never work alone on high voltage devices. There should always be another person present in the same work area to assist in the event of an emergency.**


 **Operators should be familiar with procedures to employ in the event of an emergency, i.e., remove all power, CPR, etc.**


 **An AC powered unit will have 115 VAC or 230 VAC entering through the AC power connector. Caution is required when working near this connector, the AC circuit breaker, or the internal power supply.**


High Current Hazards


Many high power devices are capable of producing large surges of current. This is true at all voltages, but needs to be emphasized for low voltage devices. Low voltage devices provide security from high voltage hazards, but also require higher current to provide the same power. High current can cause severe injury from burns and explosion. The following precautions should be taken on devices capable of discharging high current:

 **Remove all conductive personal items (rings, watches, medals, etc.)**

 **The work area should be secure and free of non-essential items.**

 **Wear safety glasses and protective clothing.**


 **Operators should never work alone on high risk devices. There should always be another person present in the same area to assist in the event of an emergency.**

 **Operators should be familiar with procedures to employ in the event of an emergency, i.e., remove all power, CPR, etc.**


Large DC currents are generated to operate the RF Module inside of the enclosure. Extreme caution is required when the enclosure is open and the amplifier is operating. Do not touch any of the connections on the RF modules when the amplifier is operating. Current in excess of 60 Amperes may exist on any one connector.


RF Transmission Hazards

RF transmissions at high power levels may cause eyesight damage and skin burns. Prolonged exposure to high levels of RF energy has been linked to a variety of health issues. Please use the following precautions with high levels of RF power.

 **Always terminate the RF input and output connector prior to applying prime AC input power.**

 **Never look directly into the RF output waveguide.**

 **Maintain a suitable distance from the source of the transmission such that the power density is below recommended guidelines in ANSI/IEEE C95.1. The power density specified in ANSI/IEEE C95.1-1992 is 10 mW/cm². These requirements adhere to OSHA Standard 1910.97.**


 **When a safe distance is not practical, RF shielding should be used to achieve the recommended power density levels.**

Electrical Discharge Hazards


An electric spark can not only create ESD reliability problems, it can also cause serious safety hazards. The following precautions should be followed when there is a risk of electrical discharge:

 **Follow all ESD guidelines**

 **Remove all flammable material and solvents from the area.**

 **All probes and tools that contact the equipment should be properly insulated to prevent electrical discharge.**

 **The work area should be secure and free from nonessential items.**

 **Operators should never work alone on hazardous equipment. There should always be another person present in the same work area to assist in the event of an emergency.**



Operators should be familiar with procedures to employ in the event of an emergency, i.e., remove all power, CPR, etc.

High Leakage Current

The equipment may have more than 3.5 mA leakage current. Make sure a connection to earth ground is present before applying prime power, and after removing prime power.

High Potential for Waveguide Arcing

As with all systems which utilize high power signals within waveguide, the potential exists for an electric arc to form. To minimize this risk, Teledyne Paradise Datacom requires all waveguide be pressurized and dehydrated.

Waveguide Pressurization/Dehydration

When working with high power amplifier systems that operate into waveguide, the inadvertent creation of arcs is always a concern. An arc in waveguide is the air discharge breakdown due to the ionization of the air molecules by electrons. This breakdown in waveguide occurs when the rate of electron production becomes greater than the loss of electrons to diffusion to the surrounding walls.

It is extremely difficult to precisely predict the power levels at which the breakdown occurs. It is dependent on a variety of factors but the primary factors are:

- Waveguide temperature and atmospheric pressure
- Components in the Waveguide Transmission System such as: Flanges, Bends, Tees, Combiners, Filters, Isolators, etc.
- Load VSWR presented to the amplifier.

When operating such a high power amplifier system it is imperative that the waveguide transmission system be dehydrated and pressurized. Operation with an automatic air dehydrator will provide dry pressurized air to ensure that condensation cannot form in the waveguide. Also the higher the pressure that can be maintained in the waveguide; the higher the power handling is in the waveguide system. Most commonly available air dehydrators are capable of providing pressures of 0.5 to 7.0 psig (25-362 mmHg).

At low power levels (uniform field distribution), low pressure can give good results. For non-uniform conditions, highly localized breakdown can occur. In this case the waveguide system will require much higher pressure. This occurs with bends, waveguide flange joints. If line currents flow across a small gap introduced by poor tolerances, flange mismatch, poorly soldered bends, field strengths in excess of that in the main line can occur in the gap. Pressurization with air or high dielectric gases can increase the power handling by factors of 10 to 100.

In High Power Amplifier systems an arc will travel from where it is ignited back to the amplifier. Typical arc travel speed is on the order of 20 ft/sec. Increasing the waveguide pressure can reduce the speed of arc travel. It is difficult to get an accurate calculation of the amount of pressurization needed, but it is a good practice to get as much pressure as your system can handle. All high power systems that meet the criteria of **Table 2** are pressure tested at the factory to 1.5 psig.


 **Important! As a guide we recommend using the power levels in Table 2 as the threshold levels where special attention be given to dehydration and the overall simplification of waveguide system design.**

Table 2: Recommended Output Power Thresholds

Satcom Band	Frequency Range	Amplifier Output Power	Waveguide
S Band	1.7-2.6 GHz	> 10 kW	WR430
C-Band	5.7 - 6.7 GHz	> 2 kW	WR137
X-Band	7.9-8.4 GHz	> 1kW	WR112
Ku-Band	13.75-14.5 GHz	> 500W	WR75
Ka-Band	27-31 GHz	> 100W	WR28

It is a common misconception to look up the maximum theoretical power handling of a particular type of waveguide and assume that this is the maximum power handling. This may be the case for a straight waveguide tube with ideal terminations but these values must be significantly de-rated in practical systems. Phase combined amplifier systems can be particularly sensitive to the potential for waveguide arcing. This is due to the numerous bends, magic tees, multiple waveguide flange joints, and other waveguide components. **Table 3** shows the power handling capability of some popular waveguide components normalized to the waveguide power rating. From this table, we can see how a practical waveguide system's power handling will de-rate significantly.

Table 3: De-rating of W/G Components Relative to Straight W/G

Waveguide Component	Relative Power Rating
H Plane Bend	0.6 to 0.9
E Plane Bend	0.97
90-Degree Twist	0.8 to 0.9
Magic Tee	0.80
E-Plane Tee	0.06
H-Plane Tee	0.80
Cross Guide Coupler	0.21

Most waveguide systems have many of these components integrated before reaching the antenna feed. It is not uncommon for a Satcom waveguide network to de-rate to 5% of the straight waveguide power rating.

The load VSWR also has an impact on the breakdown threshold in waveguide networks. Standing waves degrade the power handling of any transmission line network. The graph of **Figure 4** shows the rapid degradation of waveguide breakdown vs. load VSWR. The chart shows that for a 2.0:1 load VSWR, the breakdown potential will be half of what it would be with a perfectly matched load. This can degrade even more when high Q elements such as band pass filters are included in the waveguide network.

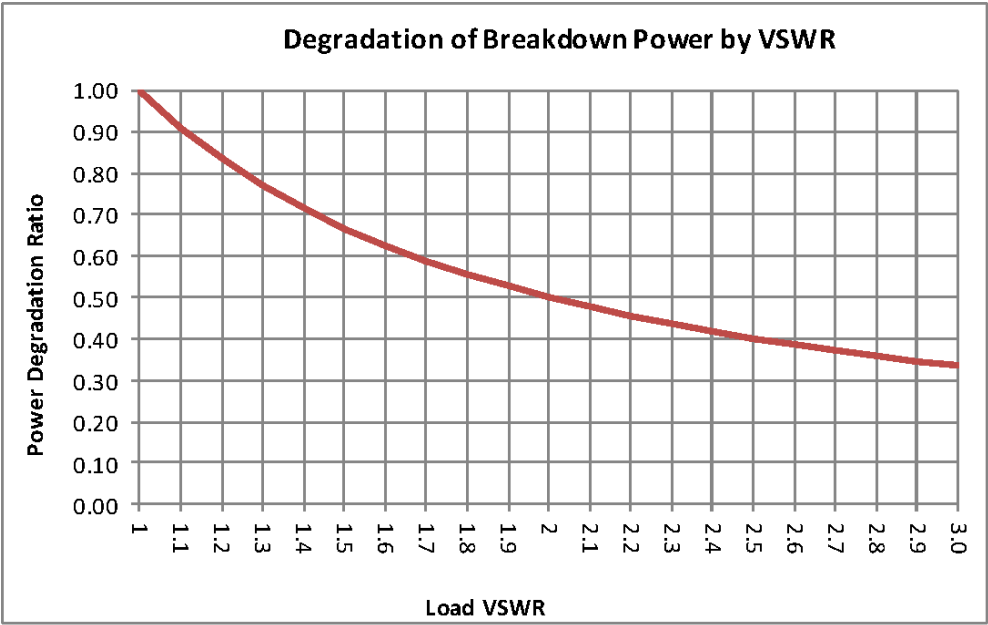


Figure 4: Degradation of Breakdown Power by VSWR

There are many factors to consider with high power amplifier systems in terms of the output waveguide network. Especially when using HPA systems with output power levels of **Table 2**, it is imperative to ensure that the output waveguide network is pristinely clean and dry. An appropriate dehydrator should be used with capability of achieving adequate pressure for the system's output power. Take extra precaution to make sure that any waveguide flange joints that are not already in place at the factory are properly cleaned, gasket fitted, and aligned. A properly designed and maintained waveguide network will ensure that no arcing can be supported and will provide many years of amplifier service life.

Teledyne Paradise Datacom
Drawing Number 216512-1 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-1.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

3RU Rack Mountable SSPA, Unit Description

Teledyne Paradise Datacom
Drawing Number: 214418-1 Revision K
ECO 18789
24 May 2019

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/214418/214418-1.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

This section contains a description of 3RU SSPA Chassis, including the front panel indicators and controls, and I/O connectors and their functions.

Front Panel Features

Figure 1 illustrates the front panel.

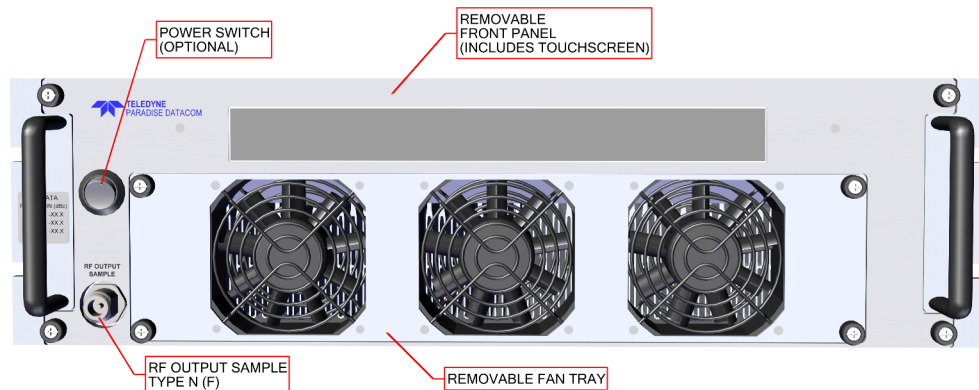


Figure 1: 3RU SSPA, Front Panel

Power Switch (Optional)

The 3RU SSPA Chassis has an optional front panel power switch used to toggle power to the unit. Position 1 (O) is the off position; Position 2 (I) is the on position.

RF Output Sample [Type N(F)]

The RF Output Sample Port connector is located on the left lower corner of the front panel. This port provides a coupled sample of the RF output signal. A label imprinted with calibration data is located adjacent to the N-type (F) connector.

Removable Fan Tray

Four (4) captive thumb screws secure the fan tray to the front of the chassis. Loosen the thumb screws with a Philips screwdriver by rotating them counter-clockwise. Gently slide the fan tray assembly out of the enclosure until there is enough clearance to reach the power plug. Unplug the power connector. See Figure 2.

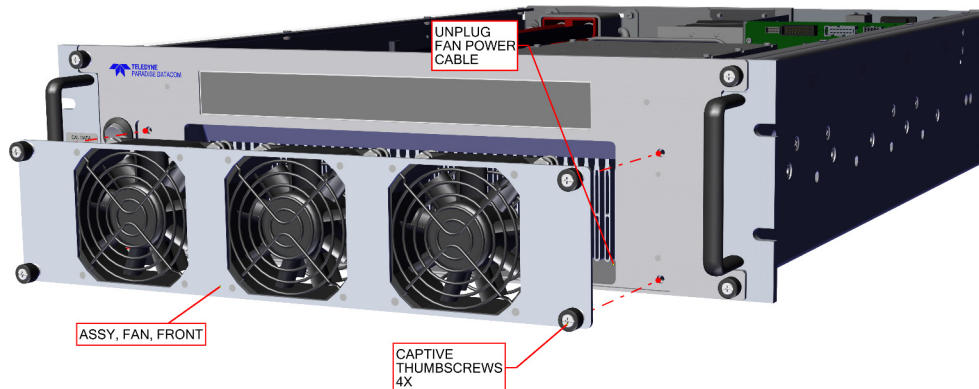


Figure 2: 3RU SSPA, Removable Front Fan Assembly

Warning! Do not operate the amplifier for an extended period of time without the fans. Thermal shut-down may occur. If performing extended maintenance to the internal components of the unit, completely remove AC power to the unit's power supply to assure no DC voltages are present.

A replacement fan tray may be ordered from the factory. Order part number L206361-1. Check with the factory to ensure the proper version is ordered.

To replace the fan tray, slide the assembly back into the SSPA enclosure until you can reconnect the power plug for the fans. Seat the fan tray snugly against the front panel and secure with the thumbscrews. Tighten clockwise to snug with a Philips screwdriver.

Removable Front Panel

Four (4) captive thumb screws secure the front panel to the front of the chassis. Loosen the thumb screws by rotating them counter-clockwise with a Philips screwdriver. The fan power cable will need to be disconnected from the plenum before fully removing the front panel. See Figure 3.

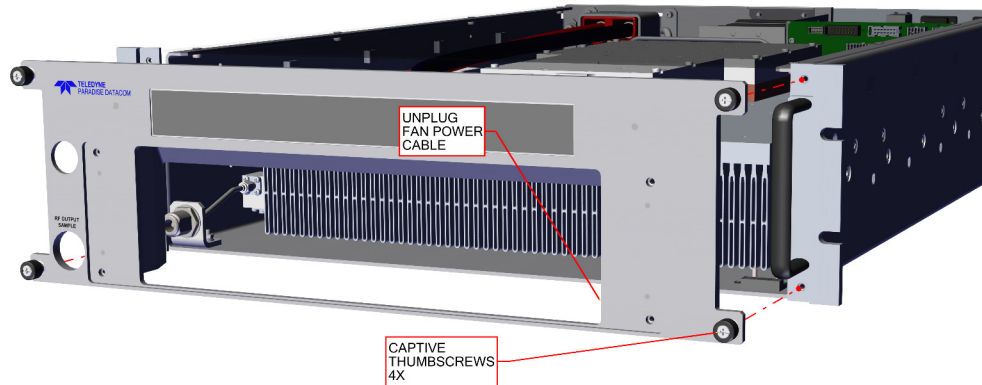


Figure 3: 3RU SSPA, Removable Front Panel

⚠ The front panel should only be fully removed at the direction of the factory. Performing maintenance to clean the heatsink can be done without removing the front panel.

When the front panel is removed, a magnetic switch will disengage and disable the fans. This function does NOT remove power from the unit. You may operate the unit for short periods of time without the fans installed.

⚠ Warning! Do not operate the amplifier for an extended period of time without the fans. Thermal shut-down may occur. If performing extended maintenance to the internal components of the unit, completely remove AC power to the unit's power supply to assure no DC voltages are present.

Disconnect the fan power cables from the plenum to completely remove the front panel.

To replace the front panel, slide the assembly back into the SSPA enclosure until you can insert the power plug for the fans back into the plenum. Seat the front panel snugly in place and secure with the thumbscrews. Tighten clockwise to snug with a Philips screwdriver.

Rear Panel Features

All cable and waveguide connections are made at the rear panel of the 3RU SSPA Chassis.

The chassis rear panel also features a removable controller card assembly, and individual removable fan assemblies.

Figure 4 shows the rear panel view of a typical C-Band amplifier.

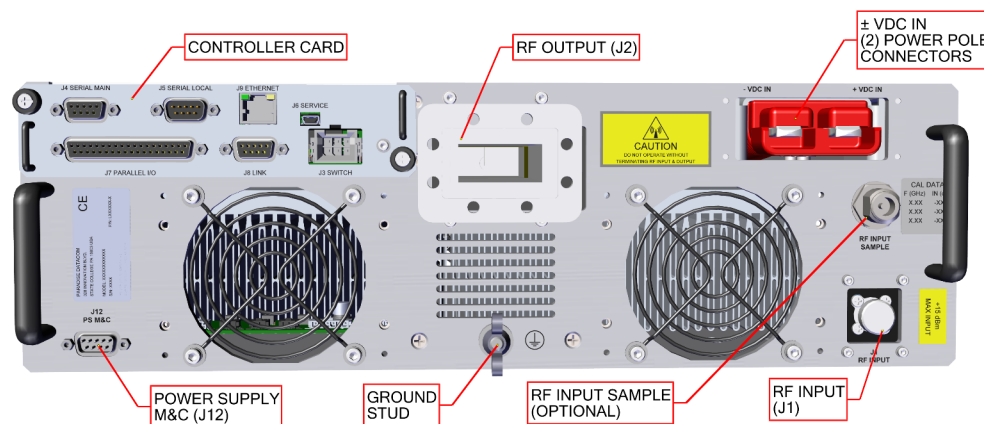


Figure 4: 3RU SSPA, Rear Panel


RF Input Port (J1) [Type N(F)]

The Type N (F) connector on the bottom right of the rear panel is used to introduce RF input to the SSPA.

 **Maximum input is +15 dBm.**

RF Output Port (J2)

The waveguide flange in the middle of the rear panel is used as the RF Output. C-Band amplifiers utilize a WR137 waveguide with CPR 137G flange, while Ku-Band amplifiers use a WR75 waveguide with a WR75 grooved (PBR-120) flange. X-Band units employ a WR112 waveguide with a CPR112G grooved flange. All waveguide flanges have through holes. S-Band amplifiers use a 7/16 connector for the RF Output port.

 **Do not operate the amplifier without having a mating connection or termination on the RF Output Port. RF Hazard warnings apply.**

Controller Card

The controller card assembly is located at the rear of the SSPA and includes the Switch (J3), Serial Main (J4), Serial Local (J5), Programming (J6), Parallel I/O (J7), Link (J8) and Ethernet (J9) ports. See the **Controller Card** section for details.

In the case of a board failure, the controller card may be removed while the unit is operating. See the Removing the Controller Card description of the **Maintenance and Troubleshooting** section.

Power Supply M&C (J12)

The Power Supply Alarm Cable is connected between this DB-9 connector and the Alarms Port of the 1RU power supply chassis. See the Power Supply Alarm Connection description of the **External N+1 Power Supply** section.

The SSPA monitors the status of the power supply chassis and alarms in the event of a power supply module failure. Due to the nature of the N+1 redundant power supply, a failure will not take the amplifier off the air.

Input Sample Port (Optional)

An optional RF input sample port is located above the J1 RF Input connector on the rear panel. It is a type N female connector. This port provides a coupled sample of the RF input signal. A calibration tag is located adjacent to the connector.

DC Input Quick Connect Ports

Power to the 3RU SSPA Chassis is supplied by a separate power supply chassis. See the **External N+1 Power Supply** section for details.

The power supply's DC output is provided by cables permanently attached to the Power Supply that connect to the SSPA's internal bus-bar via a series of quick-disconnect high current in-line connectors.

Simply connect the mating DC output cable quick-disconnect connectors to the positive and negative power connectors at the rear of the chassis.

Ground Stud

A threaded ground stud is located at the bottom left of the rear panel. Connect to an earth ground before applying power to the amplifier.

Removable Rear Fan Assemblies

Higher power amplifiers include two fan assemblies at the rear of the chassis to circulate air out of the enclosure.

The exhaust fans on the rear panel are each secured by four (4) captive thumb screws. To remove, loosen the screws and carefully remove the fan assembly from the chassis. Unplug the fan power cord from the connector. See Figure 5.

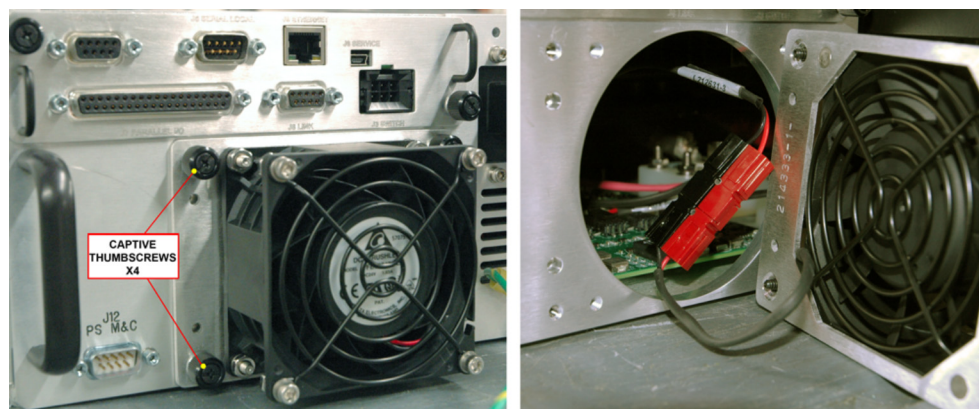


Figure 5: 3RU SSPA, Rear Fan Assemblies

To replace the rear fan assembly, slide the assembly back into the SSPA enclosure until you can reconnect the power plugs. Seat the fan assembly snugly in place and secure with the thumbscrews. Tighten clockwise to snug with a Philips screwdriver.

Replacement fans are available from the factory. Request part number L214332-1. Check with the factory to ensure the proper version is ordered.

Exhaust Duct Adapters (Optional)

Optional exhaust duct adapters are available for the 3RU SSPA chassis. These aluminum housings can be affixed to the rear of the amplifier. If the amplifier includes rear fan assemblies, the housings fit over the fans. See Figure 6.

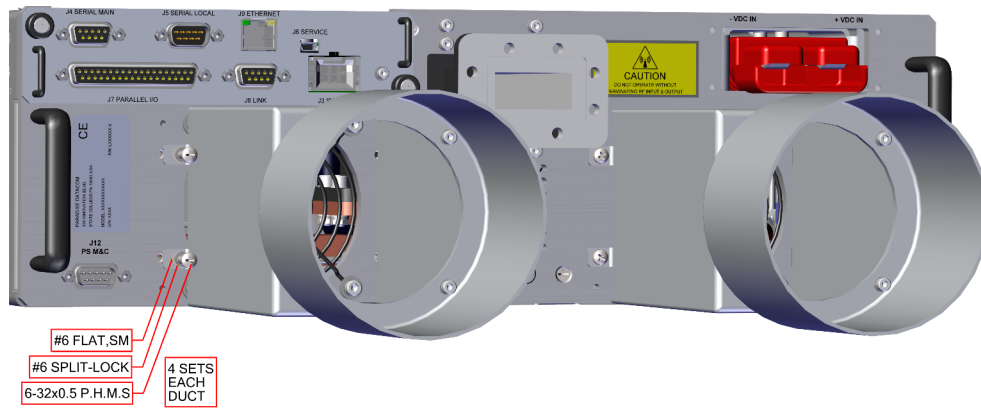


Figure 6: 3RU SSPA, Optional Exhaust Duct Adapters

Connect a 4-inch duct to the adapter housings. Consult the factory for fan specifications to determine maximum duct length.

Teledyne Paradise Datacom
 Drawing Number 214418-1 Revision K
 ECO 18789
 Last Modified: 24 May 2019

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/214418/214418-1.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, External N+1 Power Supply

Teledyne Paradise Datacom
Drawing Number: 216512-2 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-2.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Redundant Power Supply Chassis

A separate power supply chassis is used to provide redundancy of the power supply to the SSPA chassis. The power supply is configured with a parallel set of modules. All of the modules are active and share the load current supplied to the amplifier. The power supply module current capacity is chosen such that at least one extra module is included over the amplifier's current requirement. This is to say that the power supply is n+1 redundant. The amplifier will continue to operate normally in the presence of one power supply module failure.

The power supply modules are all hot swappable from the front panel. Therefore, if there ever is a power supply module failure, there is no need to remove the entire power supply chassis. The failed module is simply removed via the front panel. The power supply module removal can be performed with the system powered. This is to say that the modules are "hot swappable".

In some very high power amplifier configurations, up to two 1RU power supply chassis (up to eight (8) power supply modules) are used to provide the extra power supply module for N+1 operation.

1RU N+1 Redundant Power Supply

The 1RU power supply shelf can be mounted directly below and adjacent to the amplifier chassis. The 1RU power supply chassis is configured as an N+1 redundant, hot swappable power source utilizing up to four 2.5 kW power modules. In the event of a single power module failure, the amplifier system will not fail.

AC Mains Connection

In keeping with the redundant architecture of the power supply, there are individual AC inputs for each power supply module. DC Outputs are in a bus bar configuration. See Figure 1.

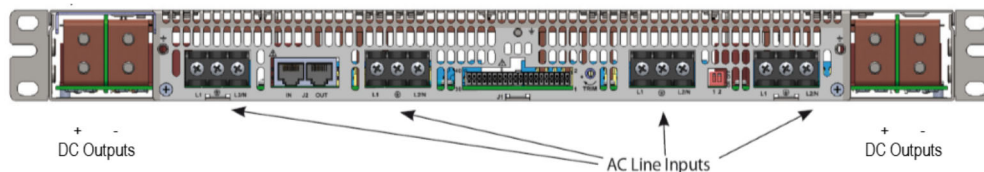


Figure 1: 1RU Power Supply AC Line Inputs/Outputs

The standard input configuration for the 2.5 kW power supply is 180-265 VAC single phase, 47-63 Hz, 0.99 power factor per module. A separate AC input transformer could feed each AC input.

The AC connections on the power supply shelf are made via rear accessed compression style terminal blocks; each power supply module has its own AC feed. These terminal blocks will accept up to a maximum of 10 AWG wire, and should be torqued to 6 in-lbs.

The wiring identification is as follows:

- L1 - Brown
- Chassis Ground - Green/Yellow
- L2/N - Blue

DC Output Connection

The DC output is provided by cables attached to the Power Supply DC output bus bars that connect to the SSPA via a series of quick-disconnect high current in-line connectors.

Connect the mating DC output cable quick-disconnect connectors to the positive (red) and negative (black) power connectors at the rear of the chassis. See Figure 2.

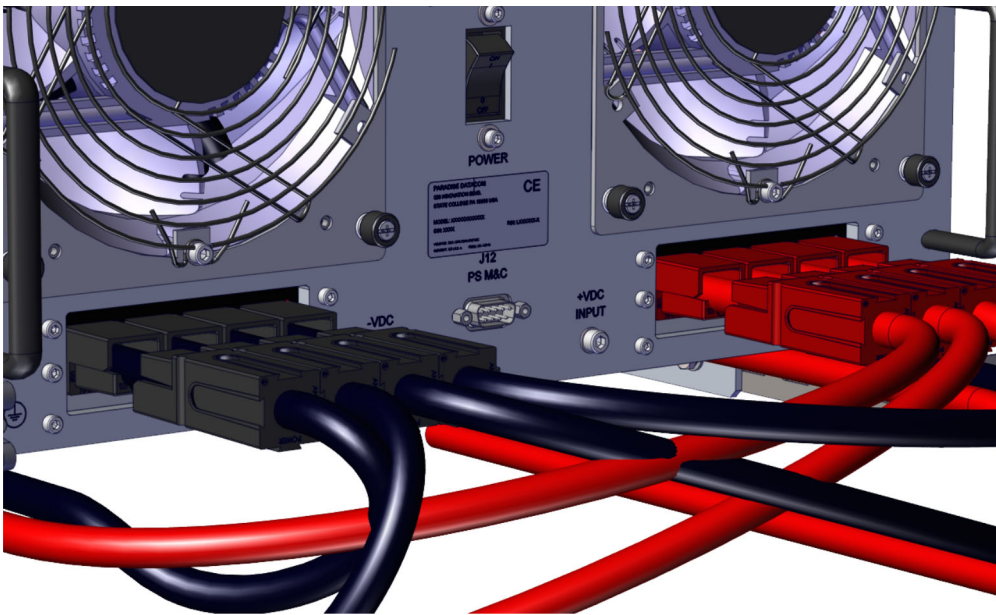


Figure 2: Connect DC Cable Power Pole Connectors (7RU shown)

Power Supply Alarm Connection

Each power supply module has an alarm output. The power supply alarms are monitored by the SSPA's monitor and control system. This provides for local and remote alarm reporting in the event of a power supply module failure. The module alarm outputs are open-collector signals with a low level = fault logic level. Under normal operation the alarm outputs are in an open collector logic low state.

Connect the Alarm Cable from the Alarms Port of the 1RU Power Supply to Port J12 of the accompanying SSPA Chassis. See Figure 3.

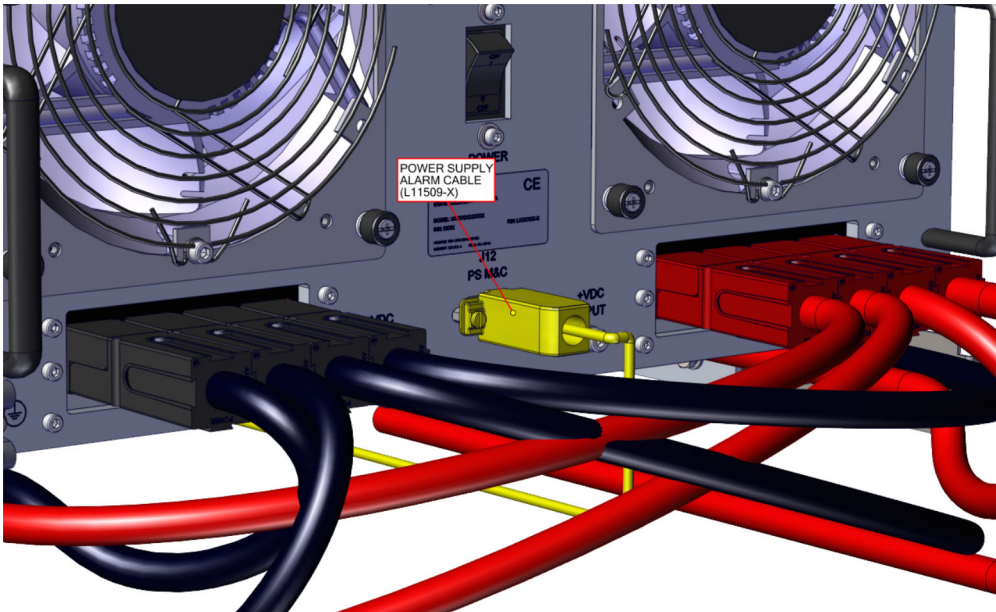


Figure 3: Plug Power Supply Alarm Cable to Port J12 PS M&C (7RU shown)

If multiple power supply chassis are used, the Alarm Cable is a y-cable that connects to each power supply Alarms Port, and to Port J12 of the SSPA Chassis.

Alarm Configuration at the SSPA Chassis

The power supply alarms may be monitored via the touchscreen. Tap the Home icon; tap the Status button; tap the Fault Panel button. See the Fault Panel description of the **Touchscreen Menu Structure** section for details.

A failure of one of the power supply modules results in a minor fault, and the Power Supply Fault indicator on the front panel of the SSPA Chassis will light and the Fault Panel will indicate a Power Supply Fault. To clear the fault, replace the faulted power supply module.

The operator may also perform a visual inspection of the power supply modules to discern the operational state of each module.

- The AC OK LED indicator illuminates green when input voltage is between 85 vac and 270 vac. It does not illuminate if input voltage is outside that input voltage range.
- The DC OK LED indicator illuminates green when output voltage is above 90% \pm 5% of the voltage setting. It will illuminate red when output voltage falls below that setting.

Power Supply Module Removal/Replacement

A failed module can be changed without ever taking the system out of service. See the Removable Power Supply Modules description below.

Removable Power Supply Modules

The Indoor RM SSPA is configured with an external 1RU redundant power supply. Each power supply chassis can house up to four (4) power supply modules, and is fitted with one more power supply module than necessary to power the amplifier.

In some very high power amplifier configurations, up to two 1RU power supply chassis (up to eight (8) power supply modules) are used to provide the extra power supply module for N+1 operation.

A power supply module can be removed and replaced from the power supply chassis without taking the amplifier offline. To extract a power supply module from the chassis, lift up on the release knob on the front panel. Grasp the extraction handle and pull the module firmly out of the power supply chassis. See Figure 4.

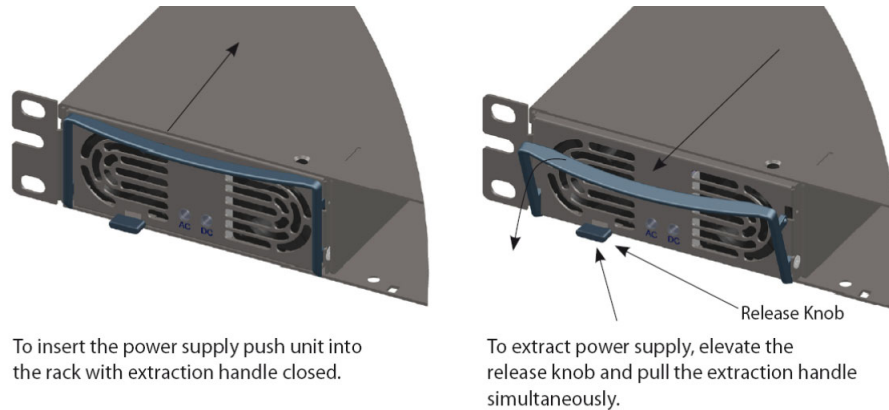


Figure 4: 1RU Power Supply Module Insertion/Extraction

To install the power supply modules into the chassis, place a module into one of the empty bays of the chassis making sure that the release knob is located at the lower left side of the opening and the handle is at the top. Slide the module slowly into an empty slot in the chassis until it is properly seated, taking care not to slam or unnecessarily force the unit into the slot.

⚠ Make sure that the front panel of each power supply module is flush with the edge of the bay into which it was inserted. See Figure 5. Closing the handle does not always properly seat the module into the bay.

Front Panel of Module Should Be Flush With Bay Edge

Figure 5: Front Panel of Module Should Be Flush With Bay Edge

Each power supply module has an alarm output which is monitored by the SSPA monitor and control system. This provides local and remote alarm reporting in the event of a power supply module failure.

The module alarms are open-collector signals with a high impedance state = fault logic level. Under normal operation, the alarm outputs are in an open collector logic low state.

The power supply alarms may be monitored via the SSPA Chassis front panel menu.

N+1 Power Supplies in PowerMAX Systems

System prime input power is achieved via a number of 1RU power supply chassis (depending on the system power requirements), each of which houses up to four (4) 2.5 kW power supply modules. Power is distributed from the power supplies to the SSPA modules via a bus rail assembly.

All of the power supply modules are active and share the load current supplied to the amplifier. The power supply module current capacity is chosen such that at least one extra module is included over the amplifier's current requirement. This is to say that the power supply is n+1 redundant. The amplifier will continue to operate normally in the presence of one power supply module failure.

The failed module can be changed without ever taking the system out of service. Simply extract the failed module out of the rack, and plug in a replacement. See Figure 6.



Figure 6: N+1 Power Supply

An example of the input power requirements for PowerMAX system configurations using a C-Band 400W GaN SSPA Module is shown in Table 1.

Table 1: Prime Input Power Example (400W GaN C-Band SSPA Modules)

SSPA Module Power Level	4-Module Required Input Power @ Psat	8-Module Required Input Power @ Psat	16-Module Required Input Power @ Psat
400W GaN C-Band	7200 W	14400 W	28800 W

Refer to the specification sheet on the Teledyne Paradise Datacom web site for a full list of power requirements for the available PowerMAX system configurations.

In keeping with the redundancy architecture of the power supply, there are individual AC input for each power supply module. DC outputs are in a bus bar configuration. See Figure 7.

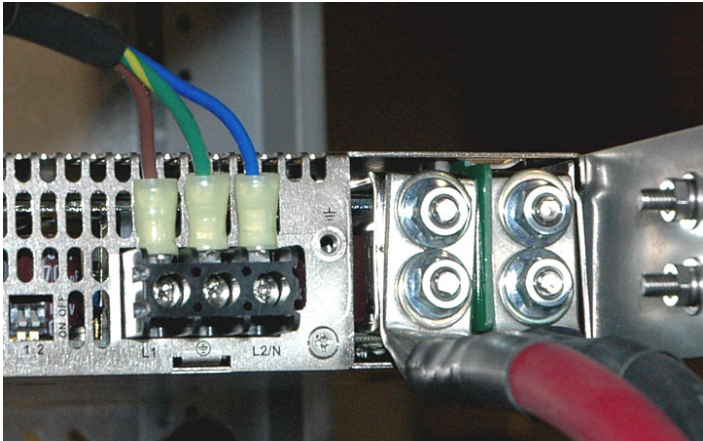


Figure 7: Cables Bolted to Power Supply Bus Bar

The standard AC input configuration for the 2.5 kW power supply is 100-240 VAC single phase, 47-63 Hz, 0.99 power factor per module.

The DC output from each power supply is connected to the system bus bar. The power cables are bolted to the bus bars of the power supply, as shown in Figure 8.

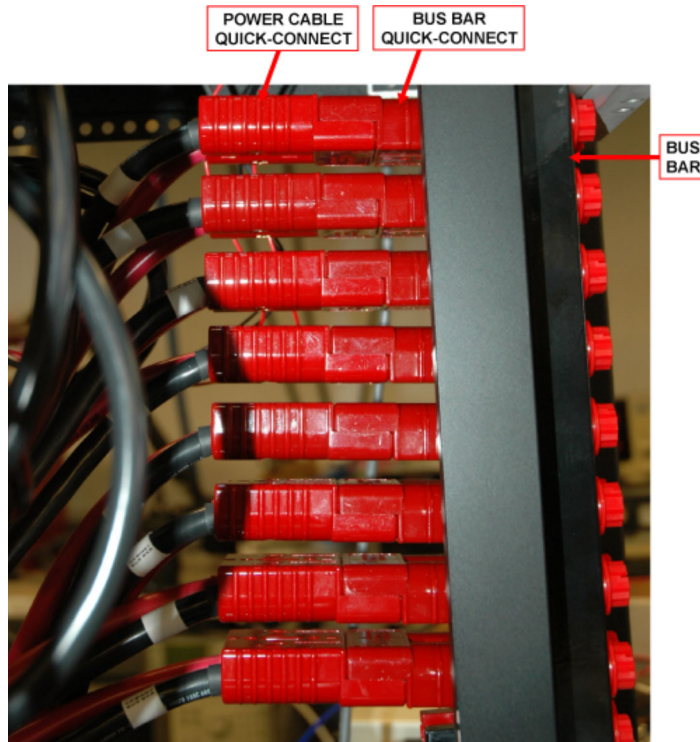


Figure 8: Quick Connectors Bolted to Bus Bar

The other end of the cable snaps into the power pole connector attached to the system bus bar. See Figure 9.

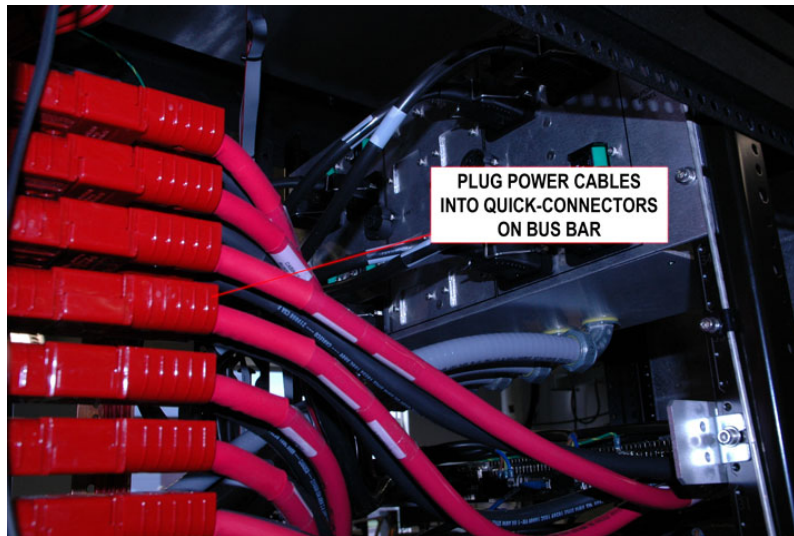


Figure 9: Power Cable Quick Connectors on Bus Bar

Power Supply Alarm Cable

A power supply alarm cable connects between the power supply chassis and each amplifier in the system. If multiple power supplies are used in the system, the RJ45 Out of the master power supply must be connected to the RJ45 In of the slave power supply.

PowerMAX systems use a power alarm combiner that makes it possible to monitor the alarm status of multiple power supply chassis. There are different power alarm combiners depending on the number of power supply chassis used in the system: two (5 to 8 power supply modules), three (9 to 12 modules) or four (13 to 16 modules).

In PowerMAX systems, a power supply alarm cable connects between the J1 40-pin connector of each power supply chassis and the 25-pin connector on the power alarm combiner module. A separate cable connects between the 9-pin connector on the power alarm combiner module and port J12 of each SSPA in the system.

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-2.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, Controller Card

Teledyne Paradise Datacom
Drawing Number: 216512-3 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-3.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Rear Panel Controller Card

The Rack Mount SSPA Controller card is a removable assembly located at the rear of the SSPA. The controller card includes connections for the Switch (J3), Serial Main (J4), Serial Local (J5), Service (J6), Parallel I/O (J7), Link (J8) and Ethernet (J9) ports.

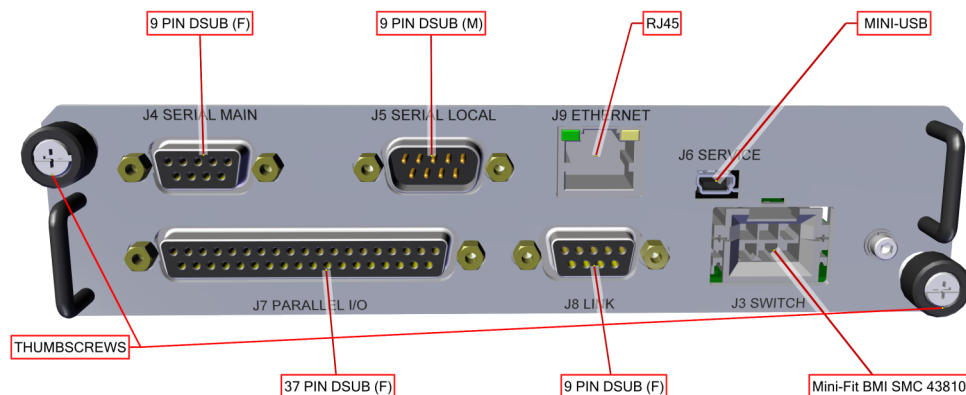


Figure 1: Controller Card Connections

The controller card may be removed and replaced in case of a board failure without taking the system offline. Replacement controller cards are available from the factory. See the Removing the Controller Card description of the **Maintenance and Troubleshooting** section.

Controller Card Connectors

Switch Port (J3) [6-pin BMI-type]

A 6-pin Molex connector header with blind insertion system guides (mates with Molex P/N 39-01-2060) is used in a redundant system to provide switching for the waveguide transfer switch (RF Switch). Table 1 shows the pin outs for the Switch Port (J3).

Table 1: Switch Port (J3) Pin-Outs

Pin	Description
1	+28V Switch Drive Output. 3 Amp over-current protection.
2	Switch 1 Position 2 Drive
3	Switch 1 Position 1 Drive
4	+28V Switch Drive Output. 3 Amp over-current protection.
5	Switch 2 Position 2 Drive
6	Switch 2 Position 1 Drive

See the description of the switch connector configurations for 1:1 systems in the **Internal 1:1 Redundant System Operation** section.

See the description of the switch connector configurations for 1:2 systems in the **Internal 1:2 Redundant System Operation** section.

Serial Main (J4) [DB9 (F)]

A DB9 female connector serves as primary remote control interface connector. The interface is re-configurable through the front panel or can be used as a RS-232 or RS-485 interface (2 or 4 wires). The RS-485 TX and RX pairs must be twisted for maximum transmission distance. A user-configurable 120-ohm termination resistor is provided on the same connector. Table 2 shows the Serial Main (J4) connector pin outs.

Table 2: Serial Main (Port J4) Pin-outs

Pin	Description
1	RS-485 TX+ (HPA Transmit +)
2	RS-485 TX- (HPA Transmit -)/RS-232 TX
3	RS-485 RX- (HPA Receive -)/RS-232 RX
4	RS-485 RX+ (HPA Receive +)
5	Ground
6	Service Request 1 Form-C Relay NC contact (Closed on HPA Summary Fault)
7	Service Request Common Form-C Relay common contact
8	Service Request 2 Form-C Relay NO contact (Open on HPA Summary Fault)
9	120 ohm termination (must be connected to Pin 4 to enable termination)

Serial Local (J5) [DB9 (M)]

This DB9 male connector is used in advanced system integration and for system debugging purposes. Leave unconnected unless specified otherwise.

Service Port (J6) [Mini USB Type B]

A 5-contact Mini USB connector is used to provide field flash re-programmability for the HPA controller card. In order to reload controller board firmware, connect this port to a PC Parallel port through straight through cable. See Firmware Upgrade Procedure in the **Maintenance and Troubleshooting** section.

Parallel I/O (J7) [DB37 (F)]

A DB37 female type connector, the Parallel I/O port contains a series of contact closures for monitoring HPA faults as well as opto-isolated inputs for controlling some HPA functions. Inputs react on the closure to ground. The minimal closure time is 50mS. See Table 3 for a description of the pin-outs for this connector.

Table 3: Parallel I/O (Port J7) Pin-outs

Pin	Function/Description
1	Closed on Power Supply Fault Form C relay NC
2	Open on Power Supply Fault Form C relay NO
20	Power Supply Fault Common
21	1. Standalone mode. Closed on Auxiliary Fault 2. 1:1 Redundancy Mode. Closed on Automatic switchover mode. Form C relay NC
22	1. Standalone Mode. Open on Auxiliary Fault 2. 1:1 Redundancy Mode. Closed on Manual switchover mode. Form C relay NO
3	Auxiliary Fault\Auto-Manual Common
4	Open on Mute. Form C Relay NC
5	Closed on Mute. Form C Relay NO
23	Mute Status Common
24	Closed on BUC Fault. Form C Relay NC
25	Open on BUC Fault. Form C Relay NO
6	BUC Fault Common
7	Closed on High Temperature Fault. Form C Relay NC
8	Open on High Temperature Fault. Form C Relay NO
26	High Temperature Fault Common
27	1. Standalone mode. Closed on Regulator Low Voltage Fault 2. 1:1 Redundancy Mode. Closed on HPA Standby. Form C relay NC
28	1. Standalone Mode. Open on Regulator Low Voltage Fault. 2. 1:1 Redundancy Mode. Closed on HPA Online Mode. Form C relay NO
9	Regulator Low Voltage Fault/Standby-Online Common
10	Closed on DC Current Low Fault. Form C Relay NC
11	Open on DC Current Low Fault. Form C Relay NO
29	DC Current Low Fault Common
30	Closed on Low Forward RF Fault. Form C Relay NC
31	Open on Low Forward RF Form C Relay NO
12	Low Forward RF Fault Common
16	Auto/Manual toggle input. 50mS Closure to isolated ground to activate
17	Mute/Unmute toggle input. 50mS Closure to isolated ground to activate
18	Auxiliary Fault & Auxiliary Mute Input. 50 ms min. response
35	HPA Standby input. 50mS Closure to isolated ground to activate
36	Local/Remote toggle. 50mS Closure to isolated ground to activate
37	Fault clear. 50mS Closure to isolated ground to activate
19	Isolated Signal Ground
15	+5V Isolated Power 20 mA
13, 32	+28V Auxiliary Power 1A
14, 33	Chassis Ground

Hardware Mute

There are three ways to mute the amplifier via hardware input:

1. A 50 ms closure to ground on Port J7, Pin 17 toggles Mute/Unmute states;

2. Press the Fault Setup button on the front panel; press the Aux Fault button; press the Action button; tick the Minor w. Mute checkbox. Press the Logic button; tick the Fault on Low checkbox. Once these settings are active, a continuous closure to ground on Port J7, Pin 18 will mute the amplifier.
3. Press the Fault Setup button on the front panel; press the Aux Fault button; press the Action button; tick the Minor w. Mute checkbox. Press the Logic button; tick the Fault on High checkbox. Once these settings are active, a continuous open to ground on Port J7, Pin 18 will mute the amplifier.

Link Port (J8) [DB9 (F)]

The 9-pin female connector J8 Link Port is used to link the SSPA with other amplifiers in a redundant system in order to pass online/standby status information between them. Leave unconnected unless specified otherwise.

Table 4 shows the pin outs of J8.

Table 4: Link Port (J8) Pin Outs

Pin	Function/Description
6, 7	Link Out (connect to "Link In" of Second SSPA)
8, 9	Link In (connect to "Link Out" of Second SSPA)
1, 2, 3, 4	Reserved, make no connection
5	Ground (Connect to same pin on Second SSPA)

See the description of the link cable configurations for 1:1 systems in the **Internal 1:1 Redundant System Operation** section.

See the description of the link cable configurations for 1:2 systems in the **Internal 1:2 Redundant System Operation** section.

Ethernet Port (J9) [RJ45]

This is a RJ45 connector with integrated magnetics and LEDs. This port becomes the primary remote control interface when the Interface is selected to "IPNet". This feature allows the user to connect the unit to a 10/100 Base-T network and have full-featured M&C functions through a web interface. See Table 5.

Table 5: Ethernet Port (J9) Pin Outs

Pin	Function/Description
1	TX+
2	TX-
3	RX+
6	RX-
4, 5, 7, 8	Ground

 **Note: IP address, Gateway address, Subnet mask, IP port and IP Lock address need to be properly selected prior to first use.**


LED lamps on the connector indicate network status. A steady Green light indicates a valid Ethernet link; a flashing Yellow LED indicates data transfer activity (on either the Transmit and Receive paths).

Controller Card DIP Switch Block, S1

The DigiCore5 controller card is equipped with a configuration DIP switch block, S1. This switch allows the adjustment of certain configuration parameters. See the **Maintenance and Troubleshooting** section for instructions on removing the controller card to access the DIP switch block, S1.

S1.1 - S1.6 - Factory use only; For non-touchscreen units, preset position is ON-ON-ON-OFF-OFF-OFF; For touchscreen units, preset position is ON-ON-ON-OFF-ON-OFF.

S1.7 - S1.8 - These settings allow Enable/Disable galvanic isolation of the Main serial port (J4). Factory preset for these ports is OFF-OFF. This configuration disconnects the serial main ground pin from the chassis ground. If unisolated main communications is required set both S1.7 and S1.8 to ON. If unisolated local communications is required set both S1.6 and S1.8 to ON.

 **Warning! Disabling galvanic ground isolation increases the risk of serial port electrical damage during a lightning strike, or under other ground potential difference issues. If galvanic isolation is disabled, Teledyne Paradise Datacom suggests connecting or disconnecting the wire harnesses to this port only when the equipment is powered down.**

Teledyne Paradise Datacom
Drawing Number 216512-3 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-3.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

SSPA Touchscreen Overview

Teledyne Paradise Datacom
Drawing Number: 216512-4 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-4.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

All indoor rack-mountable solid state power amplifiers are available with a front panel touchscreen, from which the user can control the amplifier, and obtain information about the operational status of the amplifier.

There are four main areas on the touchscreen display, as shown in Figure 1:

- (1) Menu
- (2) Fault Indicators
- (3) RF Signal Path Display
- (4) Action Buttons

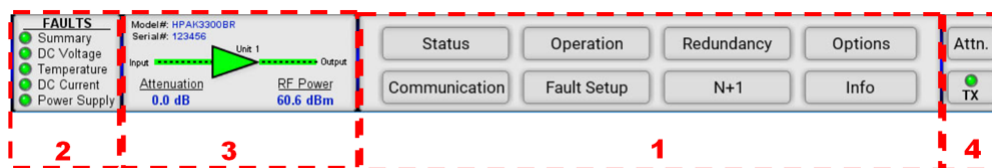


Figure 1: Main Areas of the Touchscreen Front Panel

Menu

This area is where all menu selections are made. See the **Touchscreen Menu Structure** section for a complete description of the menu selections.

Fault Indicators

Up to five fault indicators are shown in the left-most section of the touchscreen display. The Summary fault indicator is always displayed at the top. The user can select up to four other fault indicators to be displayed. See the Config Faults description in the **Touchscreen Menu Structure** section.

By default, in addition to the Summary fault indicator, the following fault indicators are shown:

- DC Voltage
- Temperature
- Forward RF
- Power Supply

If the fault indicator is green, it means there is no fault present for that fault parameter. If the fault indicator is flashing red, a fault exists for that fault parameter. If the fault indicator is yellow, a communication error with the module exists.

Depending on fault settings, the presence of certain types of faults will also trigger a Summary fault.

RF Signal Path Display

To the right of the fault indicators is the RF Signal Path Display. This section of the touchscreen includes the model number and serial number of the unit, the online status of the unit (when in a redundant configuration), the attenuation setting, and the RF output power. See Figure 2.

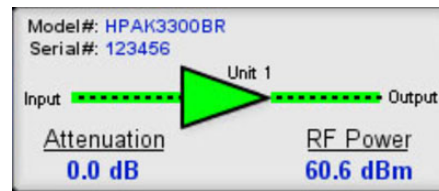


Figure 2: RF Signal Path Display, Standalone Unit

If the unit is configured as part of a system (redundant or phase combined) or configured with a maintenance switch, there is a secondary screen available.

Click on the indicator (as shown in Figure 3) at the top-right of the RF Signal Path Display screen to view the secondary MIMIC panel.

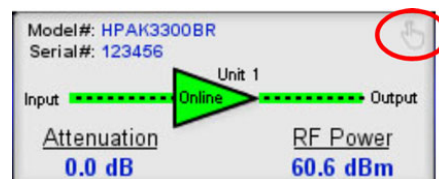


Figure 3: RF Signal Path Display, Unit Configured as Part of a System

The first time this indicator is selected (until a unit reset or power cycle), a warning message will appear: "This MIMIC panel will display the RF path only. It will not indicate Mute/Unmute or Fault State of any amplifier." See Figure 4. Click on the red 'X' in the upper right to close this message.




Figure 4: RF Signal Path Display, MIMIC Panel Warning Message

The resulting screen displays the selected system configuration, the RF path and switch positions, and the online state of the amplifier. Touch the indicator at the top-right of the screen to return to the RF Signal Path Display. See Figure 5.

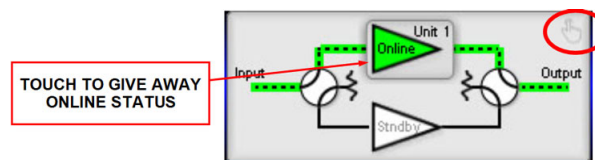


Figure 5: MIMIC Panel Display

The user can touch the outline of the online unit to give away its online status to the standby unit in the system. A confirmation window will appear. Touch the "OK" button to confirm the state change, or the "Cancel" button to cancel the action. See Figure 6.




Figure 6: Online State Change Confirmation Window

If the online state change was confirmed, the amplifier will display the "Standby" state, and the RF signal path and switch positions will change to show the RF signal path of the online amplifier. See Figure 7.

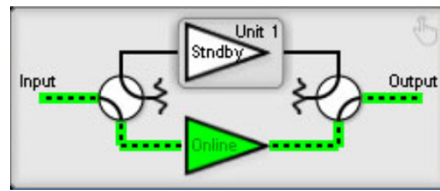


Figure 7: New RF Signal Path Display After Online State Change

Note that touching the outline of an amplifier displaying the "Standby" state will not do anything. Only an amplifier with the "Online" state can give away its online status.

Action Buttons

Up to two action buttons may appear to the far right of the touchscreen. These buttons are typically used to trigger common functions without having to navigate through the menu structure.

By default, the Attenuation button is on top, and the Mute button is on the bottom. See Figure 8. The button selection may be customized by the user. See the Config Buttons description in the **Touchscreen Menu Structure** section.



Figure 8: Action Buttons

Attenuation Button

Tapping the Attenuation button opens the attenuation setting screen. See Figure 9. The current attenuation setting is displayed in the green window. The user may adjust the ones place and the tenths place by touching the up and down arrows on the screen. The attenuation adjustment is immediately applied to the amplifier. Tap the OK button to accept the attenuation setting.



Figure 9: Action Button > Attenuation Setting

Mute (TX) Button

Tapping the Mute (TX) button results in a confirmation window (unless prompts are disabled in the **Options > Front Panel > Confirm Prompt** menu) to change the mute state of the amplifier. Tap the OK button to change the mute state or the Cancel button to keep the current mute state. See Figure 10.




Figure 10: Action Button > Mute Setting

If confirmation prompts are disabled, tapping the Mute button will toggle the mute state of the amplifier between muted and unmuted.

Standby State Button

Tapping the Standby State button results in a confirmation window (unless prompts are disabled in the **Options > Front Panel > Confirm Prompt** menu) to change the Online state of the amplifier to Standby. Tap the OK button to change the mute state to Standby or the Cancel button to keep the unit Online. See Figure 11.




Figure 11: Action Button > Standby Setting Confirmation

Note that only the Online amplifier can give away its online status. Tapping the Online button with the red indicator results in a warning screen. See Figure 12.




Figure 12: Action Button > Standby Warning

Switch Mode Button

Tapping the Switch Mode button results in a confirmation window (unless prompts are disabled in the **Options > Front Panel > Confirm Prompt** menu) to change the method of switch control to either Auto or Manual mode. A yellow indicator on the button shows which mode is currently active for the unit. Tap the OK button to change the switch control mode or the Cancel button. See Figure 13.




Figure 13: Action Button > Switch Mode Setting Confirmation

If confirmation prompts are disabled, tapping the Control Mode button will toggle the switch control mode between Auto and Manual.

Control Mode Button

Tapping the Control Mode button results in a confirmation window (unless prompts are disabled in the **Options > Front Panel > Confirm Prompt** menu) to change the control mode to either Local or Remote mode. A yellow indicator on the button shows which mode is currently active for the unit. Tap the OK button to change the control mode or the Cancel button. See Figure 14.




Figure 14: Action Button > Control Mode Setting Confirmation

If confirmation prompts are disabled, tapping the Switch Mode button will toggle the control mode between Local and Remote.

Note that when the unit is in Remote mode, the user will not be able to access any functions from the touchscreen except the Local/Remote Action button. A message on the display will indicate "Unit in Remote Mode". See Figure 15.




Figure 15: Display When in Remote Mode

Teledyne Paradise Datacom
Drawing Number 216512-4 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-4.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Touchscreen Menu Structure

Teledyne Paradise Datacom
Drawing Number: 216512-5 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-5.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Menu Structure

Figure 1 shows the front panel menu structure hierarchy.




Figure 1: Main Menu

There are eight main levels of menu selections:

- [Status](#)
- [Communication](#)
- [Operation](#)
- [Fault Setup](#)
- [Redundancy](#)
- [N+1](#)
- [Options](#)
- [Info](#)

The user should touch the button of interest to proceed to the next menu level. When navigating the menu, the user can touch the home icon to go back to the Main Menu at any time. There are also icons that may be used to go back to the previous screen.

Status Menu

Figure 2 shows the Status menu.



Figure 2: Status Menu

The Status menu includes the following buttons:

- [Fault Panel](#)
- [Fault Info](#)
- [RF/Temp.](#)
- [DC Power](#)
- [N+1](#) (not available if unit is not configured for N+1 operation)
- [Redundancy](#)
- [N+1 Alarms](#) (not available if unit is not configured for N+1 operation)
- [Custom Status](#)

Fault Panel

Figure 3 shows the Fault Panel.



Figure 3: Status > Fault Panel

The Fault Panel displays the fault status for various parameters monitored by the unit's controller. A green icon next to the unit condition title indicates a non-faulted state. A red icon next to the unit condition title indicates a faulted state. A yellow icon indicates a communication error. A black icon designates a condition not applicable to the unit.

Fault states for the following conditions are displayed: Summary fault, Module (1, 2, 3 and 4) faults, Standby state (where a red icon designates the unit in a redundant system is in the Standby state), Power Supply faults, DC Voltage fault, DC Current fault, fan fault, BUC fault, Temperature fault, Forward RF fault, Reflected RF fault, Auxiliary fault, RF switch (1 and 2) faults, Cabinet Fan fault, Pre Amp fault, and Fault Mute.

Fault Info

Figure 4 shows the Fault Info menu. This menu can be used for advanced fault analysis.




Figure 4: Status > Fault Info Menu

This menu displays the read-only values of the Fault Mute State (On or Off), the Fault Mute Cause, the Last Fault Cause and the number of N+1 PS Mod. Faults.

The Fault Mute State section displays whether the Fault Mute State is on or off. Any Summary Fault will turn on the Fault Mute State, as will any customizable fault set to a Major Fault with Mute state. See the **Fault Setup Menu** section for various fault settings that may affect the Fault Mute State.

The Fault Mute Cause section displays the cause of the last condition that triggered a fault mute state. If no cause exists, it will display None. Other conditions include: AuxFlt (Mute fault condition triggered by a detected Auxiliary fault); ExtM (Mute condition forced by external signal applied on the parallel port Mute input); BUCFlt (Mute fault condition caused by a detected BUC fault); PSFlt (The unit is forced to mute due to one or more failed N+1 power supply modules); N+1Flt (N+1 configuration forced unit into a mute state due to an internal summary fault condition);

The Last Fault Cause section displays the cause of the last condition that triggered a fault. The value is latched to the last fault occurrence. Use the Clear Fault function to reset. If no cause exists, it will display No Faults. Other values include: LowRF (Low RF level fault); AuxFlt (Auxiliary fault); BUCFlt (Block Up converter fault); PSFlt (Power Supply fault); ColdSt (Unit cold start power up detected); N+1Flt (N+1 System Fault); TmpFlt (High temperature fault); RegFlt (Voltage Regulator fault); CurFlt (Low DC Current fault); HiVSWR (High reflected RF level fault); Other (Unknown fault condition).

For amplifiers utilizing an external N+1 power supply, The N+1 PS Mod. Faults value indicates the number of detected N+1 PS module faults. For units with an internal power supply, this value reads 000 and should be ignored. Check PS1 and PS2 Voltage readings to assess the state of an internal power supply.

RF/Temp. Menu

Figure 5 shows the RF/Temp. menu.



Figure 5: Status > RF Temperature Menu

The read-only information displayed on this screen includes the Forward RF power (in dBm or Watts, depending on user preference), Reflected RF power (in dBm or Watts, depending on user preference, if the unit includes a reflected RF power detector), Record High RF power (in dBm only), Temperature (recorded at the RF module baseplate), Chassis Temperature (recorded at the control board); Record High Temp (recorded at the RF module baseplate), and the Cabinet Temperature (if the unit includes a temperature detector for the cabinet).

Note that each of those parameters, except the Record High RF power and Record High Temp, includes a link to a trendline graph that shows the history of that parameter since unit power-up or reset of the trendlines. Trendlines are turned on by default, but can be turned off. See the **Show Trends** section of the Options Menu.

Trendlines

Figure 6 shows an example of a trendline for Forward RF power.




Figure 6: Example, Trendline, Forward RF Power

The Y-axis at the left of the screen shows the range encompassing the maximum (top) and minimum (bottom) values of the currently displayed trendline. The total time of the trendline is displayed at the bottom right of the graph. The last plot value is shown at the top right of the graph.

The trendline shows up to the last approximately 670 points of the parameter being graphed. Any prior measurements are dropped off the graph, but minimum and maximum values are saved in the Real-time Statistics block.

The user may reset all trendlines by clicking on the Reset button at the bottom right of the screen. See the **Reset Trends** section of the Options Menu. To close the trendline, click on the red X at the top right of the screen.

DC Power Menu

Figure 7 shows the DC Power menu.



Figure 7: Status > DC Power Menu

This screen shows the read-only values of the power supply voltages, the boost voltages, the BUC power supply voltages and the total DC current consumption.

Power Supply 1 and Power Supply 2 display the output voltages with resolution of 0.1V. Normal output voltage for GaAs amplifiers is in the range of 11 V to 13 V; the voltage range for GaN amplifiers can be between 24 V and 50 V, depending on the particular SSPA module.

Fan/Switch Voltage 1 and Fan/Switch Voltage 2 show the output voltage with resolution of 0.1 V. Normal range is 24 V to 30 V (typical 28 V).

BUC Power Supply 1 and BUC Power Supply 2 represent the power supply voltage used for biasing an optional BUC unit. Voltage could be used for detecting problems related to BUC operation. The SSPA does not have a specific alarm threshold for this voltage. Normal reading for this parameter should be in range of 15 V to 16 V. For a unit equipped with a single power supply, BUC Power Supply 2 shows N/A.

Total DC Current displays the total DC current drawn by the RF modules from the main power supply. This value varies depending on the power level of the HPA. If the HPA is muted, current normally drops to within the 0 A to 5 A range.

Note that each of the parameters on this screen includes a link to a trendline graph that shows the history of that parameter since unit power-up or reset of the trendlines. See the **Trendlines** section of the Status Menu for more information.

N+1 Menu

Figure 8 shows the N+1 menu. This menu is only available in units configured for N+1 operation. Note that in place of Attenuation, the Master/Slave status is shown.




Figure 8: Status > N+1 Menu

This screen shows the read-only values of the System Forward RF power (in dBm or Watts, depending on RF unit selection), System Reflected RF power (in dBm or Watts, depending on RF unit selection, and if the system includes a reflected power detector), Auto Gain status, estimated N+1 System Gain, the unit's N+1 address, the unit's N+1 state, the total N+1 System current draw, and the N+1 System array size.

Note that the System Forward RF and Reflected RF power parameters on this screen includes a link to a trendline graph that shows the history of that parameter since unit power-up or reset of the trendlines. See the **Trendlines** section of the Status Menu for more information.

Redundancy Menu

Figure 9 shows the Redundancy menu.



Figure 9: Status > Redundancy Menu

This screen shows the read-only values of the System Mode, the unit Standby State (for units in system configurations), the system Switch Positions (if applicable), the unit's Switch Mode, Standby Mode, HPA Status and Priority Select (for 1:2 redundant systems).

N+1 Alarms Menu

Figure 10 shows the N+1 Alarms menu.




Figure 10: Status > N+1 Alarms Menu

This screen shows the read-only values of the number of N+1 System Faults, the number of Standby Amplifiers in the N+1 System, the N+1 Fault Cause, and the Last Failed Unit in the N+1 System.

Custom Status Menu

Figure 11 shows the default Custom Status menu message, which is displayed until the user selects parameters to be shown in this menu.




Figure 11: Status > Custom Status Default Menu

Figure 12 shows an example of a Custom Status menu, after the user has selected the parameters to be shown. See the **Config Status** section of the Options Menu for details on how to select up to eight (8) parameters to be displayed on this screen.




Figure 12: Status > Custom Status Menu (Custom Items Selected)

Note that depending on the parameters selected to be shown in the Custom Status menu, a link to a trendline graph that shows the history of that parameter since unit power-up or reset of the trendlines may be included. See the **Trendlines** section of the Status Menu for more information.

Communication Menu

Figure 13 shows the Communication menu.




Figure 13: Communication Menu

The Communication menu allows the user to select the parameters for communication between the SSPA and any remote monitor and control station.

These parameters include the following buttons:

- [Serial](#)
- [IP Setup](#)
- [SNMP Setup](#)
- [Trap Setup](#)
- [System Address](#)
- [Interface](#)

Serial Button

Pressing the Serial button opens the Serial menu, from which the user can select the Baud Rate and Serial Protocol used by the amplifier. See Figure 14.




Figure 14: Communication Menu

Baud Rate Menu

Pressing the Baud Rate button opens the Baud Rate menu. The user may select from the available baud rates. Default baud rate is 9600. See Figure 15.




Figure 15: Communication > Baud Rate Menu

Serial Protocol Menu

Pressing the Serial Protocol button opens the Serial Protocol menu. The user may select either Normal or Terminal communication protocol. See Figure 16.




Figure 16: Communication > Serial Protocol Menu

IP Setup Button

Pressing the IP Setup button opens the IP Setup menu, from which the user can select the IP address and parameters used by the amplifier. See Figure 17.




Figure 17: Communication > IP Setup Menu

IP Address

Pressing the IP Address button opens the IP Address menu, from which the user can enter the IP Address for the amplifier. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch each section to enter the values for that octet. Default IP Address is 192.168.0.9. See Figure 18.




Figure 18: Communication > IP Setup > IP Address Selection

Note: Teledyne Paradise Datacom products use IPv4, Class C addressing.

Subnet Mask

Pressing the Subnet Mask button opens the Subnet Mask menu, from which the user can enter the Subnet Mask for the amplifier. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch each section to enter the values for that octet. Default Subnet Mask is 255.255.255.0. See Figure 19.




Figure 19: Communication > IP Setup > Subnet Mask Selection

Gateway

Pressing the Gateway button opens the Gateway menu, from which the user can enter the Gateway for the amplifier. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch each section to enter the values for that octet. Default Gateway is 192.168.0.1. See Figure 20.




Figure 20: Communication > IP Setup > Gateway Selection

Local Port

Pressing the Local Port button opens the Local Port menu, from which the user can enter the Local Port for the amplifier. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Default Local Port is 1007. See Figure 21.




Figure 21: Communication > IP Setup > Local Port Selection

Lock IP

Pressing the Lock IP button opens the Lock IP menu, from which the user can enter the IP address from which requests will be accepted by the amplifier. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch each section to enter the values for that octet. See Figure 22. Default Lock IP address is 255.255.255.255.




Figure 22: Communication > IP Setup > Lock IP Selection

The LockIP selection gives the user the ability to increase the security measure for the IPNet protocol. The SSPA will answer a request which comes only from the assigned IP address. For firmware prior to version 6.00, set this address value to 0.0.0.0 or 255.255.255.255 to disable this feature.

Starting with version 6.00, the Lock IP address function has been updated to allow "Binding" and "Masking" functions. "Binding" means that the first datagram retrieved for this socket will bind to the source IP address and port number. Once binding has been completed, the SSPA will answer to the bound IP source until the unit is restarted or reset. Without binding, the socket accepts datagrams from all source IP addresses.

Address 0.0.0.0 allows all peers, but provides binding to first detected IP source; Address 255.255.255.255 accepts all peers, without binding. If Lock IP is a multicast address, then the amplifier will accept queries sent from any IP address of multicast group.

MAC Address

Pressing the MAC Address button opens the read-only MAC Address display. See Figure 23.



Figure 23: Communication > IP Setup > MAC Address Display

Web Password

Pressing the Web Password button opens the Web Password menu, from which the user can enter the web password which is requested when the user attempts to communicate with the amplifier over IPNet using a web browser. Use the alpha-numeric keypad on the screen to enter the value for the web password. When the alphabetic keypad is displayed, touch the "#" symbol to switch to the numeric keypad. When the numeric keypad is displayed, touch the "A" to switch to the alphabetic keypad. Touch the "OK" button to confirm the entered password and return to the IP Setup Menu. Maximum password length is 20 characters. Erase all characters to disable password protection. Default Web Password is paradise. See Figure 24.




Figure 24: Communication > IP Setup > Web Password Selection

SNMP Setup Button

Pressing the SNMP Setup button opens the SNMP Setup menu, from which the user can select the Community Get and Community Set passwords, and review the User Info. See Figure 25.




Figure 25: Communication > SNMP Setup Menu

Community Get

Pressing the Community Get button opens the Community Get menu, from which the user can enter the Community Get password which is requested when the user attempts to communicate with the amplifier over IPNET using SNMP. Use the alpha-numeric keypad on the screen to enter the value for the web password. When the alphabetic keypad is displayed, touch the "#" symbol to switch to the numeric keypad. When the numeric keypad is displayed, touch the "A" to switch to the alphabetic keypad. Touch the "OK" button to confirm the entered password and return to the IP Setup Menu. Maximum password length is 20 characters. Erase all characters to disable password protection. See Figure 26. Default Community Get password is public.



Figure 26: Communication > SNMP Setup > Community Get Selection

Community Set

Pressing the Community Set button opens the Community Set menu, from which the user can enter the Community Set password which is requested when the user attempts to communicate with the amplifier over IPNET using SNMP. Use the alpha-numeric keypad on the screen to enter the value for the web password. When the alphabetic keypad is displayed, touch the "#" symbol to switch to the numeric keypad. When the numeric keypad is displayed, touch the "A" to switch to the alphabetic keypad. Touch the "OK" button to confirm the entered password and return to the IP Setup Menu. Maximum password length is 20 characters. Erase all characters to disable password protection. See Figure 27. Default Community Set password is private.



Figure 27: Communication > SNMP Setup > Community Set Selection

User Info

Pressing the User Info button opens the User Info display screen. See Figure 28.




Figure 28: Communication > SNMP Setup > User Info Display

This screen is reserved for future development.

Trap Setup Button

Pressing the Trap Setup button opens the Trap Setup menu, from which the user can set the various SNMP trap parameters, and assign the Network Management System (NMS) IP address which will receive the trap notifications. See Figure 29.



Figure 29: Communication > Trap Setup Menu

Send FLT Trap

Pressing the Send FLT Trap button opens the Send FLT Trap menu, from which the user can set the Send FLT Trap parameter. The value entered equals the number of attempts the unit will make to send all fault information to the assigned NMS IP address. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Entering "0" disables this feature. Touch the "OK" button to set the entered value. See Figure 30.




Figure 30: Communication > Trap Setup > Send FLT Trap Selection

Send Cond. Trap

Pressing the Send Cond. Trap button opens the Send Cond. Trap menu, from which the user can set the Send Cond. Trap parameter. The value entered equals the number of attempts the unit will make to send the selected condition information to the assigned NMS IP address. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Entering "0" disables this feature. Touch the "OK" button to set the entered value. See Figure 31.




Figure 31: Communication > Trap Setup > Send Condition Trap Selection

Condition Trap

Pressing the Condition Trap button opens the Condition Trap menu, from which the user can select the amplifier condition that will be monitored and trigger a trap notification if it falls outside the upper and lower limits defined by the user. See Figure 32.



Figure 32: Communication > Trap Setup > Condition Trap Selection

Trap Subset

Pressing the Trap Subset button opens the Trap Subset menu, from which the user can set the Trap Subset parameter. This parameter is required when the trap condition selected has multiple sources, such as multiple power supplies in a unit. The value entered corresponds to the condition source selected. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 33.




Figure 33: Communication > Trap Setup > Trap Subset Selection

Trap Lower Limit

Pressing the Trap Lower Limit button opens the Trap Lower Limit menu, from which the user can set the lower limit of the selected condition being monitored. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 34.




Figure 34: Communication > Trap Setup > Trap Lower Limit Selection

Trap Upper Limit

Pressing the Trap Upper Limit button opens the Trap Upper Limit menu, from which the user can set the upper limit of the defined condition being monitored. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 35.




Figure 35: Communication > Trap Setup > Trap Upper Limit Selection

TrapNMSIP

Pressing the Trap Setup button opens the Trap Setup menu, from which the user can assign the Network Management System IP address which will receive the trap notifications. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch each section to enter the values for that octet. Touch the "OK" button to set the selected address. The default address is 192.168.0.9. See Figure 36.




Figure 36: Communication > Trap Setup > Trap NMS IP Selection

System Address Button

Pressing the System Address button opens the System Address menu, from which the user can set the network address of the amplifier if used on a RS-485 network. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Valid values are 1 through 255. The factory default address is 0. Touch the "OK" button to set the selected address. See Figure 37.




Figure 37: Communication > System Address Selection

Note: Changes in serial communication settings from the front panel are effective immediately. Changes to these parameters from serial interface require that the unit be reset in order to take effect. The units can be reset either by cycling power to the unit or by issuing a reset command from the front panel.

Interface Button

Pressing the Interface button opens the Interface Menu. The user may select between RS232, RS485, IPNet (Ethernet) or SNMP communication. See Figure 38.




Figure 38: Communication > Interface Menu

Operation Menu

Figure 39 shows the Operation menu.



Figure 39: Operation Menu

The Operation menu allows the user to select the operational parameters for the amplifier. These parameters include the following buttons:

- Attenuation
- Mute
- Buzzer
- RF Units
- Control
- Fan Speed

Attenuation Button

Pressing the Attenuation button opens the Attenuation menu, from which the user can select the amount of attenuation (in dB) that should be applied to the gain of the amplifier. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 40.




Figure 40: Operation > Attenuation Selection

Enter a value between 0 and 20.0 dB. If Auto Gain is enabled, the system will reserve 5 dB of attenuator range for gain compensation and attenuation is limited to a value between 0 and 15.0 dB.

Mute Button

Pressing the Mute button opens the Mute menu, from which the user can select the Mute state of the amplifier. The current Mute state is checked. See Figure 41.




Figure 41: Operation > Mute Menu

Buzzer Button

Pressing the Buzzer button opens the Buzzer menu, from which the user can enable or disable the buzzer alarm that is triggered whenever a fault condition occurs. The current Buzzer state is checked. See Figure 42.




Figure 42: Operation > Buzzer Menu

RF Units Button

Pressing the RF Units button opens the RF Units menu, from which the user can select the type of unit displayed on the touchscreen. Values are dBm and Watt. The current unit type selected is checked. See Figure 43.




Figure 43: Operation > RF Units Menu

Control Button

Pressing the Control button opens the Control menu, from which the user can select either Local or Remote control of the unit. The current selection is checked. See Figure 44.




Figure 44: Operation > Control Menu

Note that when the unit is in Remote mode, the user will not be able to access any functions from the touchscreen except the Local/Remote Action button. A message on the display will indicate "Unit in Remote Mode". See Figure 45.




Figure 45: Operation Menu

Fan Speed Button

Pressing the Fan Speed button opens the Fan Speed menu, from which the user can select the speed that the unit's fans spin. The current selection is checked. See Figure 46.




Figure 46: Operation > Fan Speed Menu

Selecting the Low setting forces the fans to spin at the lowest speed. Air velocity will remain at the same level regardless of other operation parameters.

Warning! Running the fans at the Low setting while the amplifier is operating at its saturated power level may cause the internal module plate temperature to increase to dangerous levels. Monitor the temperature from the front panel and switch to a faster fan setting if the temperature increases.

Selecting the High setting forces the fans to spin at the highest speed. Air velocity will remain at the same level regardless of other operation parameters.

Selecting the Auto setting allows the amplifier to monitor the internal module plate temperature and adjust the power to the fans if the temperature rises (fans draw more power) or falls (fans draw less power) outside a preset temperature threshold. If the module plate temperature remains below 50 C, the fan speed will be set to minimum. If the registered module plate temperature is above 50 C, unit will gradually increase the fan speed. Fan speed will reach maximum at a plate temperature of 65 C.

Fault Setup Menu

Figure 47 shows the Fault Setup menu.




Figure 47: Fault Setup Menu

The Fault Setup menu allows the user to select the operational parameters for the amplifier. These parameters include the following buttons:

- BUC Fault
- Aux (Auxiliary) Fault
- Fwd RF/ALC (Automatic Level Control)
- Refl. RF Fault
- RF Switch Fault
- Fault Latch

BUC Fault Button

Pressing the BUC Fault button opens the BUC Fault menu, from which the user can select the action and logic type that any BUC faults would trigger. See Figure 48.




Figure 48: Fault Setup > BUC Fault Menu

Action

Pressing the Action button opens the Action menu, from which the user can select what type of fault action a BUC fault would trigger. The current selection is checked. See Figure 49.




Figure 49: Fault Setup > BUC Fault > Actions Menu

If Disable is selected, no action will be taken by the unit if a BUC fault occurs. This is the default setting for units without an internal BUC.

If Major Fault is selected, in the event of a BUC fault, the unit will exhibit a Summary fault, as well as a BUC fault indicator.

If Minor Fault is selected, in the event of a BUC fault, the unit will only trigger the illumination of the BUC fault indicator.

If Major w. Mute is selected, a BUC fault will trigger a Summary fault, as well as illuminate the BUC fault indicator, and will mute the amplifier. This is the default setting for units which include an internal BUC.

Logic

Pressing the Logic button opens the Logic menu, from which the user can select the logical state necessary to trigger a BUC fault. See Figure 50.




Figure 50: Fault Setup > BUC Fault > Logic Menu

Fault on High is the default setting, where faults are triggered by a high impedance state.

If Fault on Low is selected, faults are triggered by a low impedance state.

Aux Fault Button

Pressing the Aux Fault button opens the Aux Fault menu, from which the user can select the action and logic type that any Auxiliary faults would trigger. See Figure 51.




Figure 51: Fault Setup > Auxiliary Fault Menu

Action

Pressing the Action button opens the Action menu, from which the user can select what type of fault action an Auxiliary fault would trigger. The current selection is checked. See Figure 52.



Figure 52: Fault Setup > Auxiliary Fault > Actions Menu

If Disable is selected, no action will be taken by the unit if an Auxiliary fault occurs.

If Major Fault is selected, in the event of an Auxiliary fault, the unit will exhibit a Summary fault, as well as an Auxiliary fault indicator.

If Minor Fault is selected, in the event of an Auxiliary fault, the unit will only trigger the illumination of the Auxiliary fault indicator.

If Major w. Mute is selected, in the event of an Auxiliary fault, the unit will exhibit a Summary fault, as well as an Auxiliary fault indicator, and the amplifier is placed in a mute state.

If Minor w. Mute is selected, in the event of an Auxiliary fault, the unit will only trigger the illumination of the Auxiliary fault indicator, and the amplifier is placed in a mute state.

Logic

Pressing the Logic button opens the Logic menu, from which the user can select the logical state necessary to trigger an Auxiliary fault. See Figure 53.




Figure 53: Fault Setup > Auxiliary Fault > Logic Menu

Fault on High is the default setting, where faults are triggered by a high impedance state.

If Fault on Low is selected, faults are triggered by a low impedance state.

Fwd RF/ALC Button

Pressing the Fwd RF/ALC button opens the Fwd RF/ALC menu, from which the user can set the action to be taken for any Forward RF condition that would result in a fault, and set the level at which that action is triggered. See Figure 54.



Figure 54: Fault Setup > Fwd RF/ALC Menu

Action

Pressing the Action button opens the Action menu, from which the user can select whether a Low or High Forward RF power condition triggers a fault or, alternately, sets the unit in Automatic Level Control mode. The current selection is checked. See Figure 55.



Figure 55: Fault Setup > Fwd RF/ALC > Action Menu

Selecting Disable disables the Forward RF Fault Alarm function, as well as the Automatic Level Control function. Selecting this item also unlatches any Forward RF fault conditions.

If LowRFMajor is selected, in the event that the Forward RF power falls below the defined level, a Summary fault is triggered, as well as a Forward RF fault.

If LowRFMinor is selected, if the Forward RF power falls below the defined level, a Forward RF fault is triggered.

If ALC is selected, the Automatic Level Control function will take control of the amplifier's attenuation settings to maintain the desired RF output power level and will not allow any attenuation adjustments via the front panel. The ALC circuit will have the greatest ability to adjust for positive and negative RF input level changes when the amplifier's gain level is typically 65 dB.

The ALC function has the ability to accurately control the RF output power over a 15 dB range from saturated power. The ALC will operate over a 20 dB range, but the accuracy of the last 5 dB will suffer. For example, if the saturated power from the amplifier is 59 dBm, the lowest accurate power setting during ALC control is 44 dBm. If the output power set point is set outside the operational range of the ALC circuit, the ALC will adjust the output power to the lowest possible level and set a minor fault on the amplifier's front panel.

Note: Automatic Level Control is inactive when the system is in N+1 operation.

When HighRFMajor is selected, if the Forward RF power rises above the defined level, a Summary fault is triggered, as well as a Forward RF fault alarm.

When HighRFMinor is selected, if the Forward RF power rises above the defined level, a Forward RF fault alarm is triggered.

When HighRFMinor is selected, in the event that the Forward RF power rises above the defined level, a Summary fault is triggered, as well as a Forward RF fault alarm, and the amplifier is placed in a mute state. To avoid output oscillations between the Mute and Unmute states, this fault condition will latch itself and will not self-clear without operator intervention.

Level

Pressing the Level button opens the Level menu, from which the user can define the threshold that will be used to trigger a High or Low RF fault condition or, in the case of ALC, the desired output power level to be maintained. Use the numbered keypad on the screen to enter the value for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 56.




Figure 56: Fault Setup > Fwd RF/ALC > Level Selection

Refl. RF Fault Button

Pressing the Refl. RF Fault button opens the Reflected RF Fault menu, from which the user can set the action to be taken for any Reflected RF condition that would result in a fault, and set the level at which that action is triggered. See Figure 57.



Figure 57: Fault Setup > Refl. RF Fault Menu

Action

Pressing the Action button opens the Action menu, from which the user can select what type of fault action a Reflected RF fault would trigger. The current selection is checked. See Figure 58.




Figure 58: Fault Setup > Refl. RF > Action Menu

Selecting Disable disables the Reflected RF fault alarm function. Selecting this item also unlatches any Reflected RF fault conditions.

If Major Fault is selected, in the event that the Reflected RF power meets or exceeds the defined level, a Summary fault is triggered, as well as a Reflected RF fault.

If Minor Fault is selected, if the Reflected RF power meets or exceeds the defined level, a Reflected RF fault is triggered.

Level

Pressing the Level button opens the Level menu, from which the user can assign the value at which a Reflected RF fault will be triggered. Use the numbered keypad on the screen to enter the value for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 59.




Figure 59: Fault Setup > Refl. RF > Level Selection

RF Switch Fault Button

Pressing the RF Switch Fault button opens the RF Switch Fault menu, from which the user can select the action to be taken in the event of an RF Switch fault. The current selection is checked. See Figure 60.




Figure 60: Fault Setup > RF Switch Fault Menu

Selecting Disable disables the RF Switch fault alarm function. Selecting this item also unlatches any RF Switch fault conditions.

If Major Fault is selected, in the event of an RF Switch fault, a Summary fault is triggered, as well as an RF Switch fault alarm.

If Minor Fault is selected, in the event of an RF Switch fault, an RF Switch fault alarm is triggered.

If Mute on Switch is selected, any change in the position of a switch in the RF path of the amplifier will cause the amplifier to be placed in a mute state until the switch position change is completed. This function helps to prevent arcing in the waveguide.

Fault Latch Button

Pressing the Fault Latch button opens the Fault Latch menu, from which the user can enable or disable the Fault Latch function. A latched alarm will remain indicated on the front panel until the operator clears the alarm. Unlatched alarms will allow the summary alarm indicator to stop displaying the alarm condition if the circumstance creating the alarm has been cleared or corrected. The current selection is checked. Default setting is Disable. See Figure 61.




Figure 61: Fault Setup > Fault Latch Menu

Note: When the fault latch feature is enabled, a Clear faults button will appear on the Status > Fault Panel screen. See Figure 62. This button performs the same function as described in the Reset section of the Options Menu.



Figure 62: Status > Fault Panel > Clear Faults Button

Redundancy Menu

Figure 63 shows the Redundancy menu.



Figure 63: Redundancy Menu

The Redundancy menu allows the user to select the redundancy settings for the amplifier. These parameters include the following buttons:

- System Mode
- Switch Mode
- Standby Mode
- HPA Status
- Priority Select (applies to 1:2 systems only)
- Standby Select
- Input Type (active for 1:1 systems only)

System Mode Button

Pressing the System Mode button opens the System Mode menu, from which the user can select the type of system into which the amplifier will be configured. The current selection is checked. See Figure 64.




Figure 64: Redundancy > System Mode Menu

Standalone -- Select this option for standalone amplifier applications, or whenever the unit is configured in a system which includes a redundant system controller. All RF waveguide switch controls are disabled in this mode.

1:1 Mode -- Select this option for internal 1:1 redundant configurations. For proper function, a second amplifier is required and also needs to be configured for the same operation mode. Other settings will need to be selected. When this mode is selected, click on the icon in the top right of the RF Signal Path screen to switch to a 1:1 Redundant System Mimic Panel view of the system configuration. See the **Internal 1:1 Redundant System Operation** section.

1:2 Mode -- This setting is used for internal 1:2 redundancy operation. Two additional amplifiers are required, which need to be configured in the same operational mode. When this mode is selected, click on the icon in the top right of the RF Signal Path screen to switch to a 1:2 Redundant System Mimic Panel view of the system configuration. See the **Internal 1:2 Redundant System Operation** section.

1:1 Ph. Comb. -- This setting is used for hybrid 1:1 phase combined system operation. The use of N+1 controls in conjunction with this setting is highly recommended. When this mode is selected, click on the icon in the top right of the RF Signal Path screen to switch to a 1:1 Phase Combined System Mimic Panel view of the system configuration. **Internal 1:1 Phase Combined mode is currently not supported.**

1:2 Ph. Comb. -- This mode is similar to 1:2 mode, but is used to combine two amplifier outputs, rather than supplying a signal for two separate polarizations. The use of N+1 controls in conjunction with this setting is highly recommended. When this mode is selected, click on the icon in the top right of the RF Signal Path screen to switch to a 1:2 Phase Combined System Mimic Panel view of the system configuration. **Internal 1:2 Phase Combined mode is currently not supported.**

Maint. Switch -- This SSPA mode allows the control of a maintenance switch connected to the output of single amplifier. This is not a redundant system operation mode. The switch is used to direct the RF output of the amplifier to either an antenna or a dummy load. When this mode is selected, click on the icon in the top right of the RF Signal Path screen to switch to a Maintenance Switch Mimic Panel view of the system configuration.

Switch Mode Button

Pressing the Switch Mode button opens the Switch Mode menu, from which the user can select how the system's switch functions will be triggered. The current selection is checked. See Figure 65.




Figure 65: Redundancy > Switch Mode Menu

Auto -- This mode provides automatic detection of an amplifier fault and switchover to the operational amplifier in the system. The system is also protected from operator errors; selecting a faulted SSPA is not allowed.

Manual -- In this mode, the operator can select the online and standby amplifiers by pressing the "Unit#" key in the Mimic Panel screen. Note that only the online amplifier can give away its online status. The system will not provide automatic switchover from a faulted unit, but rather will keep the selected unit online, regardless of its state. In Manual mode, the standby amplifier will always accept the online state regardless of its own fault status.

If Switch Lock is selected, the switches are locked into the position based on the system type. For 1:1 redundant systems, the switch is set to keep Unit 1 online by default. For 1:1 phase combined systems, the switch is set to keep both Unit 1 and Unit 2 phase combined by default. For 1:2 redundant systems, the default is to keep Unit 1 online on Polarity 1 and Unit 3 online on Polarity 2. For 1:2 phase combined systems, the switch is set to keep Unit 1 and Unit 3 phase combined by default.

Standby Mode Button

Pressing the Standby Mode button opens the Standby Mode menu, from which the user can select either Hot or Cold Standby Mode. The current selection is checked. See Figure 66.



Figure 66: Redundancy > Standby Mode Menu

Hot Standby -- In this mode, when the amplifier is in standby mode, it is transmitting its signal to the dummy load. If the standby amplifier is switched to the online state, full output power is immediately available.

Cold Standby -- In this mode, when the amplifier is in standby mode, it is muted. If the standby amplifier is switched to the online state, it will unmute and will take several moments to achieve full output power.

Warning! It is advised that when operating in Hot Standby mode, that the Switch Mute function is enabled. See the RF Switch Fault Button section.

HPA Status Button

Pressing the HPA Status button opens the HPA Status menu, from which the user can assign the identity of the amplifier in a redundant or phase combined system. In 1:1 and 1:2 redundant systems, HPA2 is typically the standby amplifier. The current selection is checked. See Figure 67.




Figure 67: Redundancy > HPA Status Menu

Priority Select Button

Pressing the Priority Select button opens the Priority Select menu. For use in 1:2 redundant systems. The user may select Pol1 (Polarity 1) or Pol2 (Polarity 2). If the online amplifiers for Polarity 1 and Polarity 2 simultaneously enter a faulted state, the standby amplifier will switch to the selected polarity. The current selection is checked. See Figure 68.




Figure 68: Redundancy > Priority Select Menu

Standby Select Button

Pressing the Standby Select button opens the Standby Select menu, from which the user can assign the online/standby status for the amplifier. The current selection is checked. See Figure 69.




Figure 69: Redundancy > Standby Select Menu

Selecting Standby will place the amplifier in a redundant system configuration in the standby state. If there is another non-faulted amplifier in the redundant system, it will be switched to the online state.

Selecting Online will place the amplifier in a redundant system configuration in the online state. If there is another non-faulted amplifier in the redundant system, it will be switched to the standby state.

Input Type Button

Pressing the Input Type button opens the Input Type menu, from which the user can select either Input Switching or Input Splitting when the amplifier is configured in 1:1 Redundant mode. The current selection is checked. See Figure 70.




Figure 70: Redundancy > Input Type Menu

Figure 71 shows the Mimic Panel with a 1:1 system using input switching (top) and input splitting (bottom).

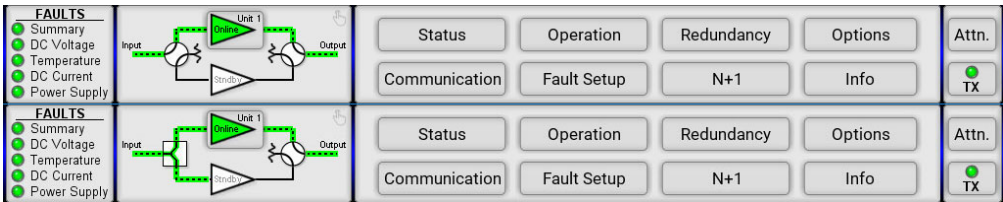


Figure 71: Mimic Panels Showing Input Switching (top) and Input Splitting (bottom)

N+1 Menu

Figure 72 shows the N+1 menu.




Figure 72: N+1 Menu

The N+1 menu allows the user to set the N+1 system array size, addressing, communication settings and Auto Gain settings, as well as select a module in a multi-module amplifier that will be removed or re-installed for maintenance purposes.

- [Array Size](#)
- [N+1 Address](#)
- [Auto Gain](#)
- [N+1 Comms](#)
- [Mod. Eject](#)

Array Size Button

Pressing the Array Size button opens the Array Size menu, from which the user can select the type of N+1 system into which the amplifier is being configured, or disables N+1 operation for this unit. The current selection is checked. See Figure 73.




Figure 73: N+1 > Array Size Menu

Units connected to a N+1 system must have an identical N+1 array selection or have N+1 operation disabled. A unit connected to a N+1 link cable with the N+1 option disabled will not be controlled by a N+1 Master. To the Master unit, it will appear as a faulted chassis.

N+1 Address Button

Pressing the N+1 Address button opens the N+1 Address menu, from which the user may assign the amplifier's N+1 priority address. All amplifiers in a N+1 array must have a unique address, and all addresses must be contiguous. Enter the value in the highlighted field and press the OK button to set that value. See Figure 74.




Figure 74: ImageOutline

The non-faulted unit with the lowest N+1 address has the highest priority when the system selects a new Master unit in the event of the failure of the assigned Master unit. A unit with N+1 Address 1 will be the default Master unit. If the unit with N+1 Address 1 fails, the unit with N+1 Address 2 will take its place as the Master unit.

Auto Gain Button

Pressing the Auto Gain button opens the Auto Gain menu, from which the user can enable or disable the N+1 Automatic Gain adjustment functions. See Figure 75.




Figure 75: ImageOutline

AutoGain Off -- When Auto Gain is disabled, the system can be adjusted as if it was a single SSPA unit, attenuating system gain between 0 and 20 dBm. System gain will not apply automatic gain compensation if any of the units in the N+1 redundancy array fails. When this option is disabled, the N+1 Master unit default System Information screen will display System Gain. See Figure 76.



Figure 76: N+1 > Auto Gain Off > N+1 Master Screen

AutoGain On -- When Auto Gain is enabled, the system will automatically increase its gain to compensate for a failed module. The system will keep 5 dB of gain in reserve, thus allowing only 15 dB of system gain adjustment. When this option (or any of the other options below) is enabled, the N+1 Master unit screen will display Auto Gain. See Figure 77.



Figure 77: N+1 > Auto Gain On > N+1 Master Screen

Keep Alive -- The Keep Alive setting disables the automatic mute function when a module enters a fault condition. This option may be beneficial in systems where the N+1 option is used only as a convenient single point of control, rather than as a redundancy control measure. Consult the factory on the use of this option.

Flex Gain -- Flex Gain is a form of automatic gain control for N+1 systems. This control option has the same basic operation principles as the standard Auto Gain option except that the gain reserves and amount of gain compensation differ. This setting is designed to serve the special gain compensation needs of hybrid PowerMAX SSPA systems. When Flex Gain mode is enabled, the Master unit of the PowerMAX system automatically reserves a predetermined amount of attenuation to each amplifier in the system and reduces overall system gain. In case of one or more amplifier unit failures, the system will return a certain amount of reserved gain in order to compensate system gain degradation from the failed unit(s). In the case of hybrid 4- and 2-way modes, the Master unit monitors the amplifiers placed in standby mode and provides the proper amount of gain compensation for these system configurations. Consult the factory on the use of this option.

Outdoor PMAX -- This setting should be used for all 8-module or 16-module Outdoor PowerMAX systems. Under this setting, should the secondary controller fail, the primary controller will handle any attenuation adjustments and mute status changes for the units normally controlled by the secondary controller.

N+1 Comms Button

Pressing the N+1 Comms button opens the N+1 Comms menu, from which the user can assign various communication settings for N+1 operation. See Figure 78.



Figure 78: N+1 > N+1 Comms Menu

Floating Master

Pressing the Floating Master button opens the Floating Master menu, from which the user can enable or disable the N+1 Floating Master feature. The current selection is checked. See Figure 79.




Figure 79: N+1 > N+1 Comms > Floating Master Menu

This feature allows having a single point of control for an N+1 system Master Module. When enabled, this mode will switch the N+1 Master Module serial and IP address to a dedicated floating Master IP and serial address. Without this function, a faulted Master Module in an N+1 system delegates its control privileges to another unit, which has a different serial and IP address.

Master Ser. Addr.

Pressing the Master Ser. Addr. button opens the Master Ser. Addr. menu, from which the user can enter the serial address for the N+1 Master Unit. Enter the value in the highlighted field and press the OK button to set that value. See Figure 80.




Figure 80: N+1 > N+1 Comms > Master Serial Address Selection

Master IP

Pressing the Master IP button opens the Master IP menu, from which the user can enter the IP address for the N+1 Master Unit. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch each section to enter the values for that octet. Touch the "OK" button to set the selected address. See Figure 81.




Figure 81: N+1 > N+1 Comms > Master IP Selection

Mod. Eject Button

Pressing the Mod. Eject button opens the Module Eject menu, from which the user can eject a module (Eject Module) in a multi-module configuration for removal and replacement, or clear the ejection of a module (Clear Eject). See Figure 82.




Figure 82: N+1 > N+1 Comms > Module Eject Menu

Eject Module

Pressing the Eject Module button opens the Eject Module menu. Press the button for the module which will be removed (Module 1 through Module 4, or PreAmp). See Figure 83.




Figure 83: N+1 > N+1 Comms > Eject Module Menu

A confirmation window will appear after a button is selected and pressed. Press the OK button to confirm, or the Cancel button to cancel the action. See Figure 84.




Figure 84: N+1 > N+1 Comms > Eject Module Confirmation

Clear Eject

Pressing the Clear Eject button opens the Clear Eject menu. Press the button for the module (Module 1 through Module 4, or PreAmp) which will resume operation in the unit. See Figure 85.




Figure 85: N+1 > N+1 Comms > Clear Eject Menu

A confirmation window will appear after a button is selected and pressed. Press the OK button to confirm, or the Cancel button to cancel the action. See Figure 86.




Figure 86: N+1 > N+1 Comms > Clear Eject Confirmation

Options Menu

Figure 87 shows the Options menu.



Figure 87: Options Menu

The Options menu allows the user to select the System backup and restore utilities, Front Panel configuration options, Menu Lock options, and Trends configurations.

- [System](#)
- [Front Panel](#)
- [Menu Lock](#)
- [Config Trends](#)

System Button

Pressing the System button opens the System menu, from which the user can choose to backup settings, restore settings from a saved backup, reset the unit, or select the memory mode used by the unit's EEPROM. See Figure 88.




Figure 88: Options > System Menu

Backup

Pressing the Backup button opens the Backup menu, which allows the user to backup all settings to nonvolatile memory. There are two repositories for saved settings, User 1 and User 2. See Figure 89.




Figure 89: Options > System > Backup Menu

A confirmation window will appear after a button is selected and pressed. Press the OK button to confirm, or the Cancel button to cancel the action. See Figure 90.




Figure 90: Options > System > Backup Confirmation

Restore

Pressing the Restore button opens the Restore menu, which allows the user to restore settings from nonvolatile memory. There are three repositories for saved settings, User 1, User 2, and Factory. Selecting Factory restores all factory default settings. See Figure 91.




Figure 91: Options > System > Restore Menu

A confirmation window will appear after a button is selected and pressed. Press the OK button to confirm, or the Cancel button to cancel the action. See Figure 92.




Figure 92: Options > System > Restore Confirmation

Reset

Pressing the Reset button opens the Reset menu, which allows the user to reset the SSPA controller hardware to activate certain settings. For example, when the IP Address is modified the SSPA must be reset for it to use the new IP Address. See Figure 93.




Figure 93: Options > System > Reset Menu

IO Card -- Resets all hardware on the removable M&C card as well as the embedded cards on all RF modules. The amplifier will be muted during the reset process, therefore the reset will cause a momentary loss of RF output. All communication links to remote M&C will be dropped until reset process is complete. The amplifier will use the currently selected communication parameters (IP address, baud rate, etc);

Module -- Resets only the embedded chips in all RF modules. The I/O card remains operational and maintains a communication link to remote M&C. The RF module will be muted during the reset process. This function is useful for clearing latched fault conditions in SSPA units under N+1 system control;

Comms Only -- Resets only communication parameters. If unmuted, the SSPA maintains an unchanged RF output level during reset. Remote COM links will be dropped and re-enabled with selected parameters;

Clear Faults -- Clears all latched faults and remaining fault history information. SSPA remains fully operational during the process;

IP Comms -- Resets only IP communication parameters. If unmuted, the SSPA maintains an unchanged RF output level during reset. Remote COM links will be dropped and re-enabled with selected IP parameters.

When the user selects and presses one of the buttons described above, a confirmation window will appear. See Figure 94. Press the OK button to continue the reset function, or the Cancel button to cancel the function.



Figure 94: Options > System > Reset Confirmation

In the case of the Clear Faults button, a different confirmation window will appear. See Figure 95. Press the OK button to continue the reset function, or the Cancel button to cancel the function.




Figure 95: Options > System > Clear Faults Confirmation

Memory Mode

Pressing the Memory Mode button opens the Memory Mode menu, from which the user can select options for how the unit retains settings in memory. See Figure 96.




Figure 96: Options > System > Memory Mode Menu

RAM -- In this mode, the unit will not backup any settings changes to internal EEPROM. This mode is optional and needs to be set by the user every time the unit endures a power cycle or I/O card reset. This mode is beneficial when the SSPA application requires frequent changes to the SSPA state (such as mute/unmute or attenuation changes). Since any EEPROM device has limited write cycles, RAM mode allows the user to execute unlimited settings changes. If the SSPA experiences a power or reset cycle in RAM mode, it will use the last saved settings setup before RAM was engaged;

EEPROM -- Default mode. Without user intervention, the unit will retain this mode of operation. All changes to settings setup performed over local or remote interface will be backed up to EEPROM within a 3 second time interval. If the unit experiences a power cycle or reset, the last saved set of settings will be applied to the unit upon each power up or I/O card reset. Any EEPROM device has a limited ability to endure write cycles. Maximum write cycles ability for units with firmware version prior to 6.00 is 150,000. After exceeding this limit, the unit will operate in RAM mode, utilizing a default set of settings on each power up. Firmware versions above 6.00 allow a minimum of 3,000,000 write cycles before opting out to RAM mode.

After selection one of the choices above, a confirmation window will appear. See Figure 97. Press the OK button to continue the reset function, or the Cancel button to cancel the function.




Figure 97: Options > System > Memory Mode Confirmation

Front Panel Button

Pressing the Front Panel button opens the Front Panel menu, from which the user can select options for the touchscreen, and configure the customizable fault display, action buttons, and status display, or reset the screen. See Figure 98.




Figure 98: Options > Front Panel Menu

Confirm Prompt

Pressing the Confirm Prompt button opens the Confirm Prompt menu, from which the user can enable or disable the confirmation prompts that are generated when certain actions (such as changing Mute Status or initiating a Backup/Restore) are triggered. The current selection is checked. See Figure 99.




Figure 99: Options > Front Panel > Confirm Prompt Menu

Show Refl. Pwr

Pressing the Show Refl. Pwr button opens the Show Refl. Pwr menu, from which the user can enable or disable the display of the Reflected Power measurement in the RF Signal Path Display. See Figure 100.





Figure 100: Options > Front Panel > Show Reflected Power Menu

 **Note:** If the amplifier or system does not include a Reflected Power Monitor, the display will show N/A.

Selection Timeout

Pressing the Selection Timeout button opens the Selection Timeout menu, from which the user can select the time interval that must pass (10 Seconds or 30 Seconds) before most menu screens revert to the previous menu screen if a selection is not made, or disable all confirmation screens. Default setting is 10 Seconds. See Figure 101.




Figure 101: Options > Front Panel > Selection Timeout Menu

Config Faults

Pressing the Config Faults button opens the Config Faults menu, from which the user can select the fault indicators that are shown in the Fault Indicator section at the far left of the touchscreen display. The Summary selection is always selected by default. Other default settings include Power Supply, Temperature, DC Voltage and DC Current. See Figure 102.




Figure 102: Options > Front Panel > Config Faults Menu

The user may select up to four other options besides the Summary selection to be displayed. Press the OK button to display the selected settings. Press the Cancel button to return to the previous menu. Press the Default button to return to the default settings.

Config Buttons

Pressing the Config Buttons button opens the Config Buttons menu, from which the user can select the Action Buttons that appear on the far right of the touchscreen display. Up to two items may be selected. Attenuation and Mute are selected by default. See Figure 103.



Figure 103: Options > Front Panel > Config Buttons Menu

The first item selected will appear as the top Action Button. The second item selected will appear as the bottom Action Button. Press the Cancel button to return to the previous menu. Press the Default button to return to the default settings.

Note: When the unit is set to Remote Only mode, the Control Mode button will appear in the top position of the Action Buttons area, whether or not it was selected by the user. See Figure 104.




Figure 104: Remote Only Mode

Config Status

Pressing the Config Status button opens the Config Status menu, from which the user can select the items that appear in the Custom Status menu (Status > Custom Status). Up to eight items may be selected between two screens of parameters that may be monitored. See Figure 105 and Figure 106.




Figure 105: Options > Front Panel > Config Status Menu Page 1

Press the More button to get to page 2.




Figure 106: Options > Front Panel > Config Status Menu Page 2

Press the Back button to return to page 1. Touch the Clear button to remove the checks from all items in both page 1 and page 2. Press the Cancel button to return to the previous menu. Press the OK button to accept the selected parameters.

Screen Reset

Pressing the Screen Reset button results in a confirmation window. See Figure 107. Press the OK button to continue the reset function, or the Cancel button to cancel the function.




Figure 107: Options > Front Panel > Reset Screen Confirmation

The Screen Reset function reboots the touchscreen's microcontroller card and resets all trendlines.

Menu Lock Button

Pressing the Menu Lock button opens the Menu Lock menu, from which the user can set the parameters for locking the touchscreen menu. See Figure 108.




Figure 108: Options > Menu Lock Menu

Password Enable

Pressing the Password Enable button opens the Password Enable menu, from which the user enable or disable password protection for the touchscreen menu. The current selection is checked. See Figure 109.




Figure 109: Options > Menu Lock > Password Enable Menu

When this function is enabled, the resulting screen returns to the Main Menu, which will show a red "locked" icon over all buttons that require a password to access. Only the Status and Info menus are not locked. See Figure 110.




Figure 110: Main Menu With Menu Lock Enabled

If the user selects one of the locked buttons, a password entry screen will appear. See Figure 111. By default, the password is 170.



Figure 111: Enter Password to Unlock Menu

If the correct password is entered, the "locked" icons will disappear, and the user can access all buttons normally, until the Lock Timer refreshes (based on its setting).

User Password

Pressing the User Password button opens the User Password menu, from which the user set the password for the touchscreen menu. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. The default value is 170. See Figure 112.




Figure 112: Options > Menu Lock > User Password Selection

Lock Timer

Pressing the Lock Timer button opens the Lock Timer menu, from which the user select how often the screen will be password protected. The current selection is checked. See Figure 113.




Figure 113: Options > Menu Lock > Lock Timer Menu

If One Time is selected, after the user unlocks the screen for the first time since the menu lock was enabled, the menu lock function will be disabled. Otherwise, the menu lock function will re-establish the touchscreen menu lockdown after the selected time interval passes.

Config Trends Button

Pressing the Config Trends button opens the Config Trends menu, from which the user enable or disable the trendlines, set the time interval between measurements for all trendlines, or reset the trendlines. See Figure 114.




Figure 114: Options > Config Trends Menu

Show Trends

Pressing the Show Trends button opens the Show Trends menu, from which the user may turn on or off all trendlines. The current selection is checked. See Figure 115.




Figure 115: Options > Config Trends > Show Trends Menu

Time Interval

Pressing the Time Interval button opens the Time Interval menu, from which the user may select the time interval between measurements for all trendlines. The current selection is checked. See Figure 116.




Figure 116: Options > Config Trends > Time Interval Menu

Reset Trends

Pressing the Reset Trends button results in a confirmation window. See Figure 117. Press the OK button to continue the reset function, or the Cancel button to cancel the function.




Figure 117: Options > Config Trends > Reset Trends Confirmation

If the user selects OK, all trendlines will begin tracking measurements anew, using the selected time interval.

Info Menu

Figure 118 shows the Info menu.




Figure 118: Info Menu

The Info menu allows the user to review the serial number and build level of the amplifier, each RF module used in the amplifier, and the front panel itself; set the date and time; or review how long the amplifier has been running.

- [System Info](#)
- [Module Info](#)
- [Time](#)
- [Runtime](#)
- [Front Panel](#)

System Info Menu

Pressing the System Info button opens the System Info menu, from which the user can review the unit's serial number, firmware build, pre-amp serial number and firmware build, circuit board IDs, and the user info. See Figure 119.




Figure 119: Info > System Info Menu

Pressing any of the buttons on this screen results in a more detailed read-only description. These information screens are not subject to the screen time-out, and will remain open until the user selects the back or home icons. The information contained within these menus are critical when calling technical support.

Module Info Menu

Pressing the Module Info button opens the Module Info menu, from which the user can review the serial number and firmware build for each of the modules contained within the amplifier chassis. See Figure 120.



Figure 120: Info > Module Info Menu

Pressing any of the buttons on this screen results in a more detailed read-only description. These information screens are not subject to the screen time-out, and will remain open until the user selects the back or home icons. The information contained within these menus are critical when calling technical support.

Time Menu

Pressing the Time button opens the Time menu, from which the user can review or edit the date and time. See Figure 121.




Figure 121: Info > Time Menu

Edit Date

Pressing the Edit button next to the displayed Date opens the Edit Date menu, from which the user can change the date saved to the unit. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 122.




Figure 122: Info > Time > Edit Date Menu

Edit Time

Pressing the Edit button next to the displayed Time opens the Edit Time menu, from which the user can change the time saved to the unit. Use the numbered keypad on the screen to enter the numbers for the highlighted selection. Touch the "OK" button to set the selected value. See Figure 123.




Figure 123: Info > Time > Edit Time Menu

Runtime Menu

Pressing the Runtime button opens the Runtime display, which shows the length of time since the last power-up. This is a read-only screen. See Figure 124.




Figure 124: Info > Runtime Display

Front Panel Menu

Pressing the Front Panel button opens the Front Panel menu, from which the user can review the touchscreen unit's microcontroller (MCU) version, graphic user interface (GUI) type, and serial number. See Figure 125.




Figure 125: Info > Front Panel Menu

Pressing any of the buttons on this screen results in a more detailed read-only description. These information screens are not subject to the screen time-out, and will remain open until the user selects the back or home icons. The information contained within these menus are critical when calling technical support.

Teledyne Paradise Datacom
Drawing Number 216512-5 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-5.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

SSPA Touchscreen System Operation

Teledyne Paradise Datacom
Drawing Number: 216512-6 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-6.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

All Teledyne Paradise Datacom rack mountable amplifiers can be placed in redundant system and phase combined system configurations, which can be controlled by the amplifier's controller without the need for an external controller unit.

Possible configurations include:

- 1:1 Redundant Systems (with input switching or splitting)
- 1:2 Redundant Systems
- 1:1 Phase Combined Systems (with an FPRC-1100 controller)
- 1:2 Phase Combined Systems (with an FPRC-1200 controller)
- Maintenance Switch

When an amplifier's operation mode is set to anything other than Standalone, an indicator on the top-right of the RF Signal Path Display can be touched to open the secondary MIMIC panel. See Figure 1.



Figure 1: RF Signal Path Display, MIMIC Panel Icon

The resulting screen displays the selected system configuration, the RF path and switch positions, and the online state of the amplifier. See Figure 2.

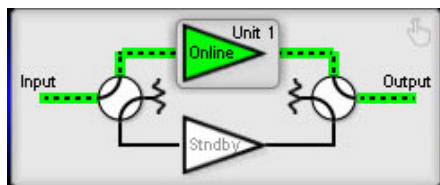


Figure 2: MIMIC Panel, 1:1 Redundant System

Note: The MIMIC panel does not indicate the fault status of each amplifier in the system. However, if there is a switch fault, the switches in the MIMIC panel and the RF Switch # indicator in the Fault Panel will turn red, as shown in Figure 3.




Figure 3: MIMIC Panel Showing Switch Fault

Redundant System Concepts

In order to work in any redundant or phase combined system mode, all connected amplifiers must be properly configured and interconnected. Because each amplifier has a microprocessor unit, an additional controller is not required.

Switch Cable

A switch cable must be connected between each amplifier and the transfer switch(es). The cable is connected to the 6-pin connector at Port J3 on the SSPA rear panel. The switches are controlled by applying +28V to the common of the switch and pulsing either position to the ground. The system then verifies the position of the switch.

See your system schematic for details on the switch cable for your system.

Link Cable

A link cable must be connected between each amplifier's Link Port (J8) in order to pass online/standby status information between them.

See your system schematic for details on the link cable for your system.

Warning! Do not remove the Link Cable while the system is in operation! The system will not operate properly.

Switching Modes

The user may configure the system to operate in one of the following switching modes: Auto, Manual or Switch Lock. See Figure 4.




Figure 4: Redundancy > Switch Mode Menu

Note: Switch Lock mode should only be used in custom systems and at the direction of the factory.

Normal operational Switch Mode for any system configuration is Auto. This mode provides automatic detection of SSPA faults and switchover to the operational SSPA. The system is also protected from operator errors; selecting a faulted SSPA is not allowed.

In situations when system maintenance must be performed, Manual mode should be used. In Manual mode, the operator can select the on-line and standby SSPA from the touchscreen display. The system will not provide automatic switchover from a faulted SSPA, but will keep the selected SSPA online regardless of its state.

Note: In order to function normally, both SSPAs in the system must utilize the same switching mode.

When the system is in Auto mode, if a summary fault develops in the on-line amplifier, its state will be sensed by the standby SSPA through the link cable. If the standby SSPA is in a non-faulted state, it will force the waveguide switch to reposition and put itself into the online state. The process takes no more than 200 ms. See the Switch Mode Button description of the **Touchscreen Menu Structure** section.

Switchover Muting

The system amplifiers may be set so that any change in switch position automatically mutes the amplifiers until the switch position change is completed.

To activate this feature, perform the following steps on each amplifier in the system.

1. From the front panel, tap the Home icon;
2. Tap the Fault Setup button;
3. Tap the RF Switch Flt. button;
4. Tick the MuteOnSwitch checkbox. See Figure 5.

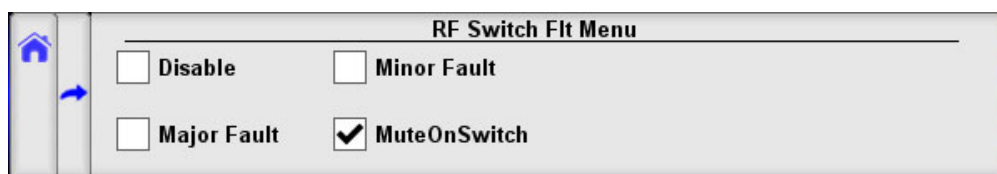


Figure 5: Fault Setup > RF Switch Flt. > MuteOnSwitch Selected

This feature was introduced into the SSPA control setup to overcome a problem with microwave arcing, which may potentially damage a switching component if the switching RF power exceeds 400 Watts. This particular problem becomes a critical issue if coaxial RF pass switches are used.

In general, all Teledyne Paradise Datacom amplifiers are well protected against high reflected power conditions, which may take place during output microwave switchover. However, waveguide or coaxial switches will develop an internal electrical arc during switchover if the output power is significant. Such conditions will not lead to instant failure, but over time may diminish some critical RF switch characteristics.

If this option is turned on, the system ability to output RF power will be bonded to the switch position sensing circuitry. Such circuitry consists of the following components: SSPA electronic switch position detector; wiring harness between SSPA and RF switch; RF switch position sensors. Failure of any of the above components will lead to a break in transmission.

Note that during any switchover, the system will register a minor fault, which will be indicated on the Fault Panel (RF Switch 1 and/or RF Switch 2). Should any of the system switches fail, a minor fault will be triggered and the amplifiers will be muted until the fault condition is cleared. See Figure 3 earlier in this section.

Physically Rotating Transfer Switch

It is possible to physically rotate the shaft on the transfer switch to change the online and standby amplifier positions. This can be done in any Switch Mode. When the switch is physically rotated in automatic mode the online SSPA will attempt to return the switch to its previous position. The SSPA will make two attempts to return the switch before accepting the new position.

If Switchover Muting is enabled, all amplifiers in the system will mute until the switch is completely rotated to a final position.

Hot Versus Cold Standby Mode

Two modes are available for the standby SSPA: Hot or Cold standby.

An SSPA in Hot standby mode (the preferred method) remains fully operational, transmitting its signal to the dummy load. When the standby amplifier is switched to the online state, full output power is immediately available. If switch mute is enabled, the SSPA will be muted during switchover.

An SSPA in Cold standby mode remains muted when off-line. If the standby amplifier is switched to the online state, it will unmute and will take several moments to achieve full output power. This mode is recommended only where prime power conservation is critical. See the Standby Mode Button description in the **Touchscreen Menu Structure** section.

1:1 Redundant Systems

Two amplifiers can be connected in a 1:1 redundant configuration, which can automatically switch to an operating amplifier if the on-line SSPA develops a system fault.

Two amplifiers can be connected to each other and to a waveguide/coaxial switch. One of the amplifiers is designated as "on-line"; the other is designated as "standby". The on-line SSPA receives the input RF signal and transmits an amplified RF signal to the RF load. The output of the standby SSPA is terminated at the dummy load. See the Standby Select Button description in the **Touchscreen Menu Structure** section.

In 1:1 Redundant Systems, the RF input signal can be directed to the online amplifier via a transfer switch (Input Switching), or to both amplifiers by splitting the incoming signal (Input Splitting). Both amplifiers must use the same input setting. See the Input Type Button description in the **Touchscreen Menu Structure** section.

Both SSPAs constantly monitor the waveguide switch position. The proper position for the online SSPA is determined by the Unit Status setting. If the selected SSPA is configured as HPA1, it will drive the RF switch to Position 1 to set itself to the on-line state. Selecting unit status to HPA2 will configure that SSPA to drive the switch to Position 2 for the on-line state. In Auto mode, the online SSPA will make two attempts to force the waveguide switch to take proper position before accepting its new state. See the HPA Status Button description in the **Touchscreen Menu Structure** section.


Configuring Amplifiers for 1:1 Redundant Mode (Internal Control)

The two amplifiers must be connected together with a switch cable and link cable, and the output waveguide directed to a transfer switch.

For convention, the standard position of HPA1 is on top of HPA2. This is represented on the MIMIC panel.

Setting SSPA1 to Work in 1:1 Mode

1. From the front panel of SSPA1, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:1 Mode box;
5. Tap the HPA Status button;
6. Tick the HPA1 box;
7. Tap the Standby Select button;
8. Tick the Online box;
9. Tap the Input Type button;
10. Tick Switching if the system input passes through a transfer switch, or Splitting if the system input passes through a splitter.

 **Note: HPA1 must be set to the same System Mode and Input Type as HPA2.**

Setting SSPA2 to Work in 1:1 Mode

1. From the front panel of SSPA2, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:1 Mode box;
5. Tap the HPA Status button;
6. Tick the HPA2 box;
7. Tap the Standby Select button;
8. Tick the Standby box;
9. Tap the Input Type button;
10. Tick Switching if the system input passes through a transfer switch, or Splitting if the system input passes through a splitter.

 **Note: HPA2 must be set to the same System Mode and Input Type as HPA1.**

Touchscreen Control of 1:1 Redundant System

Once each amplifier in the system is properly configured, the user can use the touchscreen on each of the system SSPAs to monitor and control the system. The user can tap the indicator on the top-right of the RF Signal Path Display to open the secondary MIMIC panel. See Figure 6.



Figure 6: RF Signal Path Display, Tap Icon to Open MIMIC Panel

In normal 1:1 Redundant System operation, HPA1 is set as the online amplifier and HPA2 is the standby unit. Figure 7 shows the MIMIC panel for both amplifiers in a 1:1 Redundant System. The green dotted line indicates the RF path through the input switch, to Unit 1 (HPA1) and then through the output switch. The online amplifier is also green to indicate its online status.

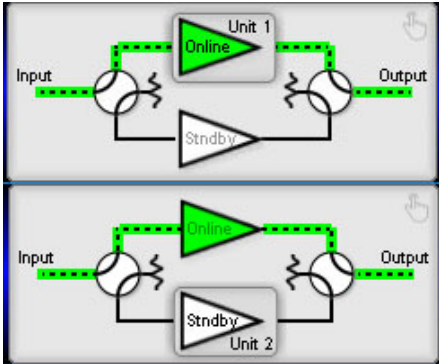


Figure 7: MIMIC Panels, with HPA2 on Standby in 1:1 System

To place HPA2 online, the user may tap the Unit 1 button on the MIMIC Panel of HPA1. See Figure 8.

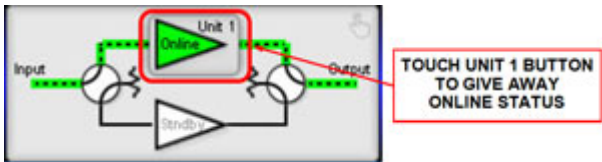


Figure 8: Tap Unit1 Button to Place HPA1 in Standby Mode

Note: Only the on-line amplifier can be switched to standby. Attempting to switch the standby SSPA to the on-line state by tapping the Unit # button will not work.

If the system is in Auto mode, HPA2 will accept the on-line state only if there is no summary alarm on HPA2. The Unit 2 button for HPA2 will turn green, indicating it is on-line, and the system will rotate the transfer switch to the correct position. The green dotted line will change to show the RF path passing through the input switch, to Unit 2 (HPA2) and then through the output switch. See Figure 9. If HPA2 does not accept the online state (due to a fault status), HPA1 will revert to the on-line state after 1 second.

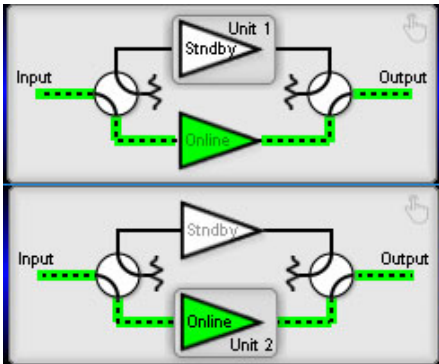


Figure 9: MIMIC Panels, with HPA1 on Standby in 1:1 System

In Manual mode, the standby SSPA will always accept the on-line state regardless of its own fault status.

Note: The MIMIC Panel will not show if the online amplifier is under a fault condition. The user will need to monitor faults via the Fault Panel or other fault indicators elsewhere on the touchscreen display.

However, in Auto Switch Mode, if the online amplifier enters a Major fault condition, the system will automatically switch the faulted amplifier to Standby status, and place the standby amplifier on-line.

Redundancy Menu in 1:1 Mode

When the system is placed in 1:1 Mode, the Priority Select button on the Redundancy Menu is disabled and greyed-out. See Figure 10.



Figure 10: Redundancy Menu in 1:1 Mode

The Input Type button is enabled when the system is placed in 1:1 Mode. The user may select either Input Switching (if the system includes a switch on the RF input path to the amplifier RF IN port J1) or Input Splitting (if the system includes a splitter on the RF input path to the amplifier RF IN port J1). This selection does not affect the operation of the system in any way, but is used only to tell the touchscreen whether to show a switch or splitter on the MIMIC panel. See the Input Type Button description in the **Touchscreen Menu Structure** section.

1:2 Redundant Systems

In 1:2 Redundant Systems, three amplifiers are configured such that two amplifiers receive two distinct inputs and transmit to two outputs (polarization paths), with a third amplifier acting as a standby for either online amplifier.

The system provides automatic switchover of the spare SSPA to either polarization path in case of a primary SSPA malfunction. In the case of two SSPA malfunctions, the backup SSPA can be switched to either polarization path, according to a polarization priority selection setting (POL1 or POL2). See the Priority Select Button in the **Touchscreen Menu Structure** section.

The standard 1:2 configuration has HPA1 online in the polarization 1 path, HPA3 online in the polarization 2 path, and HPA2 acting as spare backup for either HPA1 or HPA3. In a typical 1:2 redundant system, the state of the system is negotiated between all three HPAs over the link and switch cables. In this system, the link cable is used to pass information regarding the standby/online state between the HPAs. The switch cable is used to drive waveguide switches and determine their current position.

Configuring Amplifiers for 1:2 Redundant Mode (Internal Control)

The three amplifiers must be connected together with a switch cable and link cable, and the output waveguide directed to a transfer switch. For convention, the standard position of HPA1 is on top of HPA2, which is on top of HPA3. This is represented on the MIMIC panel.

Setting SSPA1 to Work in 1:2 Mode

1. From the front panel of SSPA1, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:2 Mode box;
5. Tap the HPA Status button;
6. Tick the HPA1 box;
7. Tap the Standby Select button;
8. Tick the Online box;

Setting SSPA2 to Work in 1:2 Mode

1. From the front panel of SSPA2, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:2 Mode box;
5. Tap the HPA Status button;
6. Tick the HPA2 box;
7. Tap the Priority Select button;
8. Tick either the Pol1 or Pol2 box, depending on user preference;
9. Tap the Standby Select button;
10. Tick the Standby box;

Setting SSPA3 to Work in 1:2 Mode

1. From the front panel of SSPA3, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:2 Mode box;
5. Tap the HPA Status button;
6. Tick the HPA3 box;
7. Tap the Standby Select button;
8. Tick the Online box;

Touchscreen Control of 1:2 Redundant System

Once each amplifier in the system is properly configured, the user can use the touchscreen on each of the system SSPAs to monitor and control the system. The user can tap the indicator on the top-right of the RF Signal Path Display to open the secondary MIMIC panel. See Figure 11.

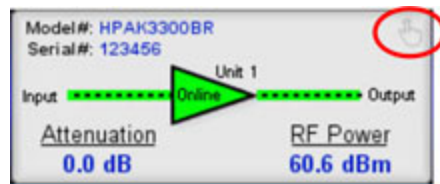


Figure 11: RF Signal Path Display, Tap Icon to Open MIMIC Panel

In normal 1:2 Redundant System operation, HPA1 is set as the online amplifier on POL1, HPA3 is assigned as the online amplifier on POL2, and HPA2 is configured as the standby unit.

Figure 12 shows the MIMIC panel for the three (3) amplifiers in a 1:2 Redundant System. The green dotted lines indicate the RF path through the input switches on POL1 and POL2, to Unit 1 (HPA1) and Unit 3 (HPA3) and then through the output switches. The online amplifiers are also green to indicate their online status.

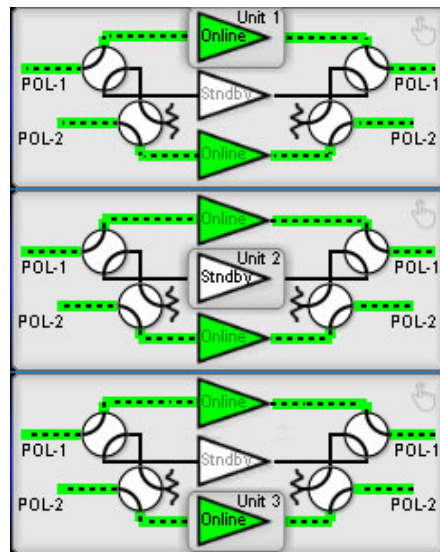


Figure 12: MIMIC Panels, with HPA2 on Standby in 1:2 System

To place HPA2 online on POL1, the user may tap the Unit 1 button on the MIMIC Panel of HPA1. See Figure 13.

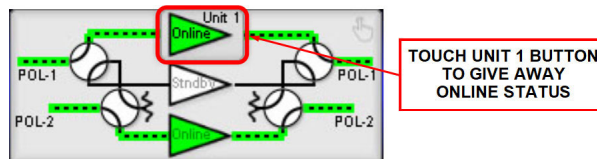


Figure 13: MIMIC Panel, Tap Unit 1 Button to Place Unit 1 in Standby Mode

⚠ Note: Only the on-line amplifier can be switched to standby. Attempting to switch the standby SSPA to the on-line state by tapping the Unit # button will not work.

If the system is in "Auto" mode, HPA2 will accept the on-line state only if there is no summary alarm on HPA2. The Unit 2 button for HPA2 will turn green, indicating it is on-line, and the system will rotate the transfer switch to the correct position. The green dotted line will change to show the RF path passing through the POL1 input switch, to Unit 2 (HPA2) and then through the POL2 output switch. See Figure 14. If HPA2 does not accept the online state (due to a fault status), HPA1 will revert to the on-line state after 1 second.

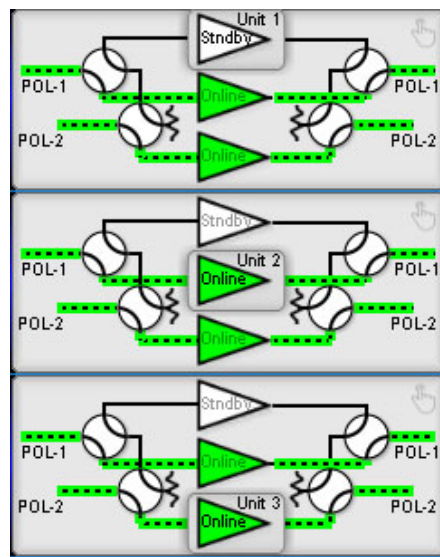


Figure 14: MIMIC Panels, with HPA1 on Standby in 1:2 System

In "Manual" mode, the standby SSPA will always accept the on-line state regardless of its own fault status.

Note: The MIMIC Panel will not show if the online amplifier is under a fault condition. The user will need to monitor faults via the Fault Panel or other fault indicators elsewhere on the touchscreen display.

However, in Auto Switch Mode, if the online amplifier enters a Major fault condition, the system will automatically switch the faulted amplifier to Standby status, and place the standby amplifier on-line.

Redundancy Menu in 1:2 Mode

When the system is placed in 1:2 Mode, the Priority Select button on the Redundancy Menu is enabled. The user may select the polarity path that the standby amplifier will be placed if both online amplifiers fail. Selections are POL1 or POL2. See the Priority Select Button description in the **Touchscreen Menu Structure** section.

The Input Type button is disabled in 1:2 Mode.

See Figure 15.



Figure 15: Redundancy Menu in 1:2 Mode

Phase Combined Systems

Phase combining amplifiers has long been a popular means of increasing the output power of an amplifier system. Under high power microwave conditions it is common to utilize some form of waveguide hybrid coupler to combine the output power of two amplifiers. This coupler is generally a waveguide tee such as a four port magic tee. On the input side, common coaxial power splitters can be utilized to divide the power due to the lower power levels at the input of the system.

A technique has been developed which accomplishes phase combining and provides redundancy with two waveguide transfer switches. This type of system is sometimes referred to as a "Fixed Phase" combined system to differentiate it from the Variable Phase Combiner (VPC) systems commonly used with TWTAs.

In the 1:1 Fixed Phase Combined system, the waveguide switches allow the amplifier outputs to either be directed into the combiner or bypass the combiner and connect directly to the RF output. The basic system topology is very similar to a 1:1 redundant system. An additional switch is included which allows either amplifier to be individually routed to the antenna or connect both amplifiers to a waveguide combiner. The combined system output power is then routed to the antenna.

In 1:2 Phase Combined mode, three amplifiers, two switches and a waveguide combiner comprise the system. The output power of two of the amplifiers is increased through the combiner. The output of the third amplifier is directed to a dummy load. If one of the two online amplifiers experiences a fault condition, the faulted amplifier is switched to the dummy load, and the standby amplifier is switched online.

Teledyne Paradise Datacom has a system controller which is used in Fixed Phase Combined systems. The controller can be configured to control 1:1 or 1:2 systems.



Note: Internal phase combined modes are not currently supported. See the System Controller with Touchscreen manual for information on controlling phase combined systems.

Maintenance Switch

A maintenance switch may be included at the RF Output of an amplifier. The position of the switch determines whether the output signal of the amplifier or amplifier system is directed to a dummy load (the maintenance position), or to the system output.

Setting the Amplifier for Maint. Switch Mode

The amplifier may be configured to control the maintenance switch, and must be connected to the switch via a single cable. The switch cable connects between port J3 from the amplifier's rear panel to the circular MIL connector on the switch.

1. From the front panel of SSPA2, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the Maint. Switch box;

See Figure 16.




Figure 16: Redundancy > System Mode Menu > Maint. Switch Selected

Direct Signal to Output

Follow the instructions below to direct the RF signal to the system output.

1. From the front panel of SSPA2, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the Standby Select button;
4. Tick the Online box.

The MIMIC panel will show the signal path from the amplifier directed through the switch to the system output. See Figure 17.




Figure 17: MIMIC Panel, Signal Directed to Output

Direct Signal to Dummy Load

Follow the instructions below to direct the RF signal to the dummy load.

1. From the front panel of SSPA2, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the Standby Select button;
4. Tick the Standby box.

The MIMIC panel will show the signal path from the amplifier directed through the switch to the dummy load. Note that the Standby State indicator in the Fault Panel turns red. See Figure 18.



Figure 18: MIMIC Panel, Signal Directed to Dummy Load

Redundancy Menu in Maint. Switch Mode

When the system is placed in Maint. Switch Mode, both the Priority Select button and the Input Type button are disabled. See Figure 19.



Figure 19: Redundancy Menu in Maintenance Switch Mode

Teledyne Paradise Datacom
Drawing Number 216512-6 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-6.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, Operational Basics

Teledyne Paradise Datacom
Drawing Number: 216512-7 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-7.xml>

USE AND DISCLOSURE OF DATA


EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.


Introduction

This section provides the instruction on basic amplifier functions, including local/remote control, mute/unmute, setting attenuation, N+1 operation, and the reflected power monitor option.

Applying an RF/IF Signal

The Type N (F) connector (J1) at the rear panel of the amplifier is used as the RF/IF input. An IF (L-Band) signal should be applied only to units which include an optional block up converter.

 **Important: Maximum input is +15 dBm.**

 **Warning: Do not apply RF/IF to the amplifier without first terminating the RF Output (J2) to a load rated for the maximum saturated output power of the unit. Never look into an open waveguide. RF hazards apply.**

Local vs. Remote Control of Amplifier

Control of the amplifier can be handled through front panel operation, or remotely through parallel or serial communication to a computer.

If the amplifier will often switch between local and remote control, the user can choose to assign one of the Action Buttons to the Control Mode button. See the Config Buttons description in the **Touchscreen Menu Structure** section.

For local (front panel) operation of the amplifier, tap the Control Mode action button (Local/Remote) on the front panel touchscreen until the yellow LED indicator is illuminated on Local. See Figure 1.



Figure 1: Action Button > Control Mode (Local Active)

When in Remote mode the front panel buttons are inoperative and a message is shown on the front panel touchscreen, as shown in Figure 2. The fault indicators and RF signal path display will still show the status of the system. Regardless of how the user configures the custom action button display, the Control Mode action button is always active in Remote mode.




Figure 2: Display When Unit in Remote Mode

See the **Touchscreen Operation** section for information on front panel control.

See the **Remote Control Protocol** section for information on remote control.

If the Control Mode button is not selected as one of the assigned action buttons, the user may place the amplifier in Remote mode by navigating to the Home > Operation > Control menu. Tick the Remote checkbox. See the Control Button description in the **Touchscreen Menu Structure** section.

Mute/Unmute the Amplifier

By default, the SSPA touchscreen is configured with the Mute Action Button at the far right of the screen. It is visible when Remote Mode is not active for the unit. See Figure 3.



Figure 3: Action Button > Mute (TX) Control (Unmute Active)

Tapping the Mute (TX) button results in a confirmation window (unless prompts are disabled in the Options > Front Panel > Confirm Prompt menu) to change the mute state of the amplifier. Tap the OK button to change the mute state or the Cancel button to keep the current mute state. When the unit is in the mute state, the indicator turns red. When unmuted, the indicator turns green.

You can also change the mute state of the amplifier by performing the following sequence on the touchscreen:

1. Tap the Home icon;
2. Tap the Operation button;
3. Tap the Mute button;
4. Tick the desired mute state checkbox: Mute Off or Mute On. The active state is selected.

When operating in N+1 mode, changing the mute state of the Master Module also changes the mute state of all Slave units. The mute state of any unit not configured in the N+1 array will not be affected.

Adjust Gain Attenuation

By default, the SSPA touchscreen is configured with the Attenuation action button at the far right of the screen. It is visible when Remote Mode is not active for the unit. See Figure 4.



Figure 4: Action Button > Attenuation Control

Tapping the Attenuation button opens the Attenuation setting screen. The current attenuation setting is displayed in the green window. Use the arrow buttons to adjust the ones and tenths places of the desired attenuation value. The attenuation adjustment is immediately applied to the amplifier. Click the OK button to accept the setting.

You can also change the attenuation setting of the amplifier by performing the following sequence on the touchscreen:

1. Tap the Home icon;
2. Tap the Operation button;
3. Tap the Attenuation button;
4. Use the keypad or arrow keys to adjust the attenuation setting. Tap the OK button to accept the entered attenuation value.

Automatic Level Control

Automatic Level Control (ALC) is an operational option that controls the amplifier's attenuation settings to maintain a desired RF output power level. The ALC function has the ability to accurately control the RF output power over a 15 dB range from saturated power.

Automatic Level Control can be activated via the front panel by following the steps listed below:


1. Tap the Home icon on the front panel touchscreen;
2. Tap the Fault Setup button;
3. Tap the Fwd RF/ALC button;
4. Tap the Action button;
5. Tick the ALC checkbox;
6. Tap the Level button;
7. Enter the desired output level and click the OK button to set.

Once activated, the ALC will take control of the amplifier's attenuation setting to maintain the desired RF output power level and will not allow any attenuation adjustments via the front panel. The ALC circuit will have the greatest ability to adjust for positive and negative RF input level changes when the amplifier's gain level is typically 65 dB. By following the steps below, the optimum ALC RF input level can be set quickly.

1. Tap the Home icon on the front panel touchscreen;
2. Tap the Fault Setup button;
3. Tap the Fwd RF/ALC button;
4. Tap the Action button;
5. Tick the Disable checkbox;
6. Tap the Home icon on the front panel touchscreen;
7. Tap the Operation button;
8. Tap the Attenuation button;
9. Set the attenuation level to 10 dB and click the OK button to set.
10. Apply a CW RF signal to the amplifier;
11. Use a power meter to measure the output power of the amplifier;
12. Adjust the RF input level until the desired output power level is achieved;
13. Follow the steps listed above to activate the ALC control. The ALC will take over the control of the output level and maintain the RF output level set point.

The ALC has the ability to accurately control the RF output power over a 15 dB range from P_{sat} . The ALC will operate over a 20 dB range, but the accuracy of the last 5 dB will suffer. For example, if the saturated power from the amplifier is 59 dBm, the lowest accurate power setting during ALC control is 44 dBm.

If the output power set point is set outside the operational range of the ALC circuit, the ALC will adjust the output power to the lowest possible level and set a minor fault on the amplifier's front panel.

 **Note:** Automatic Level Control is inactive when the system is in N+1 operation. Use the AutoGain control option for units in N+1 configurations.

Modes of Operation

The Teledyne Paradise Datacom amplifier system may be operated in several modes that allow for decreased power consumption when full RF output is not needed.

Hot Standby with No RF Applied

The operator may set the amplifier system to operate in Hot Standby mode. In this mode, the amplifiers will transmit any applied RF signal immediately. When no RF signal is applied, power consumption drops significantly.

For example, in a 4.5 kW S-Band PowerMAX system using eight (8) 800W amplifiers in a passive phase combined array, prime power consumption at saturated output power is 20 kW, and 16 kW at linear output power.

If operated in Hot Standby mode, with no RF signal applied, power consumption drops to 3.1 kW. See the calculation below:

```
SSPA MODULE 41V X 4A = 164W
FANS (INPUT) = 75W
FANS (OPTIONAL OUTPUT) = 75W
FAN BOOSTER BOARD = 12W
TOTAL = (164 + 75 + 75 + 12) X 8 MODULES = 2.6 KW
ASSUME 85% POWER SUPPLY EFFICIENCY
FINAL TOTAL = 2.6 KW / 0.85 = 3.1 KW
```

So, for this example, removing the RF input signal when operating in Hot Standby mode results in a power savings of 12.9 kW, if the amplifier is normally operating at linear output power.

By re-applying RF input, the amplifier system will almost immediately transmit at the previous RF output. It may take a few seconds for the output power to stabilize after RF is applied.

Cold Standby with RF Applied

For greater power savings, the amplifier may be operated in Cold Standby mode. In this mode, RF is continually applied to the system, but the amplifier system is placed in a muted state. When muted, power is removed from the amplifier modules.

Using the example of the 4.5 kW S-Band PowerMAX system using eight (8) 800W amplifiers, if the system was muted then power consumption drops to 1.65 kW, as shown below:

```
SSPA MODULE 41V X 0.3A = 13W
FANS (INPUT) = 75W
FANS (OPTIONAL OUTPUT) = 75W
FAN BOOSTER BOARD = 12W
TOTAL = (13 + 75 + 75 + 12) X 8 MODULES = 1.4 KW
ASSUME 85% POWER SUPPLY EFFICIENCY
FINAL TOTAL = 1.4 KW / 0.85 = 1.65 KW
```

This shows that operating in Cold Standby mode results in a power savings of 14.35 kW, if the amplifier is normally operating at linear output power.

It takes less than one (1) second to mute or unmute the system. It may take a few seconds for the output power to stabilize after unmuting the system.

Adjust RF Output

Power savings can also be achieved by operating the amplifier at a lower output power level. For example, an 800W X-Band amplifier has a rated Psat value of 59.1 dBm and draws 4000W when operating at that level.

As the RF Output is lessened by either reducing the input drive level or adjusting the attenuation level, AC prime power is reduced. See the chart in Figure 5.

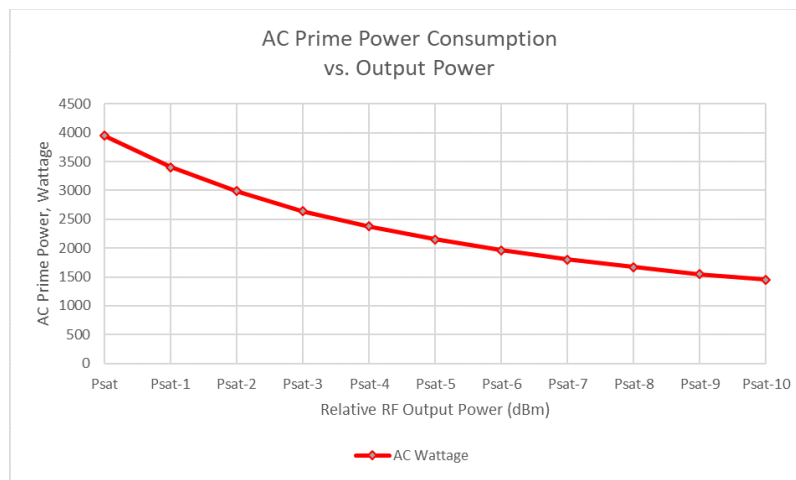


Figure 5: AC Prime Power Reduction with Reduced Input Drive Level/Attenuation

Power consumption will eventually flatten out as the amplifier reaches quiescent mode, where power is still applied to the fans and internal circuitry, the amplifier is unmuted, but no RF is transmitted. Further reduction in power consumption can be attained by muting the amplifier (i.e. Cold Standby mode).

N+1 Operational Basics (Single Unit)

A single SSPA unit may be operated in N+1 mode in order to take advantage of the Auto Gain Control features described in the **Touchscreen Operation** section. In this case, each SSPA module within the SSPA chassis is counted as a separate N+1 entity. For example, a two-module 5RU chassis acts like a two-way N+1 array.

N+1 array indexing also accounts this type of functioning. Each SSPA chassis occupies a segment of N+1 addressing equal to the number of modules; i.e., 2 modules = 2 addresses.

The remaining N+1 functions remain the same as that of a multi-unit N+1 system. When one of the internal modules develops a failure, it will be forced to mute by the internal SSPA controller. The unit will develop a summary alarm, but will remain in N+1 master mode (if it was prior to failure). Multi-module units will delegate a new master mode only when all internal modules develop a failure.



Note: With multi-module RM SSPA chassis configurations, the N+1 system will require fewer chassis to form a N+1 redundancy array.

Examples of 4-way N+1 systems:

- One (1) four-module 7RU chassis;
- Two (2) two-module 5RU chassis;
- Four (4) one-module 3RU chassis (standard PowerMAX configuration).

N+1 Operational Basics (2+ Units)

A system which utilizes two or more SSPA chassis in an N+1 configuration may be operated directly from the front panel as if it was a single very high power SSPA. Any SSPA chassis in the system can serve as the Master Module single point of control.

Selecting the Master Module

The selection of the Master Module is fully automatic and shifts from one SSPA to another based on the priority ranking assigned to the modules comprising each SSPA unit. A lower priority index number (referred hereafter as the N+1 Address) means a higher rank in the N+1 hierarchy. The fault-free unit with the lowest N+1 address is selected as the N+1 Master Module. The remainder of the units become N+1 Slave units.

Slave unit settings are under full control of the Master unit. Any system-related setting change made on the Master Module automatically propagates to the Slave units to keep all units under N+1 control in sync.

If the Master Module develops any kind of major fault condition, it delegates its Master privileges to the unit which is next in N+1 ranking and becomes a slave unit. This type of control architecture eliminates a single point of failure and achieves true N+1 system redundancy.

The touchscreen of the Master Module shows its status, as well as the attenuation setting, total system gain, system RF power, and (if the system includes a reflected power monitor) the system reflected power. In addition, when the system is operating normally, the background of the N+1 Master information panel is colored green. See Figure 6.




Figure 6: N+1 Master Module Display, Normal Operation

If there is a summary fault in the system, the background is colored red. See Figure 7.




Figure 7: N+1 Master Module Display, Fault Condition

The touchscreen of the Slave units in the system does not display any system information, as shown in Figure 8. The status of the individual Slave unit may be monitored in the Status menus, but any mute or attenuation settings changed at the Slave unit will be overwritten by the Master Module.




Figure 8: N+1 Slave Module Display

Any unit that develops a major fault condition will be automatically muted to avoid any side effects of the faulted unit on overall system performance.

To avoid control conflicts, slave units are forbidden from gathering system-wide information, therefore these system-wide information screens always hidden on N+1 Slave units.

Controlling System Operation

The N+1 system is under the control of the Master Module at all times. Any system-wide settings changes (local or remote) need to be performed on the Master Module. If a setting is adjusted on a Slave unit, the Master Module will erase and override it with the current system setting.

Some settings are not controlled by the Master Module because they are used for unit identification or required for local adjustment during maintenance. Settings such as the SSPA Network Address, N+1 Address, and IP Address are not enforced by the Master Module and need to be set individually at every SSPA chassis.

The setting for enabling/disabling/sizing the N+1 system is also not controlled by the Master Module. This setting allows the user to virtually remove individual SSPA units from the N+1 control array for maintenance and troubleshooting.

N+1 Addressing

During initial system installation, an appropriate N+1 address has to be selected for each unit in the system. Each unit should be assigned a unique N+1 address. The valid addressing range is 1 to 16 for any type of system configuration. Address 0 is reserved for factory debugging and should not be used. Assigning an address higher than the total number of SSPA chassis in the system (i.e., address 10 for a system comprising four 5RU SSPA units) makes the unit thus assigned invisible to the Master Module. The unit will continue to receive commands from the Master Module.

To set the N+1 address of a particular SSPA unit:

1. Tap the Home icon;
2. Tap the N+1 button;
3. Tap the N+1 Address button.
4. Enter the desired address and press the OK button to set the value.

The N+1 address order is not important for system operation. Assign the lowest address to the unit that provides the easiest access for the user. Subsequent addresses should be assigned while keeping in mind the accessibility of the front panel controls.

See the description for **Changing the N+1 Hierarchy** of SSPAs in an active system.

Adjust System Gain

Nominal system gain with Auto Gain enabled is 65 dB; nominal system gain with Auto Gain disabled is 70 dB. Note that Automatic Level Control is inactive in all N+1 configurations.

To adjust the gain of the system:

1. Tap the Home icon;
2. Tap the Operation button;
3. Tap the Attenuation button.
4. Enter the desired attenuation value between 0 and 20.0 dB.

If Auto Gain is enabled, the system will reserve 5 dB of attenuator range for gain compensation and attenuation is limited to a value between 0 and 15.0 dB.

N+1 Automatic Gain Control Option

Any modular hitless SSPA system may exhibit natural gain drift when one or more individual SSPA chassis is removed from the system or malfunctions. The automatic gain control option allows the system to maintain a constant gain level during such events.

This feature is user selectable and can be activated from the SSPA front panel or a remote interface.

To toggle the Automatic Gain Control option:

1. Tap the Home icon on the front panel touchscreen;
2. Tap the N+1 button;
3. Tap the Auto Gain button;
4. Tick the desired Auto Gain option.

See the **Touchscreen Operation** section for information about the Auto Gain options.

When Auto Gain On option is selected, the SSPA will automatically reserve 5 dB of attenuator range for future gain compensation. This will reduce the maximum SSPA gain by 5 dB. The attenuator range will also be reduced to 15 dB.

Five dB of reserved attenuator range allows the system to fully auto compensate gain when one SSPA module in a single SSPA unit enters a fault condition.

N+1 RF Power Measurements

The N+1 system may be equipped with a dedicated RF power measurement unit. The RF Power Detector provides RMS measurement of Forward and Reflected RF power directly at the output waveguide and this reading is acquired by the N+1 Master unit.

Besides N+1 system level power detection, each individual SSPA unit may be equipped with its own RF power detector. This reading can be viewed at each SSPA unit and may be used for troubleshooting individual SSPA units.

To view the RF power detector reading on the front panel:

1. Tap the Home icon;
2. Tap the Status button;

3. Tap the RF/Temp. button;
4. The Forward RF value is displayed in the top left.

N+1 Fault Detection

The N+1 system carries comprehensive fault detection logic. Each SSPA chassis processes its internal fault conditions as if it was a standalone unit. All N+1 Slave units report any fault state to the Master Module, which is responsible for system wide fault state handling. Failure of any single SSPA unit leads to a minor N+1 alarm on the Master Module. This type of fault condition will not produce a summary system alarm.

The user may view the number of faults in a system from the front panel.

1. Tap the Home icon of the Master Module in the N+1 system;
2. Tap the Status button;
3. Tap the N+1 Alarms button;
4. The N+1 Alarms menu displays the number of fault in the N+1 system, the number of units in standby; the cause of the last N+1 fault to occur; and the ID of the last failed unit.

If the Master unit detects two or more failed units, it will report a system-wide Summary alarm (Summary alarm LED on the Master unit will illuminate). The cause of the alarm will not be evaluated by the Master Module. To find cause of the failure, the operator will need to evaluate the local fault conditions of the failed SSPA unit.

Changing N+1 Hierarchy

Normally, the hierarchical structure of the N+1 array must be set during initial system setup. However, the operator may change the N+1 addressing hierarchy at any time. To ensure uninterruptible system operation during such system maintenance, certain procedural steps must be followed.

Changing Hierarchical Order of Slave Units

To change the hierarchical order of N+1 slave units without interrupting operation:

1. Turn off Auto Gain setting if needed.
2. On the first slave unit, temporarily select a N+1 address setting outside the maximum N+1 address for the current N+1 array. For example, in a system of 4 units, select address 5 or above; for system of 8 units, select address 9 or above.
3. For the second slave unit, change its N+1 address to match the previous N+1 address of the first unit.
4. Change the N+1 address of the first slave unit to match the previous N+1 address of the second unit.
5. System addressing hierarchy is now exchanged between the first and second unit. Turn on Auto Gain option if required.

Exchange N+1 Privileges Between Master and Slave Units

To delegate master privileges to a slave unit without interrupting system operation:

1. On the slave unit intended to be set as new Master unit, set the N+1 address value to "0". Assuming the unit is free from internal faults, the unit will instantly change its mode to Master.
2. On former Master unit, select its N+1 address to match the address of the former slave unit.
3. On the new Master unit, change the N+1 address value from "0" to the address value of the former Master unit.

Add SSPA Unit to the System


If one of the SSPA units was removed from the system or is down for maintenance, adding it back to system array may cause an unexpected change to a system state. To provide uninterruptible system operation, follow the procedure below.

1. Locate the current Master unit and change its N+1 address value to "0";
2. If the new unit has an unknown N+1 address or has not been configured for N+1 operation, turn off the Auto Gain option;
3. If the new unit has a known N+1 address in conflict with one of the current SSPA slave units, resolve it by changing the N+1 address of the current Slave unit.
4. Add new unit to system. Make sure newly added unit assumed N+1 slave mode. Make sure current Master unit doesn't detect any N+1 faults.
5. Change Master unit N+1 address from value "0" to its previous value.
6. Follow Scenario 1 and 2 if hierarchical order change is required.

Reflected Power Option

When this option is installed, the user may measure the amount of reflected RF power present at the amplifier's output flange, with a dynamic range of 12 dB starting at the maximum RF output.

For example, an amplifier with 50 dBm (100W) of maximum forward RF would be capable of reading reflected power levels from 38 dBm (6W) to 50 dBm (100W). The amount of reflected power can be viewed on the Front Panel Display screen, once the option is enabled.

 **Note: If the amplifier or system does not include a Reflected Power Monitor, the display will show "N/A".**


For amplifiers or systems which include a reflected power monitor, perform the following sequence on the touchscreen to enable the display:

1. Tap the Home icon;
2. Tap the Options button;
3. Tap the Front Panel button;
4. Tap the Show Refl. Pwr button;
5. Tick the Enable box.

The reflected power will be displayed on the front panel touchscreen:

1. Tap the Home icon;
2. Tap the Status button;
3. Tap the RF/Temp. button;
4. The Reflected RF value should be displayed below the Forward RF measurement.

 **You may set the custom status menu to display both the individual amplifier Reflected RF value and the System Reflected RF value (for units configured in a redundant system).**

 **Note: All Teledyne Paradise Datacom SSPAs are protected from short-term 100% reflected power conditions. Teledyne Paradise Datacom does not recommend operating the amplifier under a sustained condition of 100% reflected power. The addition of the reflected power sensor option allows the operator to monitor the amount of reflected power on the amplifier for the purposes of identifying issues with the transmission signal. The user may set up a Major Alarm trigger for High Reflected Power conditions in the Teledyne Paradise Datacom Universal M&C software. This alarm only indicates the presence of the high reflected power condition, and will not alter the amplifier settings to compensate for the condition.**

Reflected Power Alarm

Because the reflected power circuitry is not a true VSWR measurement, but simply a measure of absolute reflected power, it is possible to set an alarm level. To do so, perform the following steps on the front panel touchscreen:

1. Tap the Home icon;
2. Tap the Fault Setup button;
3. Tap the Refl. RF Fault button;
4. Tap the Action button;
5. Tick the checkbox corresponding to the type of fault you wish to be triggered when a fault condition occurs: Major Flt or Minor Flt.

In units with the reflected power monitor option, the alarm level is factory pre-set as a major alarm at 80 percent of the amplifier's rated power.

For example, an amplifier with 50 dBm (100W) of output power would have an alarm level set to 49 dBm (80W).

 **Note:** Teledyne Paradise Datacom does not recommend changing this setting from the factory pre-set due to possible frequent false alarms that may be generated if set at a much lower level. However, it is possible to adjust the setting in the Universal M&C software.

Teledyne Paradise Datacom
Drawing Number 216512-7 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-7.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

L-Band Operation

Teledyne Paradise Datacom
Drawing Number: 216594-3 Revision D
ECO A26152
June 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216594/216594-3.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

Teledyne Paradise Datacom SSPAs are available with various L-Band up converter options. The primary up converter option is the Zero dBm Block Up Converter, ZBUC. The ZBUC ® block up converter is offered in C-Band, X-Band, and Ku-Band configurations. The ZBUC converter offers ultra low phase noise for applications where phase noise is an overriding factor.

The type of ZBUC converter housed within your SSPA is indicated by its model number, as shown in Figure 1. The example in Figure 1 shows a 200W 3RU C-Band Rack Mount SSPA with Internal Reference ZBUC converter. For a full description of the configuration matrix, refer to the specification sheet for your amplifier.

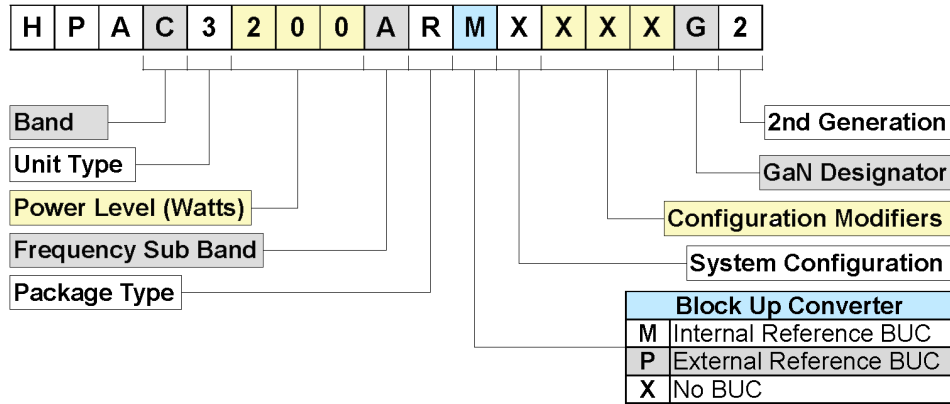


Figure 1: Configurator, RM SSPA, BUC Options

The block up converters are high performance frequency translation devices which provide excellent phase noise and spurious performance.

The ZBUC converter utilizes Teledyne Paradise Datacom's proprietary "Smart Reference Technology". Smart Reference Technology allows the system user to change reference frequency and power level or choose internal or external reference without requiring any system configuration. An internal ZBUC converter adds about 1.7 pounds to the overall weight of the SSPA.

In rack mountable amplifiers, the block up converter is powered from a +15 VDC supply available from the Back Plane Board Assembly of the SSPA. The Block Up Converter is simply cascaded with the SSPA at the input of the amplifier. Figure 2 shows the basic block diagram of the rack mount SSPA.

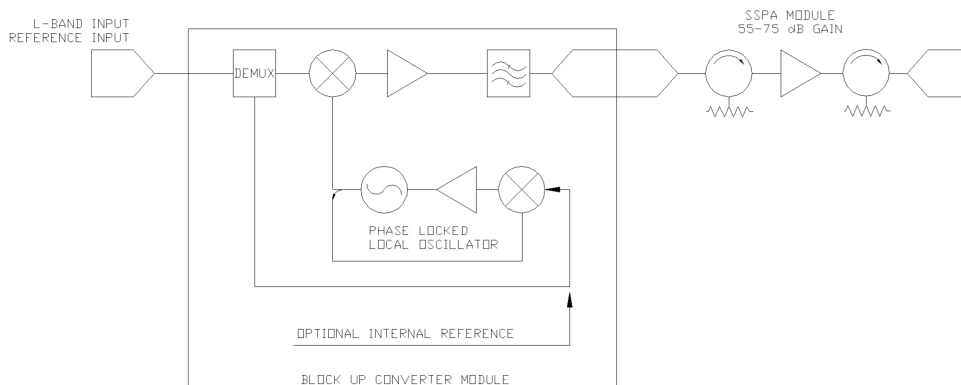


Figure 2: Block Diagram, BUC/SSPA System

In outdoor amplifiers, the block up converter is powered from a +15 VDC supply available on the Fan Boost Converter board assembly. The Block Up Converter is simply cascaded with the SSPA at the input of the amplifier.

It is important to remember the requirement of a 10 MHz reference oscillator when operating an SSPA with ZBUC converter (SSPB). If the 10 MHz reference is not present, the M&C will report a BUC alarm and the SSPA module will mute. This ensures that no spurious or 'off frequency' transmission could originate from the unit.

⚠ Note: Unless the ZBUC converter has the built-in internal reference option, if there is no 10 MHz reference signal present on the IFL input there will be no output signal from the SSPA.

ZBUC Converter Features

This section describes the features available in the Teledyne Paradise Datacom ZBUC converter. The ZBUC converter is available as an option for the C-Band, X-Band and Ku-Band SSPA. Table 1 shows the specifications for the respective frequency plans.

Table 1: zBUC Converter Frequency Specifications

Band	Frequency Plan	IF Input	LO Frequency	RF Output
C	Sub-Band "A"	950 - 1525 MHz	4.900 GHz	5.850 - 6.425 GHz
C	Sub-Band "B"	950 - 1825 MHz	4.900 GHz	5.850 - 6.725 GHz
C	Sub-Band "C"	950 - 1870 MHz	4.800 GHz	5.750 - 6.670 GHz
C	Sub-Band "E"	950 - 1250 MHz	5.475 GHz	6.425 - 6.725 GHz
C	Sub-Band "F"	950 - 1250 MHz	5.775 GHz	6.725 - 7.025 GHz
C	Sub-Band "G"	950 - 1675 MHz	4.800 GHz	5.750 - 6.475 GHz
C	Sub-Band "L"	950 - 1550 MHz	3.450 GHz	4.400 - 5.000 GHz
X	Sub-Band "A"	950 - 1450 MHz	6.950 GHz	7.900 - 8.400 GHz
X	Sub-Band "J"	1025 - 1800 MHz	6.100 GHz	7.125 - 7.900 GHz
KU	Sub-Band "A"	950 - 1450 MHz	13.050 GHz	14.00 - 14.50 GHz
KU	Sub-Band "B"	950 - 1700 MHz	12.800 GHz	13.75 - 14.50 GHz
KU	Sub-Band "D"	1350 - 1650 MHz	13.750 GHz	15.10 - 15.40 GHz
KU	Sub-Band "E"	1200 - 1450 MHz	11.800 GHz	13.00 - 13.25 GHz
KU	Sub-Band "F"	950 - 1450 MHz	11.800 GHz	12.75 - 13.25 GHz

 **Note: Custom frequency plans are available upon request.**

ZBUC Converter Theory of Operation

The ZBUC converter is a low gain block up converter with a P1dB of 0 dBm. This topology allows the system to be integrated with little impact on the general electrical specifications of the SSPA module.

The ZBUC converter utilizes single up conversion from L-Band to the desired RF band. The local oscillator circuits are designed to maintain the lowest possible output phase noise. The frequency synthesizer utilizes industry leading technology which allows for phase noise performance previously unattainable in PLL design. See Table 2.

Table 2: zBUC Converter Local Oscillator Phase Noise

Offset	Guaranteed Max.	C-Band (typical)	X-Band (typical)	Ku-Band (typical)	Units
10 Hz	-30	-60	-58	-56	dBc/Hz
100 Hz	-60	-74	-70	-60	dBc/Hz
1 kHz	-70	-87	-80	-78	dBc/Hz
10 kHz	-80	-100	-94	-91	dBc/Hz
100 kHz	-90	-105	-97	-94	dBc/Hz
1 MHz	-90	-125	-122	-120	dBc/Hz


Band selectivity is accomplished using the most aggressive filtering possible while maintaining specified power and spurious performance.

Smart Reference Technology

Teledyne Paradise Datacom's ZBUC® block up converter comes standard with smart reference technology. Smart reference technology allows the system operator to change external system reference frequency without any system configuration required. The ZBUC converter will automatically sense and lock to a 10 MHz or 50 MHz system reference frequency. With the internal reference option installed, the ZBUC will operate with no external reference applied. In the event the system operator wishes to operate on external reference, the converter will automatically sense the presence of an external reference and switch to external reference mode. With the internal reference option installed, the internal reference also becomes a backup reference which will become active in the event that external system reference is lost.

External reference is applied to the ZBUC converter via the L-Band input IFL and is routed to the frequency synthesizer using the built-in demux circuitry.

Note: The external reference option requires the system operator to provide system reference to the ZBUC/SSPB. The system will not lock and will have no output without external reference applied.


 **Note: Internal reference option allows for either internal or external reference operation.**

Bypassing Internal Reference for Alarm Purposes

For outdoor amplifiers which include the internal reference option, there may be cases where it is not desirable to allow the unit's internal reference to be selected automatically in the absence of an external reference.

Perform the following steps to bypass the internal reference:

1. Launch the Universal M&C application and connect to the outdoor unit over RS232 or RS485 comms.
2. Select the Settings tab in the Universal M&C window.
3. Change the BUC Reference setting to External.
4. Cycle power to the amplifier to save the new setting.

 **Note: Changing this setting when communicating with the outdoor amplifier over IPNET will not work properly. Communication must be over RS232 or RS485!**

Internal Crystal Reference Specs

The 10 MHz crystal reference used in the internal reference option of the zBUC converter has the following specifications:

Frequency Stability:

$\leq \pm 3 \cdot 10^{-8}$ over temperature range -20 to +85 °C

$\leq \pm 1 \cdot 10^{-9}$ aging per day (after 30 days)

$\leq \pm 6 \cdot 10^{-8}$ aging per year (after 30 days)

Warm up time: 20 minutes @ 25 °C for better than $\leq \pm 1 \cdot 10^{-8}$

Phase Noise:

10 Hz -120 dBc/Hz

100 Hz -140 dBc/Hz

1 KHz -145 dBc/Hz

10 KHz -152 dBc/Hz

100 KHz -155 dBc/Hz

Frequency Accuracy: Factory preset to $\pm 3 \cdot 10^{-8}$

FSK M&C (Outdoor SSPB only)

FSK Monitor and control comes standard with a ZBUC converter installed in an outdoor SSPB. This allows the outdoor amplifier to be fully and remotely monitored and controlled through the system's IFL. An embedded controller enables remote communication and fault detection via the IF input between the SSPA and a Teledyne Paradise Datacom Q-Series L-Band modem. This signal consists of a 650 KHz Frequency Shift Keyed carrier that is multiplexed onto the L-Band input IFL along with the 10 MHz reference signal.

The FSK input has a center frequency of 650 KHz with a $\pm 5\%$ tolerance. The FSK deviation is ± 60 KHz, with +60 KHz being a "mark" and -60 KHz being a "space". The FSK input will work over an input power range of -5 to -15 dBm. The FSK characteristics are summarized below:

Frequency: 650 kHz $\pm 5\%$
FSK Deviation: ± 60 kHz nominal (+60 kHz mark)
Deviation Tolerance: ± 50 kHz minimum, ± 70 kHz maximum
Locking Range: ± 32.5 kHz
Input Level Range: -5 to -15 dBm
Start Tone Time: 10 ms minimum

Typical System Configuration

This section shows the Rack Mount SSPB in a common system application. Figure 3 shows the amplifier used with a Teledyne Paradise Datacom Q-Flex L-Band Modem.

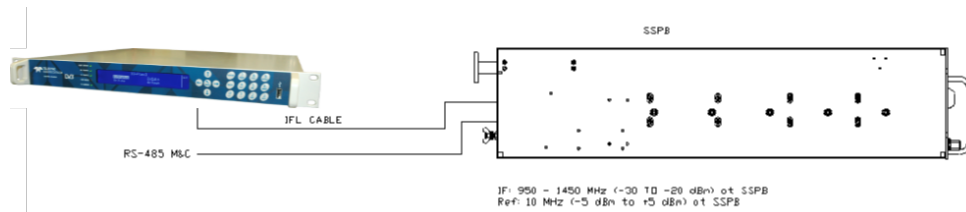


Figure 3: SSPB Chassis with Q-Flex Satellite Modem

IFL Cable Considerations

Consideration should be given to using a high quality IFL between the indoor and outdoor equipment. The system designer must always consider the total cable loss for a given length and also the implications of the slope of attenuation across the 950 to 1450 MHz bandwidth. Table 3 gives the approximate attenuation vs. frequency for a variety of cable types.

Table 3: Common Coaxial Cable Characteristics

Cable Type	Center Conductor DC Resistance per 1000 ft.	Outer Diameter (in)	Attenuation at 950 MHz dB per 100 ft.	Attenuation at 1450 MHz dB per 100 ft.	Slope across band for 100 ft. cable (dB)	Slope across band for 300 ft. cable (dB)
RG-214	1.7	0.425	7.8	11.3	3.5	10.5
Belden 8214	1.2	0.403	6.8	9.2	2.4	7.2
Belden 7733	0.9	0.355	5.8	8.3	2.5	7.5
Belden 9914	1.2	0.403	4.5	6.3	1.8	5.4
Belden 9913	0.9	0.403	4.2	5.6	1.4	4.2

It is recommended to use a quality grade of 50 ohm cable such as Belden 9913, 9914, or 7733. Check the manufacturer's technical data to make sure that the insulation is sufficient for the particular installation including the cable's temperature range. Also make sure the coaxial connector from the IFL cable to the amplifier input is wrapped with a weather sealing tape to prevent water intrusion into the coaxial cable.

BUC Reference in Redundant Systems

When redundant systems are configured with Block Up Converters, the systems engineer must be know whether the BUCs have internal 10 MHz reference oscillators or if they are configured for external 10 MHz reference only. When the Block Up Converter loses its 10 MHz reference, the converter will trigger an alarm condition. This alarm condition then disables (or mutes) the amplifier's RF output. This is done so that any uplinked signal does not drift off frequency or emit spurious outputs to the satellite.

Converters that have an internal 10 MHz reference oscillator will automatically switch to an externally applied reference. In this case, if the external reference is removed, the converter will switch to the internal reference and a BUC alarm will not be triggered.

This section shows various configuration options in which the 10 MHz BUC reference can be distributed to amplifiers in a redundant system. Particular attention need to be placed on 1:2 Redundant systems because the standby amplifier must have a 10 MHz reference so that it does not remain in a faulted condition.

Possible configurations include:

- Option 1: Internal Reference
- Option 2: Separate External Reference Supplied to Standby Amplifier
- Option 3: Single External Reference Duplicated to Each Amplifier
- Option 4: Individual External References Duplicated to Each Amplifier

Option 1: Internal Reference

The simplest configuration is to use Block Up Converters that have an internal 10 MHz reference oscillator. Each system input can have the IF signal and 10 MHz reference signal on the same input.

Option 1 is standard for all 1:2 systems using BUC option 'M' (internal reference), for 1:1 systems with input switching using BUC option 'M' (internal reference), and for 1:1 systems with input splitting using either BUC option 'M' (internal reference) or 'P' (external reference).

In the systems shown in Figure 4 and Figure 5, each online amplifier operates from its own internal reference oscillator but will automatically detect and switch to an external 10 MHz reference supplied at the RF input. The Standby amplifier operates only from its own internal reference oscillator.

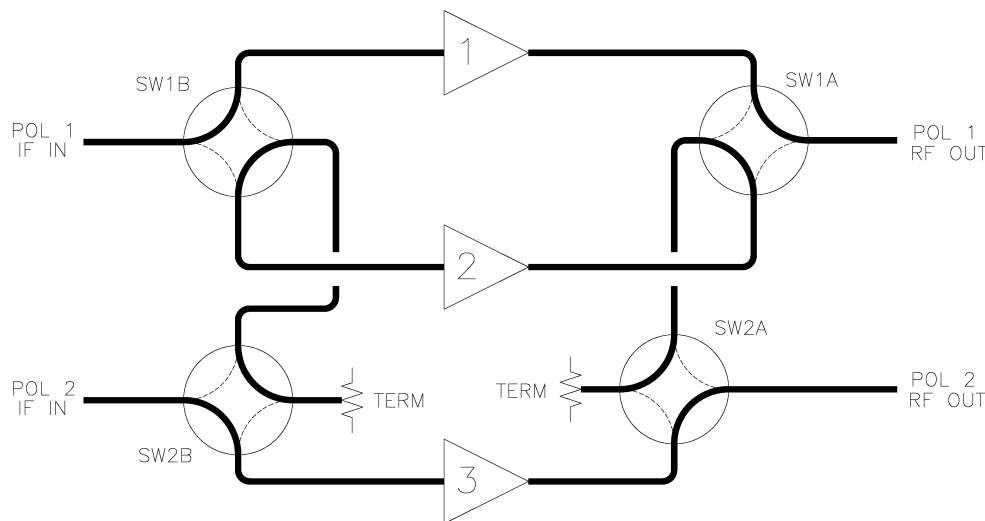


Figure 4: 1:2 Redundant System, BUCs Have Internal Reference Oscillators

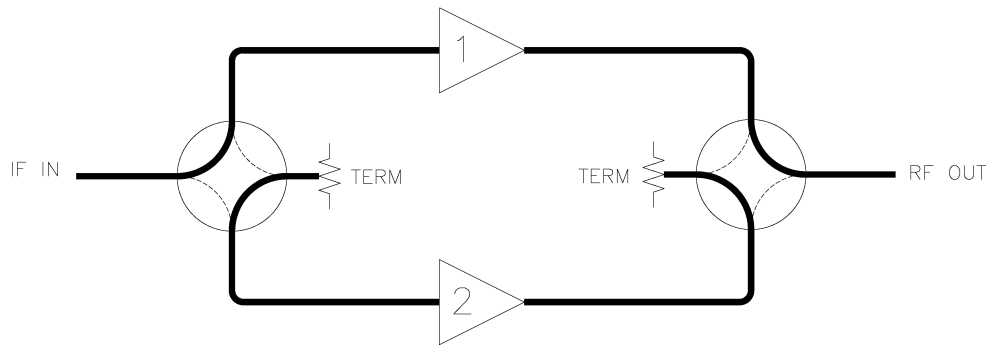


Figure 5: 1:1 Redundant System, Input Switching, Internal Reference BUCs

Figure 6 shows the standard configuration for 1:1 systems with input splitting. The SSPBs will automatically detect and switch to an external reference applied at the IF input.

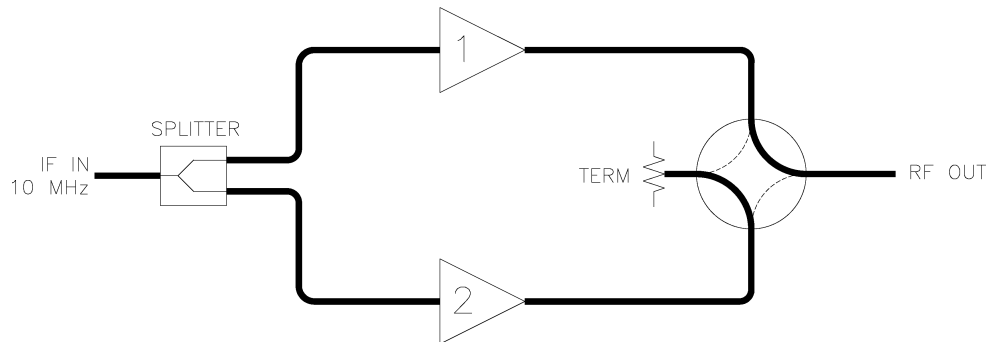


Figure 6: 1:1 Redundant System, Input Splitter, Internal or External Reference BUCs

Option 2: Separate External Reference Supplied to Standby Amplifier

This configuration can be used when the L-Band IF signal and 10 MHz are on the same input and the Block Up Converters are configured for an external reference only.

In this case, the 10 MHz input for the Standby amplifier is provided by the customer via a separate input, as shown in Figure 7 and Figure 8. In redundant systems, the input reference is diplexed onto the coaxial line feeding the input of the Standby amplifier.

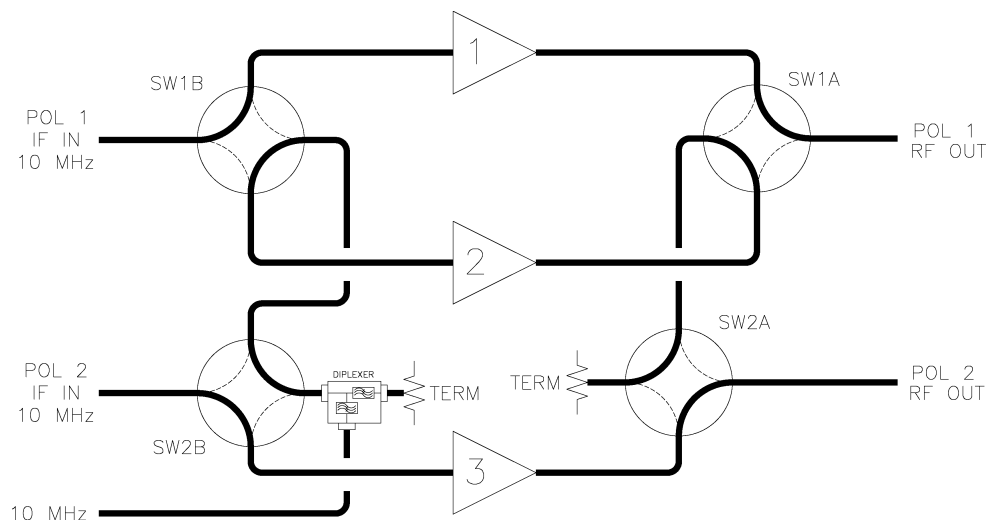


Figure 7: 1:2 Redundant System, Reference Diplexed to Standby Amplifier

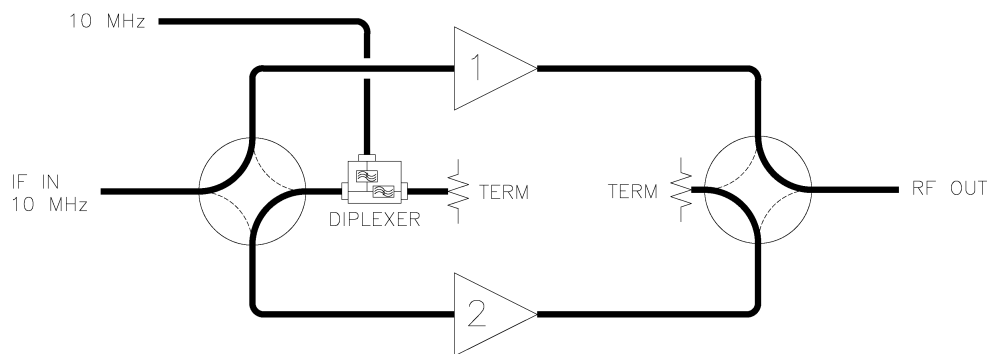


Figure 8: 1:1 Redundant System, Reference Diplexed to Standby Amplifier

Option 3: Single External Reference Diplexed to Each Amplifier

This configuration can be used when the L-Band IF signal and 10 MHz are on separate coaxial inputs, and the BUCs are configured for external reference.

Option 3 is standard for all 1:2 systems using BUC option 'P' (external reference) and for all 1:1 systems with input switching using BUC option 'P' (external reference).

In this case, a single 10 MHz reference input is split and diplexed to the IF input of each amplifier as shown in Figure 9 and Figure 10.

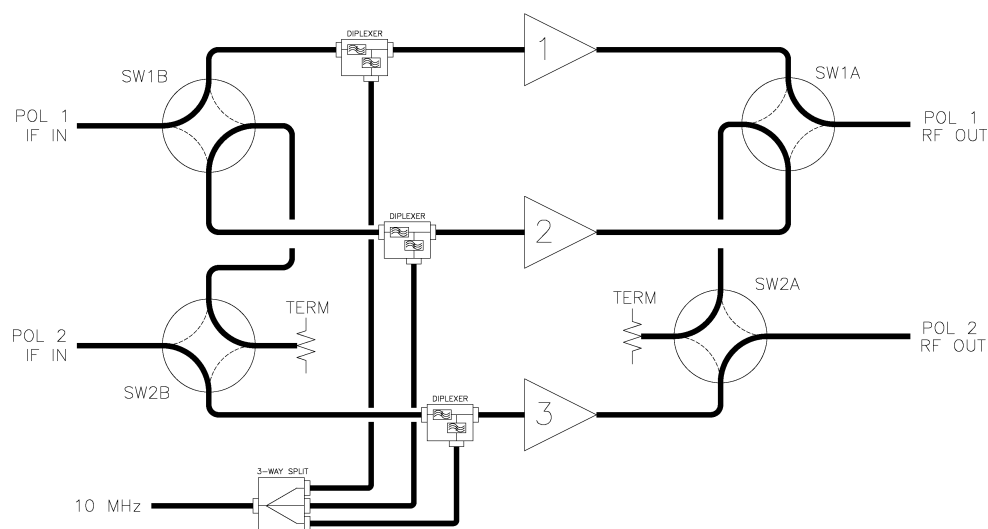


Figure 9: 1:2 Redundant System, Single Reference Diplexed to Each Amplifier

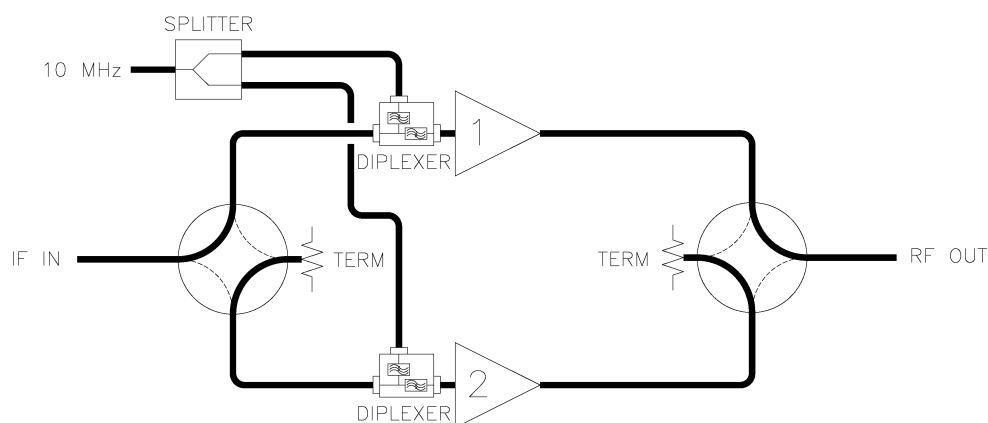


Figure 10: 1:1 Redundant System, Single Reference Diplexed to Each Amplifier

Option 4: Individual External References Diplexed to Each Amplifier

This configuration can be used when the L-Band IF signal and 10 MHz are on separate coaxial inputs and the BUCs are configured for external reference.

In this case, individual 10 MHz references are diplexed to the IF input of each amplifier as shown in Figure 11 and Figure 12. This gives the systems engineer the greatest flexibility and control over the 10 MHz reference input to each SSPA.

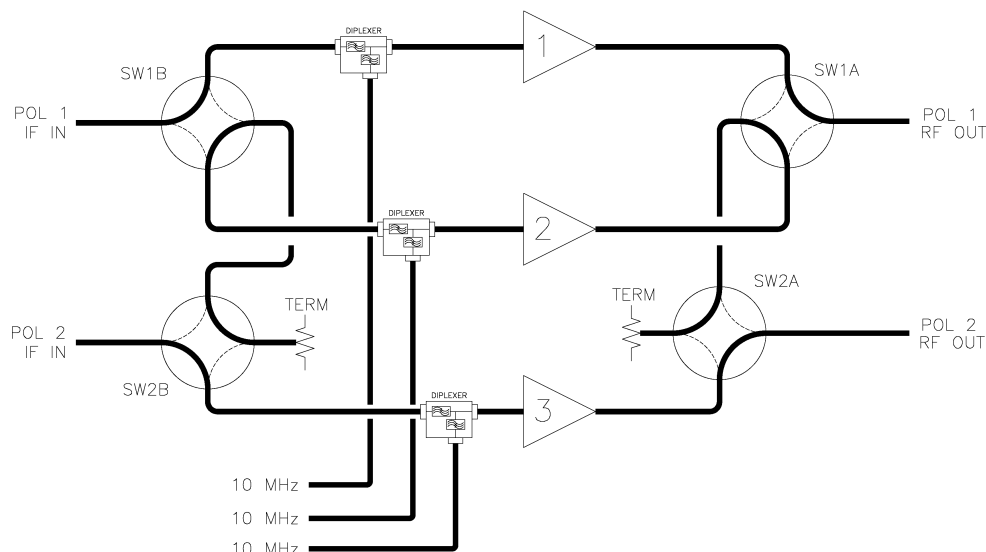


Figure 11: 1:2 Redundant System, Individual References Diplexed to Each Amplifier

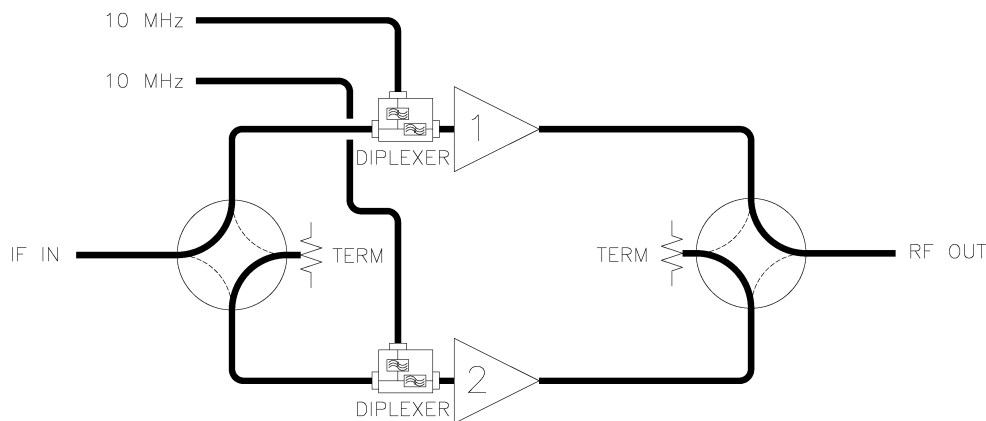


Figure 12: 1:1 Redundant System, Individual References Diplexed to Each Amplifier

Teledyne Paradise Datacom
Drawing Number 216594-3 Revision D
ECO A26152
Last Modified: June 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216594/216594-3.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, Maintenance and Troubleshooting

Teledyne Paradise Datacom
Drawing Number: 216512-8 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-8.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Required Maintenance

Cooling System

In order to preserve the amplifier's warranty, regular cleaning of the cooling system is required. The amplifier is cooled by forced-air convection through the heatsink fins. Dust and debris can accumulate in the heatsink fins under normal operation, and must be periodically cleaned out.

⚠ Important! Failure to keep the heatsink free of dust and debris will void your warranty.

It is recommended that the cooling system of the SSPA be checked at least once per month. If the environment in the area where the amplifier is being operated produces a large amount of dust and debris, this check should be performed more frequently.

Ensure each of the intake fans (and exhaust fans, when included) is operating normally. A fan failure should be remedied by replacing the failed fan. Spare fans are available from the factory.

The intake fans of the amplifier can pull airborne debris into the enclosure, and fill the spaces between the heatsink fins. As this debris builds up inside the amplifier, the airflow which is important in cooling the amplifier is impaired.

Blockage of the heatsink will cause the internal temperature of the amplifier module to rise above what is considered as normal operating conditions. While the amplifiers have thermal protection, long periods of elevated temperatures could reduce amplifier service life.

The front panel menu can be used to check the amplifier base plate temperature. The base plate temperature should normally not exceed 75 °C.

To view the SSPA base plate temperature, perform the following sequence on the front panel touchscreen:

- Tap the Home icon;
- Tap the Status button;
- Tap the RF/Temp. button;
- Review the temperature readings. See Figure 1.




Figure 1: Status & RF/Temp. Menu

Several temperature readings are available in the RF/Temp Menu. The "Temperature" value is the base plate temperature of the RF module inside the chassis. The "Chassis Temperature" value is the temperature at the controller card inside the chassis. The "Record High Temp." value is the highest recorded temperature since the last amplifier power-up or reset. The "Cabinet Temperature" value is the temperature recorded inside the cabinet in systems where this feature is installed.

If the base plate temperature exceeds 75 °C, it is one indicator that the system's airflow requires maintenance.

⚠ Note: The amplifier's temperature alarm threshold is set to 85 °C. If the base plate temperature reaches 85 °C, the front panel Temp Fault LED will activate. If the temperature reaches 90 °C, the unit will shut down.

The heatsink fins should be visually inspected for excessive dirt and debris build-up. If it appears there is excessive debris in the fans or heatsink; the fan tray can be removed for easy cleaning.

Heatsink Cleaning Procedure

Figure 2 shows a heatsink with an accumulation of dust stuck in the heatsink fins.

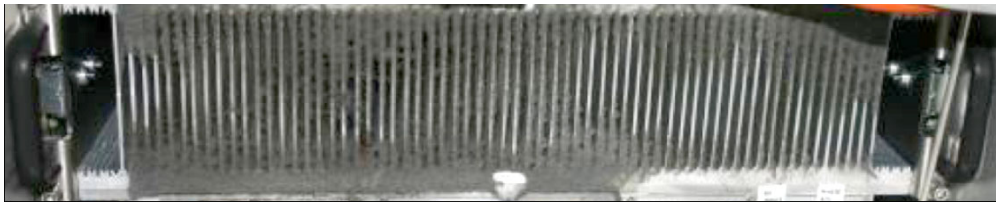


Figure 2: Example, Dust Accumulation in Heatsink

Follow the procedure below to access the heatsink for cleaning.

- Using a Philips head screw driver, loosen the thumbscrews holding the front fan tray in place.
- Remove the front panel fan tray. See Figure 3.



Figure 3: Remove Front Fan Assembly (3RU Chassis shown)

- Unplug the fan power cord from the connector. See Figure 4.

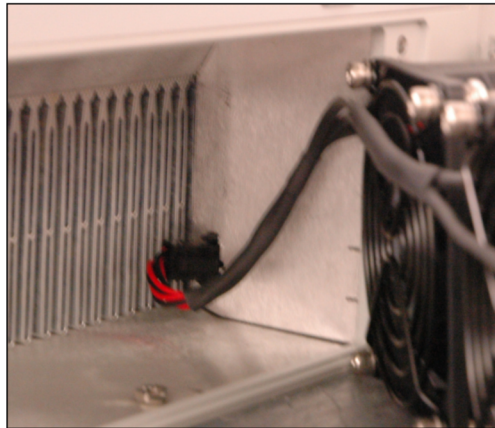


Figure 4: Unplug Fan Power (3RU Chassis shown)

- Use the shop vacuum to collect all dust and debris.
- Use a can of compressed air to dislodge any dust or debris lodged within the heatsink fins and the fan assembly. Ensure that the heatsink fins are free from all debris. See Figure 5.

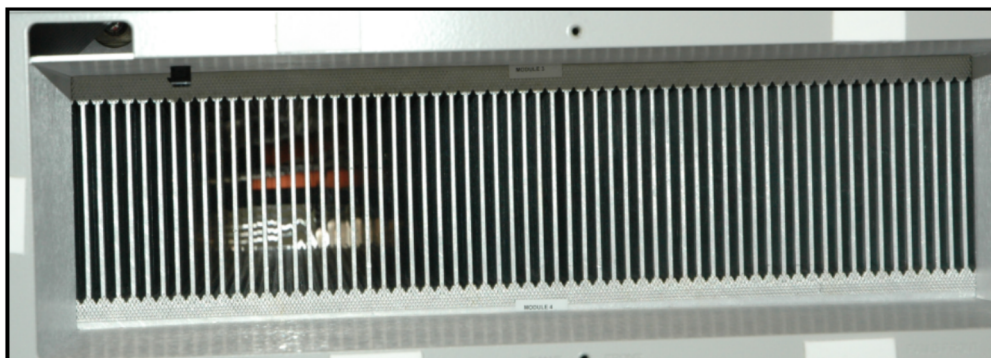


Figure 5: Heatsink Free of Debris

- Plug the fan power cord into the connector.
- Re-insert the front panel fan tray.
- Tighten the thumbscrews which hold the front fan tray in place. Tighten to snug using a Philips head screw driver.

Modular Assemblies

The Teledyne Paradise Datacom SSPA Chassis consists of a modular design, which allows for quick and easy maintenance and replacement of the modular assemblies in the event of a catastrophic failure of one of the SSPA components.

These assemblies include:

- [Front Fan Assembly](#)
- [Rear Fan Assembly \(some units\)](#)
- [Controller Card](#)
- [Removable Power Supply Modules](#)
- [Removable RF Module/Heatsink Assemblies \(PowerMAX 3RU Chassis only\)](#)

Front Fan Assembly

The front panel (intake) fan tray is secured to the front panel by captive thumb screws. To remove, loosen the screws with a Philips screwdriver and carefully remove the fan tray from the chassis. See Figure 6.

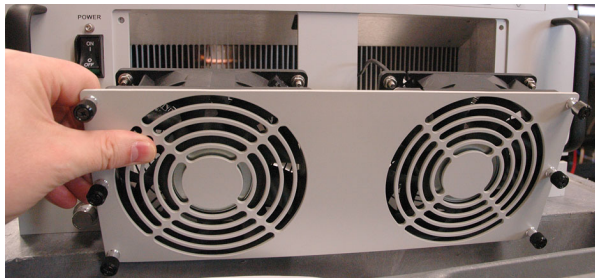


Figure 6: Remove Front Fan Assembly (5RU Chassis shown)

Unplug the fan power cord from the connector to fully remove the fan plate assembly. See Figure 7.

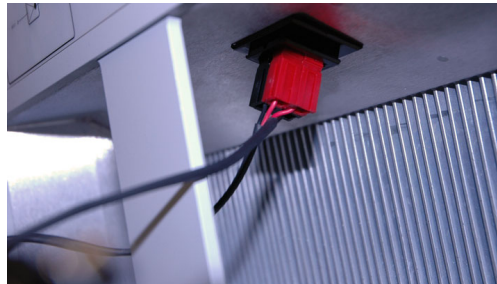


Figure 7: Unplug Fan Power (5RU Chassis shown)

For maintenance purposes, the front fan assembly may be removed for short periods of time while the amplifier is operating.

⚠ While the fan assembly is removed, monitor the temperature of the amplifier and replace the fan assembly if the temperature approaches 80 °C. Operating the amplifier at high temperatures for extended periods of time can damage the microcircuitry in the RF module and reduce its service life.

Replacement front fan assemblies are available from the factory. Contact Technical Support for details.

Rear Fan Assemblies

Some higher power units require rear exhaust fans to properly cool the amplifier. The exhaust fans on the rear panel are each secured by captive thumb screws. To remove, loosen the screws with a Philips screwdriver and carefully remove the fan assembly from the chassis. Unplug the fan power cord from the connector. See Figure 8 and Figure 9.

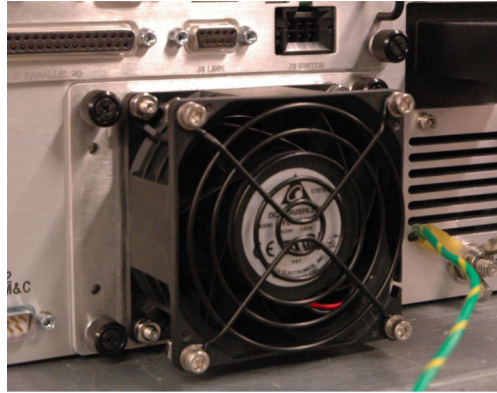


Figure 8: Unscrew Thumbscrews to Remove Rear Fan Assembly (3RU Chassis shown)

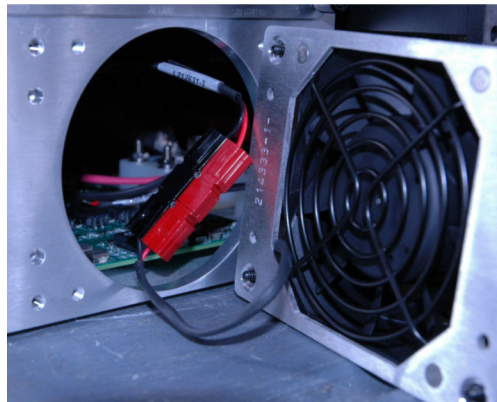


Figure 9: Unplug Fan Power (3RU Chassis shown)

Replacement rear fan assemblies are available from the factory. Contact Technical Support for details.

Removing the Controller Card

The controller card may be removed and replaced in case of a board failure without taking the system offline. To remove the card, disconnect all cables from the card's connection ports. Loosen the two thumbscrews at the top left and bottom right of the assembly. See Figure 10.

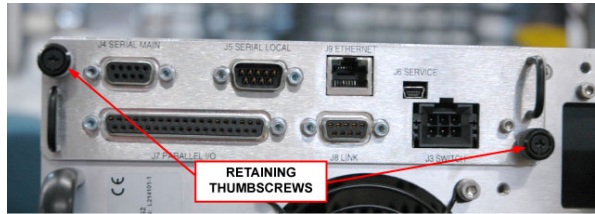


Figure 10: Loosen Thumbscrews to Remove Controller Card

Slide the assembly straight back from the cavity, as shown in Figure 11.



Figure 11: Slide Card from Chassis to Access Programming Connectors

Replacement controller cards are available from the factory. Slide the replacement card along the grooved guides of the chassis enclosure until the card's metal plate is flush with the rear of the chassis. Press the card firmly into place until the captive thumbscrews can be tightened to secure the card to the chassis. Reconnect the cables to the appropriate ports of the card.

See the **Controller Card** section for more information about the controller card.

Firmware Upgrade Procedure

Teledyne Paradise Datacom's digital engineers continually strive to improve the performance of RM SSPA software and firmware. As this occurs, software and firmware upgrades are made available.

The DigiCore5 controller board allows two methods for upgrading the unit firmware:

- Upgrade over HTTP link by using web browser;
- Over service Mini-USB connector J6;

The web upgrade is performed over the SSPA IP port and does not require any special software. It can be performed through any suitable web browser.

Upgrade over the Mini-USB port requires the installation of specific hardware USB drivers and batch scripts.

Required Hardware

The following equipment/hardware is necessary to perform the firmware upgrade.

- Depending on type of upgrade: Win7/XP PC with USB port or PC with available 10/100 Base-T port;
- Mini-USB cable or Ethernet patch cable;

Required Software

For web upgrade:

- Web browser (IE, Chrome or Firefox);

For USB upgrade:

- USB FTDI VCP drivers. Drivers need to be installed before making a connection between the PC and the SSPA USB programming port.
- SSPA field programming utility. Contact Teledyne Paradise Datacom technical support to obtain the latest version. The Field Programming utility is typically not required for installation.
- Firmware image upgrade file: code.bin.

For the latest set of virtual COM port (VCP) drivers, visit the FTDI web page (<http://www.ftdichip.com/Drivers/VCP.htm>).

Web Upgrade Procedure

The web upgrade is the preferred method of upgrading the HPA firmware.

Upgrading unit with incompatible firmware image may damage the equipment hardware. To ensure the proper firmware image file is used, contact Teledyne Paradise Datacom technical support. Write down your current firmware version. You may want also request image file of the current firmware in case it becomes necessary to revert back to the original.


Connect the SSPA to a 10/100 Base-T network or to a PC 10/100 Base-T network adapter. See the **Ethernet Interface Set-up and Cabling** section.

Open a web browser window (Chrome, Firefox or IE are preferred). Enter the following address in the location window of the browser:

>XXX.XXX.XXX.XXX/fw/

where XXX.XXX.XXX.XXX is the IPv4 address of the HPA unit. Press Enter.

The Upload Form is password protected. An authentication window should come up to ensure authorization. Use "admin" as user name and the HPA web logon password (default password is "paradise"). Click the "Log in" button.

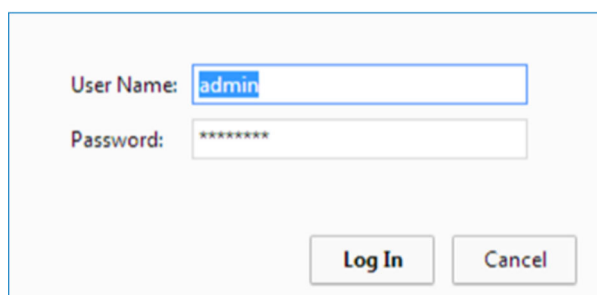

The image shows a web-based authentication form. It has two input fields: 'User Name:' with the text 'admin' entered, and 'Password:' with a masked password represented by seven asterisks. Below the fields are two buttons: 'Log In' and 'Cancel'.

Figure 12: Web Upgrade Authentication Window

The firmware upload form will load in the browser window. Click the "Choose File" button and select the firmware image code.bin file provided by technical support.

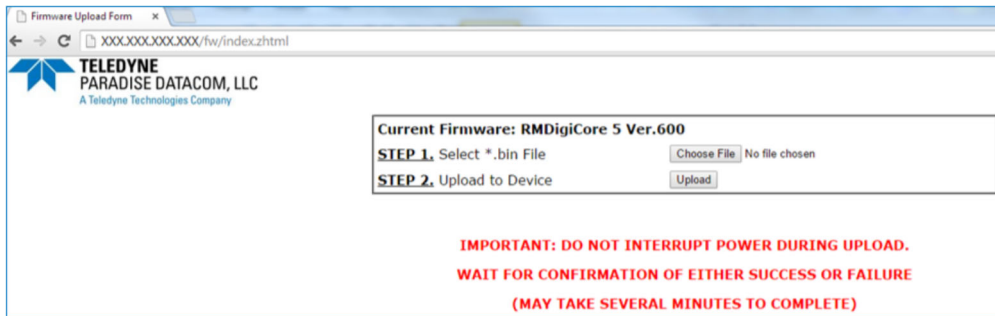
The screenshot shows a web browser window titled "Firmware Upload Form". The address bar shows "XXX.XXX.XXX.XXX/fw/index.zhtml". The page header includes the Teledyne logo and "TELEDYNE PARADISE DATACOM, LLC A Teledyne Technologies Company". The main content area has a box with "Current Firmware: RMDigiCore 5 Ver.600". Below this are two steps: "STEP 1. Select *.bin File" with a "Choose File" button (showing "No file chosen") and "STEP 2. Upload to Device" with an "Upload" button. Below the steps is a red warning message: "IMPORTANT: DO NOT INTERRUPT POWER DURING UPLOAD. WAIT FOR CONFIRMATION OF EITHER SUCCESS OR FAILURE (MAY TAKE SEVERAL MINUTES TO COMPLETE)".

Figure 13: Firmware Upload Form

Click the "Upload" button. A warning message will appear; click the "OK" button.

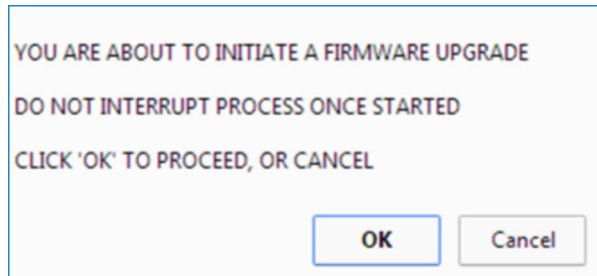
The screenshot shows a dialog box with the text: "YOU ARE ABOUT TO INITIATE A FIRMWARE UPGRADE", "DO NOT INTERRUPT PROCESS ONCE STARTED", and "CLICK 'OK' TO PROCEED, OR CANCEL". At the bottom are "OK" and "Cancel" buttons.

Figure 14: Proceed with Upgrade Prompt

The upload process will begin and the form will be informing about loading process. Do not interrupt this process and wait until its completion with positive or negative result. The process may take up to 15 minutes. When completed, the form will notify about end of process.

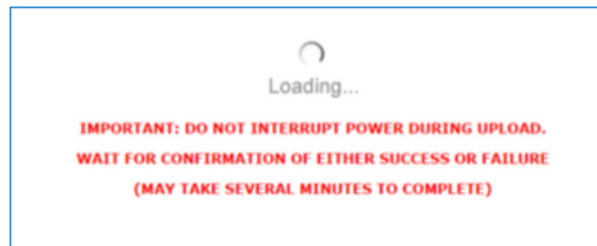
The screenshot shows a loading spinner with the text "Loading...". Below it is a red warning message: "IMPORTANT: DO NOT INTERRUPT POWER DURING UPLOAD. WAIT FOR CONFIRMATION OF EITHER SUCCESS OR FAILURE (MAY TAKE SEVERAL MINUTES TO COMPLETE)".

Figure 15: Upload Process Message

The screenshot shows a green message: "Firmware Uploaded Successfully." Below it, it lists "Previous Firmware: RMDigiCore 5 Ver.600 (614396 bytes)" and "Uploaded Firmware: RMDigiCore 5 Ver.601 (624822 bytes)". At the bottom is a red instruction: "Please Reset I/O Card To Complete Installation."

Figure 16: Upload Complete Message

During the upgrade process, the HPA remains fully functional. The new firmware will stay dormant until the next reboot of the HPA control card. Reboot the controller card by selecting the relevant front panel menu or by turning off AC power to the HPA. Browse to the front panel menu firmware information page and verify the installed version.

If the load process was interrupted, for any reason, the HPA may not operate properly after a reboot. It is still possible to recover from the problem by applying firmware upload over USB port. See the **USB Port Upgrade Procedure** for details.

USB Port Upgrade Procedure

Contact Teledyne Paradise Datacom support to obtain the latest firmware image and field programming utility. The programming utility package includes an RFU upload utility, a script file and FTDI USB drivers.

⚠ Important! Use the USB upgrade method only if the web upgrade has failed!

Install FTDI VCP driver on the target PC;

Connect the USB mini port J6 at the back of HPA unit to an available PC USB port.

⚠ Warning! Connecting J6 to a PC USB will interrupt normal operation of the HPA unit. RF output will be shut down until the USB cable is unplugged!

After connecting the HPA, the target PC should recognize the newly connected hardware and connect to it using the previously installed VCP FTDI drivers. Wait until this process is complete. Check the Windows device manager Ports section and note the newly added USB Serial Port. You will need a COM port designator in the next step.

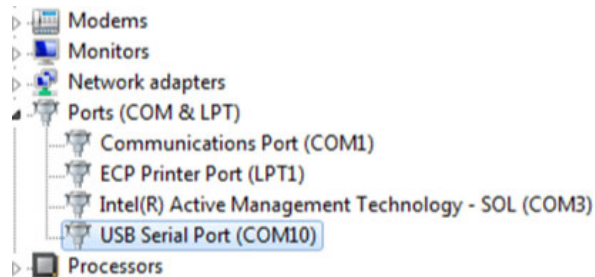


Figure 17: Windows Device Manager > Ports

Locate and run Upgrade.bat script file which was provided in firmware upgrade package. When run, the .bat file will open a command prompt window and request the programming serial port designator. Enter the port designator located in previous step and then press "Enter". The script file will start downloading a new image file to the HPA. The resulting window is shown below.

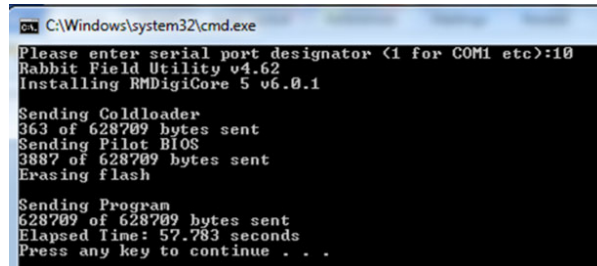


Figure 18: Command Window Showing Program Prompts

Unplug the USB cable from the HPA control card. The HPA unit should restart with the new firmware image.

Removable Power Supply Modules

The Indoor RM SSPA is configured with an external 1RU power supply chassis. Each power supply chassis can house up to four (4) power supply modules, and is fitted with one more power supply module than necessary to power the amplifier.

In some very high power (non-PowerMAX) amplifier configurations, up to two 1RU power supply chassis (up to eight (8) power supply modules) are used to provide the extra power supply module for N+1 operation.

A power supply module can be removed and replaced from the power supply chassis without taking the amplifier offline. See Figure 19.



Figure 19: N+1 Power Supply with Removable Modules

See the External N+1 Power Supply section for detailed information about installing and removing the power supply modules.

Removable RF Module/Heatsink Assemblies

PowerMAX system use a version of the 3RU chassis that is configured to allow the RF module/heatsink assembly to be removed from the front panel.

See the System Components section of the PowerMAX manual that provides a detailed description of the PowerMAX SSPA Chassis.

Troubleshooting Faults

All Teledyne Paradise Datacom amplifiers that use the touchscreen display have up to five fault condition indicators on left side of the front panel. Additional fault reporting is available via the **Status > Fault Panel** and other status screens.

The following sections describe steps the user should take to determine the cause of a fault state in a stand-alone amplifier.

Fault Indicators on the Touchscreen

The touchscreen features a variety of indicators that show normal (green) or faulted (flashing red) status. If an indicator is black, it means that particular parameter does not apply to your unit. A yellow indicator means that there is a communication error with the internal RF module.

These indicators appear on the far left section of the touchscreen display (Fault Indicators), and in the Menu area when the Fault Panel is selected. See Figure 20.

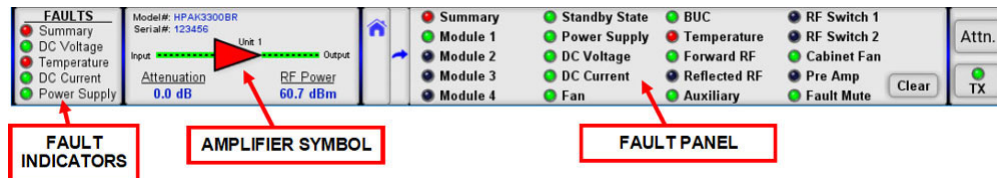


Figure 20: Fault Indicators

In addition, the triangular amplifier symbol in the RF Signal Path Display will turn red when the unit has a major (Summary) fault. The amplifier symbol will turn white when the unit is in Standby mode.

Fault Conditions

The following sections describe various fault conditions that may apply to the amplifier.

Summary Fault

This fault reflects the overall state of the SSPA. Only major faults affect the summary fault state. Some faults may or may not affect the summary fault depending on the SSPA settings.

The Summary fault indicator is always shown at the top of the Fault Indicators panel at the left of the display.

Voltage Fault

If the unit shows a DC Voltage fault, the fault indicators should look like Figure 21. This is a major fault condition.



Figure 21: Fault Indicators, DC Voltage Fault

The user should check the voltages displayed on the Status > DC Power menu. See Figure 22. If the voltages are outside of the normal output ranges as described in the DC Power Menu description of the **Touchscreen Menu Structure** section, consult the factory.




Figure 22: Fault Panel > DC Power Menu

DC Current Fault

If the unit shows a DC Current fault, the fault indicators should look like Figure 23. This is a major fault condition.



Figure 23: Fault Indicators, DC Current Fault

Check the Total DC Current reading on the **Status > DC Power** menu. See Figure 22. If the amplifier is in the mute state, Total DC Current drops within a range of 0 to 5 A.

Power Supply Fault

If the unit is under a Power Supply fault, the fault indicators should look like Figure 24. This is a major fault condition.



Figure 24: Fault Indicators, Power Supply Fault

Follow the steps below to identify the cause of a power supply fault:

1. When using an external power supply with the amplifier, verify that all power supply modules are operating normally. Replacement power supply modules are available from the factory. Contact technical support.
2. Check the power supply readings on the Status > DC Power menu. See Figure 22. Observe any fluctuations and record the level.
3. Mute the amplifier. Check the power supply readings on the SSPA front panel. Sometimes muting the amplifier corrects the power supply fault.
4. Check the DSUB (alarm) cable that connects between the SSPA and the external power supply. If this cable is pulled or making poor contact, this may cause a false power supply alarm.

Note that the amplifier M&C logic is designed to mute the amplifier if more than one power supply module faults. If the DSUB power supply alarm cable is removed, the amplifier will continue to operate but will show a persistent power supply fault.

Temperature Fault

If the unit shows a Temperature fault, the fault indicators should look like Figure 25. This is a major fault condition.



Figure 25: Fault Indicators, Temperature Fault

Follow the steps below to identify the cause of the temperature fault:

1. Check the ambient temperature of the room where the SSPA is installed against the environmental specifications for your amplifier. If the ambient temperature is beyond these limits, the unit may experience a temperature fault. If this is the case, action will need to be taken to bring the ambient temperature into the specified range.
2. If the ambient temperature is within the specified range and the unit still experiences a temperature fault, the operator should perform a visual inspection of the fans to make sure they all appear to be spinning.
3. Make sure the amplifier's heatsink is clean and clear of dust and debris. If not, use a can of compressed air to blow the dust out of the heat sink fins and clear of the plenum.
4. If a Fan fault is present along with a temperature fault, inspect the fans and replace a fan that is not functioning.
5. Check the Fan/Switch voltages on the Status > DC Power menu. The voltage should read approximately 28 VDC for each of the fans in the SSPA. If the voltage is lower than 25 VDC, the operator should check for a power supply fault.

Fan Fault

If the unit shows a Fan fault, the fault indicators should look like Figure 26. This is a minor fault condition that may accompany a major Temperature fault.



Figure 26: Fault Indicators, Fan Fault

Follow the steps below to attempt to clear the fan fault:

1. Inspect the fans. Replace a fan that is not functioning
2. The user should check the Fan/Switch Voltages on the Status > DC Power menu. The voltage should read approximately 28 VDC for each of the fans in the SSPA.

Forward RF Fault

If the unit shows a Forward RF fault, the fault indicators should look like Figure 27. The user can adjust the severity of this fault condition in the Fault Setup > Fwd RF/ALC menu. In the example below, the Fwd RF/ALC fault setting is set to HighRFMajor, so a Summary fault is also triggered if the forward RF exceeds the selected threshold level. See the Fwd RF/ALC Button description of the **Touchscreen Menu Structure** section.




Figure 27: Fault Indicators, Forward RF Fault

In the case of a Forward RF alarm, follow the steps below:

1. Check the forward RF level displayed on the touchscreen. If the user has access to a power meter or spectrum analyzer, this power level can be verified by means of the output sample port on the front panel.
2. Compare this value to the forward RF alarm threshold level in the Fault Setup > Fwd RF/ALC menu. If the threshold level is higher than the actual RF output level, this will produce a low RF alarm, providing that the low RF alarm option is enabled.
3. Ensure that the forward RF alarm threshold level is set to a value corresponding to the desired output level for the SSPA in question. The factory pre-set for this value is always 10 dBm below the specified P1dB compression point of the SSPA. However, you may wish to set this level closer to the desired output level in order to catch any minor fluctuations below the set level. If the level is set too high, the low RF alarm may be displayed when there are no legitimate problems. If the RF input signal has been lowered, this will also lower the output of the SSPA and may cause a low RF alarm.
4. If the user is certain that the amplifier is in an alarmed state due to problems other than the ones stated above, the user should verify that no other fault conditions are present. If a power supply fault, current fault, or voltage fault is present, this may also cause the low RF alarm to show.

RF Switch Fault

When the unit is configured as part of a redundant or phase combined system, if a transfer switch in the system does not complete a switch rotation, the switch symbol in the MIMIC display and the RF Switch fault indicator in the Fault Panel will turn red. See Figure 28.




Figure 28: Fault Indicators, RF Switch Fault

The user can adjust the severity of this fault condition in the Fault Setup > RF Switch Flt menu. In the example above, the RF Switch fault setting is set to Major Fault, so a Summary fault is also triggered. See the RF Switch Fault description in the **Touchscreen Menu Structure** section.

A fault condition is also triggered if the amplifier is not connected to the system transfer switch by a control cable. The user should make sure the switch cable is connected between the system amplifiers and switch(es). A faulty cable may also be the cause of an RF Switch fault.

Teledyne Paradise Datacom
 Drawing Number 216512-8 Revision E
 ECO A26266
 Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-8.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, 1:1 Internal Redundant System Operation

Teledyne Paradise Datacom
Drawing Number: 216512-9 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-9.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

This section describes how to configure and control a 1:1 redundant system which consists of two Teledyne Paradise Datacom SSPAs and a waveguide/coaxial switch.

Two Rack Mount SSPA units can be connected in a 1:1 redundant configuration, which can automatically switch to an operating amplifier if the online SSPA develops a system fault. In order to work in redundant mode, both SSPAs must be properly configured and interconnected. Because both SSPAs have a microprocessor unit, an additional controller is not required.

Two amplifiers can be connected to each other and to a waveguide/coaxial switch. One of the amplifiers is designated as "online"; the other is designated as "standby". The online SSPA receives the input RF signal and transmits an amplified RF signal to the RF load. The output of the standby SSPA is terminated at the dummy load. Figure 1 shows a block diagram of a typical 1:1 Redundant System.

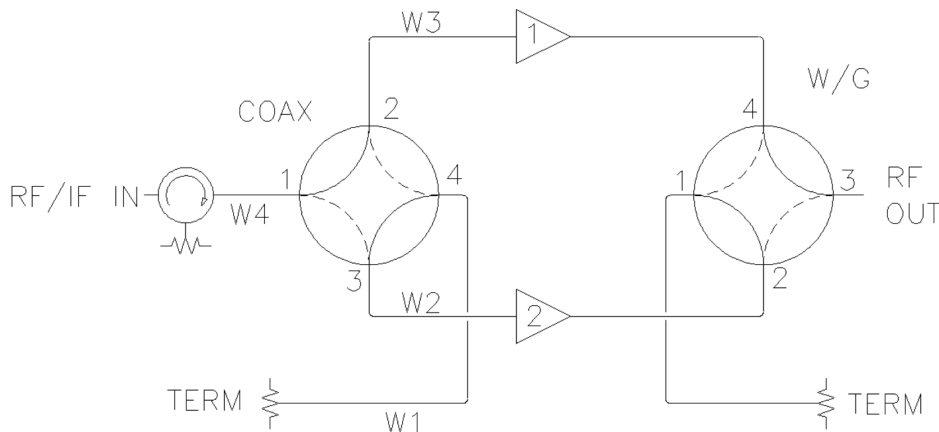


Figure 1: Block Diagram, 1:1 Redundant Systems

Two modes are available for the standby SSPA: "Hot" or "Cold" standby. An SSPA in "Hot" standby mode remains fully operational (the preferred method). An SSPA in "Cold" standby mode remains muted when off-line. This mode is only used where prime power conservation is critical.

When the system is in "Auto" mode, if a summary fault develops in the online amplifier, its state will be sensed by the standby SSPA through the link cable. If the standby SSPA is in a non-faulted state, it will force the waveguide switch to reposition and put itself into the online state. The process takes no more than 200 ms.

Both SSPAs constantly monitor the waveguide switch position. The proper position for the online SSPA is determined by the "Unit Status" setting. If the selected SSPA is configured as "HPA1," it will drive the RF switch to Position 1 to set itself to the online state. Selecting unit status to "HPA2" will configure that SSPA to drive the switch to Position 2 for the online state. In "Auto" mode, the online SSPA will make two attempts to force the waveguide switch to take proper position before accepting its new state.

⚠ Due to residual losses inherent in 1:1 redundant configurations (waveguide bends; switch and coupler losses), reduce the typical output power specification of a single amplifier by approximately 0.2 dB. For example, a single thread 100W amplifier has a typical saturated output power of 50.0 dB (100W). Placing two of these amplifiers in a 1:1 redundant system configuration would reduce the typical system saturated output power by 0.2 dB to 49.8 dB (96W). Actual losses will vary based on the system options.

Operation of a 1:1 system with controller is discussed in the Systems Controller with Touchscreen Operations Manual, document number 216351.

Required Hardware

Two Teledyne Paradise Datacom Rack Mount SSPA units are used for a 1:1 redundant configuration. The units are connected to each other through a link cable, which allows the exchange of online/standby statuses between SSPAs.

Both SSPA units are connected to the waveguide switch through a Y-cable. This allows either amplifier to drive the switch to its proper position. Each unit must be configured with a unique identity. If one SSPA is configured as "HPA1", the other should be configured as "HPA2". Both SSPAs must be set to 1:1 Redundancy mode.

RF Switch

The SSPA redundant system controls a waveguide/coaxial switch using the 6-pin rear panel connector J3. The switches are controlled by applying +28V to the common of the switch and pulsing either position to the ground. The system then verifies the position of the switch.

Switch Connector

The 6-pin connector J3, Molex P/N 43810-002 can be located on the SSPA rear panel. This connector is used to interface with the RF switch. Teledyne Paradise Datacom recommends the use of following parts to build a mating pair to this connector (all P/N by Molex): Pin Crimp: 39-00-0039; receptacle: 39-01-2060; strain relief: 15-04-0296.

Table 1 shows the proper wiring to the MS3116F10-6S RF switch connector, commonly used on waveguide switches. Figure 2 shows an outline drawing of a typical switch connector cable.

Table 1: RF Switch Connector Wiring

HPA1 (P2)	HPA2 (P3)	Switch1 (P1)	Description
1	1	B	Common +28V
3	3	A	Switch Pos 1
2	2	C	Switch Pos 2

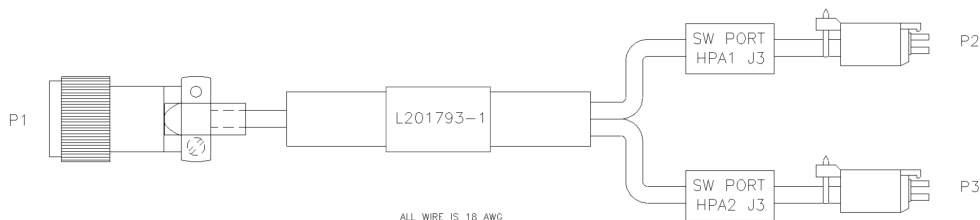


Figure 2: Outline Drawing, Switch Connector Cable

Link Cable

The 9-pin male connector J8 Link Port is used to link the HPA with another redundant unit in order to pass online/standby status information between them. The link cable is an asymmetrical crossover cable. Take care to match the labels on each cable with the HPA status of the units (i.e., plug cable end with label "HPA1" into the SSPA with selected "HPA1" status, etc).

Table 2 shows the pin outs of J8. Figure 3 shows an outline drawing of a typical link cable.

Table 2: Link Port (J8) Pin-out

J8 Pin #	Description
6, 7	Link Out (connect to "Link In" of Second SSPA)
8, 9	Link In (connect to "Link Out" of Second SSPA)
1, 2, 3, 4	Reserved, make no connection
5	Ground (Connect to same pin on Second SSPA)

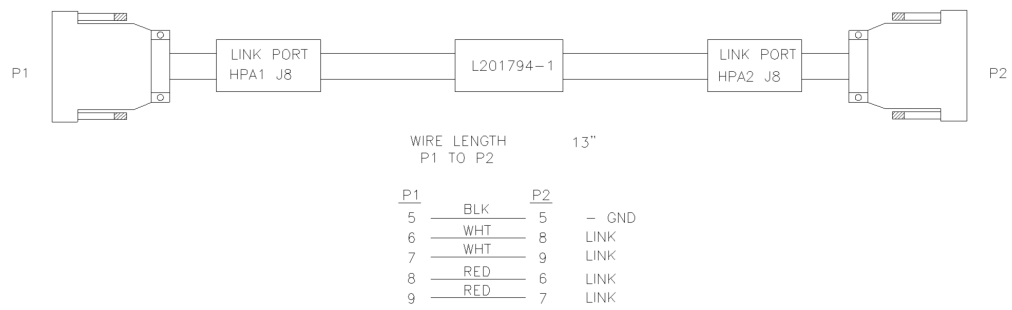


Figure 3: Outline Drawing, Link Cable

⚠ Warning! Do not remove this cable while the system is in operation! The system will not operate properly.

Installation and SSPA Configuration

The two RM SSPA units are designed to be installed in a standard EIA rack.

 **Warning!** Ensure the equipment rack is properly supported to prevent tipping forward when the amplifiers are extended on their slides.

HPA1 should be installed above HPA2 in the equipment cabinet. Waveguide, semi-rigid cables (marked with the amplifier/switch connections), Switch cable and Link cable must be attached to the corresponding connectors on both amplifiers.

Both HPAs need to be configured for 1:1 mode (internal control). Each unit's status software setting has to be set to "HPA1" or "HPA2" according to the unit's physical position in the rack. See below for step-by-step instructions.

Configuring HPAs for 1:1 Redundant Mode (Internal Control)

Follow the procedures below to configure each system HPA to work in 1:1 Redundant Mode with Internal Control.

Configure HPA1

1. On the front panel touchscreen of HPA1, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:1 Mode box;
5. Once the System Mode setting is accepted, tap the HPA Status button;
6. Tick the HPA1 box;
7. Once the HPA Status setting is accepted, tap the Standby Select button;
8. Tick the Online box;
9. Once the Standby Select setting is accepted, tap the Switching button;
10. Tick the box for the SSPA switching method used in your system: Input Switching or Input Splitting.

 **Note:** The SSPA Switching selection has no impact on the actual performance of the redundant system, but is only used to display either a switch or splitter on the MIMIC panel display on the touchscreen. Both units in a 1:1 system must use the same switching method.

Configure HPA2

1. On the front panel touchscreen of HPA2, tap the Home icon;
2. Tap the Redundancy button;
3. Tap the System Mode button;
4. Tick the 1:1 Mode box;
5. Once the System Mode setting is accepted, tap the HPA Status button;
6. Tick the HPA2 box;
7. Once the HPA Status setting is accepted, tap the Standby Select button;
8. Tick the Online box;
9. Once the Standby Select setting is accepted, tap the Switching button;
10. Tick the box for the SSPA switching method used in your system: Input Switching or Input Splitting.

 **Note:** In a 1:1 system using a system controller (RCP2-1100), the System Mode for both amplifiers in the system must be set to Standalone.

Online / Standby Amplifier Selection

To determine the online state of a particular SSPA in a system, check the triangular amplifier icon on the front panel mimic display. If the display shows the individual amplifier status, tap on the hand icon as shown in Figure 4 to view the system status.



Figure 4: Tap icon to switch to System Screen

The resulting screen will display the redundant system signal path. See Figure 5. The Online (transmitting) amplifier is illuminated green; the Standby amplifier is illuminated white. An amplifier with a fault condition is illuminated red.



Figure 5: Touchscreen display showing System Signal Path screen

To put the Online SSPA in Standby mode, tap the green triangular amplifier icon in the front panel mimic display. If a confirmation window appears, tap the OK button. If the system is in "Auto" switching mode, the second SSPA will accept the Online state only if there is no summary alarm.

In "Manual" switching mode, the Standby SSPA will always accept the Online state regardless of its own fault status.

The triangular amplifier icon on the second SSPA should illuminate green, indicating it is now in the Online state. The waveguide switches will rotate to the correct position. If the second SSPA does not accept the Online state, the first SSPA will revert to the Online state after 1 second.

⚠ Important! Only the Online amplifier may give away its status by tapping the triangular amplifier icons on the signal path display. Attempts to switch the standby unit to the online state will not work.

Figure 6 shows the front panel touchscreens for two amplifiers in a 1:1 Redundant System configuration. Unit 1 is in the Online state and Unit 2 is in the Standby state. The signal path display, a green dotted line, shows the signal passing from the Input source, through the first switch, on to the Unit 1 amplifier, then through the second switch to the system output.

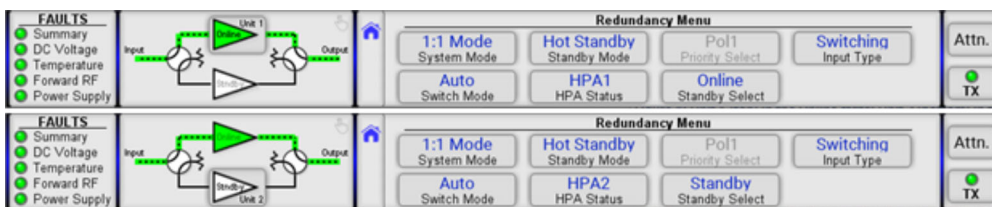


Figure 6: Unit 1 (top) in the Online state; Unit 2 (bottom) in the Standby state

Figure 7 shows the front panel touchscreens of the 1:1 Redundant System after the Online state has been passed to Unit 2. Note that the signal path display shows the signal passing from the Input source, through the first switch, on to the Unit 2 amplifier, then through the second switch to the system output.

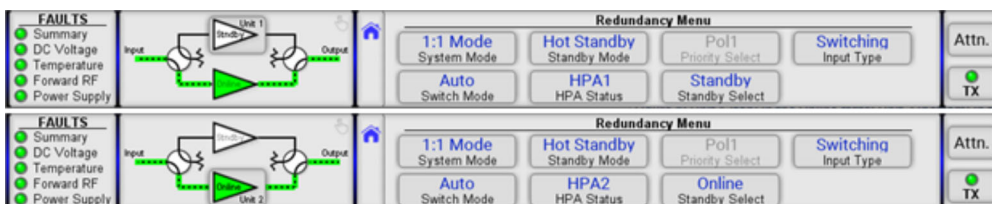


Figure 7: After switch-over, Unit 1 (top) in the Standby state; Unit 2 (bottom) in the Online state

The user can verify the state of the waveguide switch by browsing to the Status > Redundancy screen on the touchscreen display. In 1:1 Redundant Systems, the Switch 1 Position will show Pos 1, Pos 2, or Fault. If the switch position cannot be detected; "ERR" will be displayed.

Note that when a switch fault is detected, the switch icons in the signal path display will illuminate red. See Figure 8. In the Status > Redundancy informative menu of the front panel display, the Switch 1 Position status indicates a Fault condition.



Figure 8: Signal path display showing Switch Fault conditions

Auto Versus Manual Switching Mode

Normal operation mode for a 1:1 redundant configuration is "Auto". This mode provides automatic detection of SSPA faults and switchover to the operational SSPA. The system is also protected from operator errors; selecting a faulted SSPA is not allowed.

In situations when system maintenance must be performed, "Manual" mode should be used. In "Manual" mode, the operator can select the online and standby SSPA by pressing the triangular amplifier icon. The system will not provide automatic switchover from a faulted SSPA, but rather will keep the selected SSPA online, regardless of its state.



Note: In order to function normally, both SSPAs in the system must utilize the same switching mode.

Physically Rotating Transfer Switch

It is possible to physically rotate the shaft on the transfer switch to change the online and standby amplifiers. This can be done in either manual or automatic mode.

In "Auto" mode, the system will prevent the user from putting a faulted SSPA online. The online SSPAs will keep trying to rotate the switch until the proper configuration is restored.

If manual rotation is completed, the triangular amplifier icon(s) and switch icon(s) on the front panel mimic display will change state to reflect the new system configuration.

Switchover Muting

The option to set the amplifier to mute during the interval when the transfer switch changes position was introduced into the SSPA control setup to overcome a problem with microwave arcing. Such arcing may potentially damage a switching component if the switching RF power exceeds 400 Watts. This particular problem becomes a critical issue if coaxial RF pass switches are used.

In general, all Teledyne Paradise Datacom SSPAs are well protected against high reflected power conditions, which may take place during output microwave switchover. However, waveguide or coaxial switches will develop an internal electrical arc during switchover if the output power is significant. Such conditions will not lead to instant failure, but over time may diminish some critical RF switch characteristics.

If this option is activated, the system ability to output RF power will be bonded to the switch position sensing circuitry. Such circuitry consists of the following components: SSPA electronic switch position detector; wiring harness between SSPA and RF switch; RF switch position sensors. Failure of any of these components will lead to a break in transmission.



Note: The factory strongly recommends to NOT turn on this option unless absolutely necessary.

- On the front panel touchscreen of each HPA in the system, tap the Home icon;
- Tap the Fault Setup button;
- Tap the RF Switch Fit button;
- Tick the MuteOnSwitch box.

Parallel Port Special Functions

In 1:1 Redundant Mode, each SSPA chassis will change some of its parallel I/O functions to alternative functions. See Table 3 for details.

Table 3: Parallel I/O (Port J7) Pin-outs

Pin	Function/Description
1	Closed on Power Supply Fault Form C relay NC
2	Open on Power Supply Fault Form C relay NO
20	Power Supply Fault Common
21	2. Redundancy Mode. Closed on Automatic switchover mode. Form C relay NC; 1. Standalone mode. Closed on Auxiliary Fault
22	2. Redundancy Mode. Closed on Manual switchover mode. Form C relay NO; 1. Standalone Mode. Open on Auxiliary Fault
3	Auxiliary Fault/Auto-Manual Common
4	Open on Mute. Form C Relay NC
5	Closed on Mute. Form C Relay NO
23	Mute Status Common
24	Closed on BUC Fault. Form C Relay NC
25	Open on BUC Fault. Form C Relay NO
6	BUC Fault Common
7	Closed on High Temperature Fault. Form C Relay NC
8	Open on High Temperature Fault. Form C Relay NO
26	High Temperature Fault Common
27	2. Redundancy Mode. Closed on HPA Standby. Form C relay NC; 1. Standalone mode. Closed on Regulator Low Voltage Fault
28	2. Redundancy Mode. Closed on HPA Online Mode. Form C relay NO; 1. Standalone Mode. Open on Regulator Low Voltage Fault.
9	Regulator Low Voltage Fault/Standby-Online Common
10	Closed on DC Current Low Fault. Form C Relay NC
11	Open on DC Current Low Fault. Form C Relay NO
29	DC Current Low Fault Common
30	Closed on Low Forward RF Fault. Form C Relay NC
31	Open on Low Forward RF Form C Relay NO
12	Low Forward RF Fault Common
16	Auto/Manual toggle input. 50mS Closure to isolated ground to activate
17	Mute/Unmute toggle input. 50mS Closure to isolated ground to activate
18	Auxiliary Fault & Auxiliary Mute Input. 50 ms min. response
35	HPA Standby input. 50mS Closure to isolated ground to activate
36	Local/Remote toggle. 50mS Closure to isolated ground to activate
37	Fault clear. 50mS Closure to isolated ground to activate
19	Isolated Signal Ground
15	+5V Isolated Power 20 mA
13, 32	+28V Auxiliary Power 1A
14, 33	Chassis Ground

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-9.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, 1:2 Internal Redundant System Operation

Teledyne Paradise Datacom
Drawing Number: 216512-10 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-10.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

Three Rack Mount SSPA units with controller firmware version greater than 2.50 and I/O board hardware version greater than 1 can be connected together to form a 1:2 redundant system without a separate 1:2 redundancy controller (internal redundancy). The system provides automatic switchover to the spare SSPA to either polarization path in case of a primary SSPA malfunction. In the case of two SSPA malfunctions, the backup SSPA can be switched to either polarization path, according to a polarization priority selection setting.

The standard 1:2 configuration has Amp 1 online in the polarization 1 path, Amp 3 online in the polarization 2 path, and Amp 2 acting as spare backup for either Amp 1 or Amp 3 (see Figure 1).

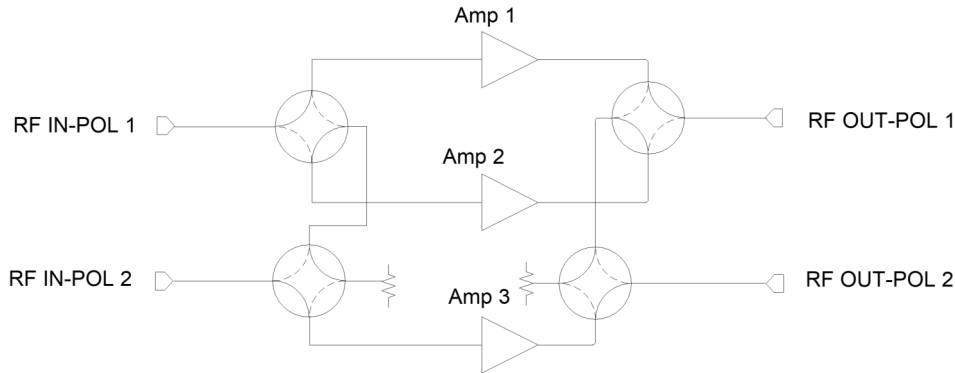


Figure 1: Block Diagram, 1:2 Redundant System

A 1:2 redundancy system normally requires a separate redundancy controller (RCP). The RCP is used to constantly check the state of the controlled HPAs and, in case of malfunction, rotate the waveguide switches according to an internal logic table.

Operation of a 1:2 system with controller is more fully discussed in the Systems Controller with Touchscreen Operations Manual, document number 216351.

Teledyne Paradise Datacom also offers an internal 1:2 redundancy system, where the extra controller is not required and the state of the system is negotiated between all three HPAs over the redundancy link and switch cables. In this system, the link cable is used to pass information regarding the standby/online state between the HPAs. The switch cable is used to drive waveguide switches and determine their current position.

The system current state is determined by the position of the two waveguide switches. Each HPA constantly monitors the state and assumes an online or standby state from the switch position. All three HPAs need to be configured to "HPA1", "HPA2" and "HPA3" status according to their relative position to the waveguide switches. These settings need to be provided to each HPA by the operator through the HPA front panel menus or through a remote control interface.

The system is capable of operating in 2 modes: "Auto" and "Manual". See the **Auto vs. Manual Switching Mode** section.

Normally, the system needs to be configured in "Auto" mode. In this mode, when an HPA develops a summary alarm, the system will automatically switch to the backup HPA. "Manual" mode should be used only for maintenance purposes. During this mode, automatic switchover will be performed if a malfunctioned HPA's controller card is completely dead. If an HPA has a summary fault, but the controller card is still alive then HPA will remain in online state.

Both modes allow the user to switch HPAs from online to standby state by pressing triangular amplifier icon on the front panel or through command on remote interface. Typical switchover time is 200mS or less. Switchover also can be performed by physical rotation of one or both waveguide switches. Unlike internal 1:1 redundancy mode, the SSPA will not prevent the operator from turning the switch.

Required Hardware

- Three RM SSPAs with controller card firmware revision better than 2.50 and I/O card version better than 1. Internal 1:2 redundancy mode for earlier hardware/firmware revisions is not available. If you purchased your SSPA as a standalone unit or as part of a 1:1 system, consult with Teledyne Paradise Datacom to determine if the revision of digital controller is 1:2 enabled. 1:2 redundancy Mode, unit HPA status and polarization priority need to be selected on all connected HPAs.
- 1:2 link cable. The link cable allows redundancy state information to pass between the HPAs and should be connected to the HPA's Link Port, J8.

⚠ Important! Cable ends are not symmetrical! When connecting HPAs with the link cable make sure that connected units HPA status (HPA1, HPA2 or HPA3) match the labels on the link cable ends!

- 1:2 switch cable. This cable provides an electrical connection between the HPAs and waveguide switches. The cable allows either HPA to control both waveguide switches.

⚠ Important! Cable ends are not symmetrical! When connecting, observe the labels!

RF Switches

The SSPA redundant system controls a -28V waveguide/coaxial switch using the 6-pin rear panel connector J3. The switches are controlled by applying +28V to the common of the switch and pulsing either position to the ground. The system then verifies the position of the switch.

Switch Connector (J3)

The 6-pin connector J3, Molex P/N 43810-002 can be located on the SSPA rear panel. This connector is used to interface with the RF switches. Paradise Datacom recommends the use of the following parts to build a mating pair to this connector (all P/N by Molex): Pin Crimp: 39-00-0039; receptacle: 39-01-2060; strain relief: 15-04-0296.

Table 1 shows the proper wiring to the MS3116F10-6S RF switch connector, commonly used on waveguide switches. Figure 2 shows an outline drawing of a typical switch connector cable.

Table 1: RF Switch Connector Wiring

HPA1 (P5)	HPA2 (P4)	HPA3 (P3)	Switch2 (P2)	Switch1 (P1)	Description
1	1	1	-	B	Common +28V
2	2	2	-	C	Switch 1 Pos 2
3	3	3	-	A	Switch 1 Pos 1
4	4	4	B	-	Common +28V
5	5	5	C	-	Switch 2 Pos 2
6	6	6	A	-	Switch 2 Pos 1

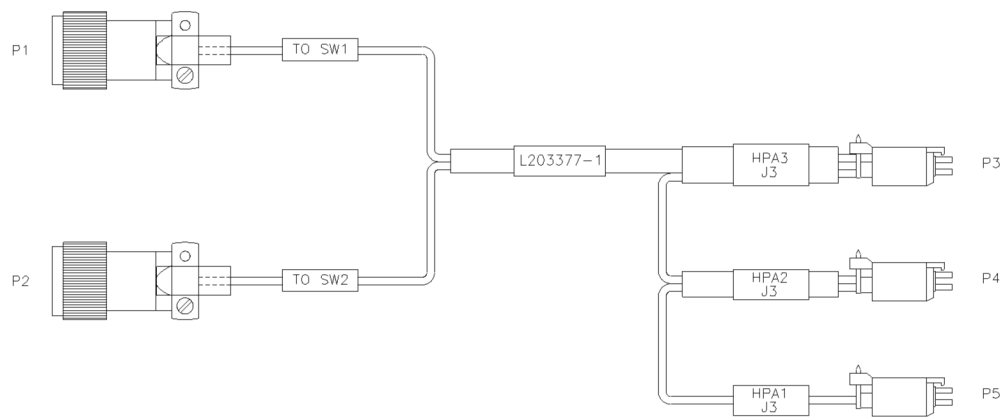


Figure 2: Outline Drawing, Switch Connector Cable

Link Cable

The 9-pin male connector J8 Link Port is used to link an HPA with the other two redundant units in order to pass online/standby status information between them. The link cable is an asymmetrical crossover cable. Take care to match the labels on each cable with the HPA status of the units (i.e., plug cable end with label "HPA1" into the SSPA with selected "HPA1" status, etc).

Warning! Do not remove this cable while the system is in operation! The system will not operate properly.

Table 2 shows the pin-outs of J8. Figure 3 shows an outline drawing of a typical link cable. Figure 4 shows a representation of how switch and link cables are connected between the SSPAs and the waveguide switches.

Table 2: Link Cable Wiring

HPA1 (Port J8) Pin #	Description	HPA2 (Port J8) Pin #	Description	HPA3 (Port J8) Pin #	Description
7	Link Out to HPA3	-	-	8	Link In from HPA1
-	-	6	Link Out to HPA3	9	Link In from HPA2
6	Link Out to HPA2	8	Link In from HPA1	-	-
8	Link In from HPA2	7	Link Out to HPA1	-	-
-	-	9	Link In from HPA3	6	Link Out to HPA2
9	Link In from HPA3	-	-	7	Link Out to HPA1

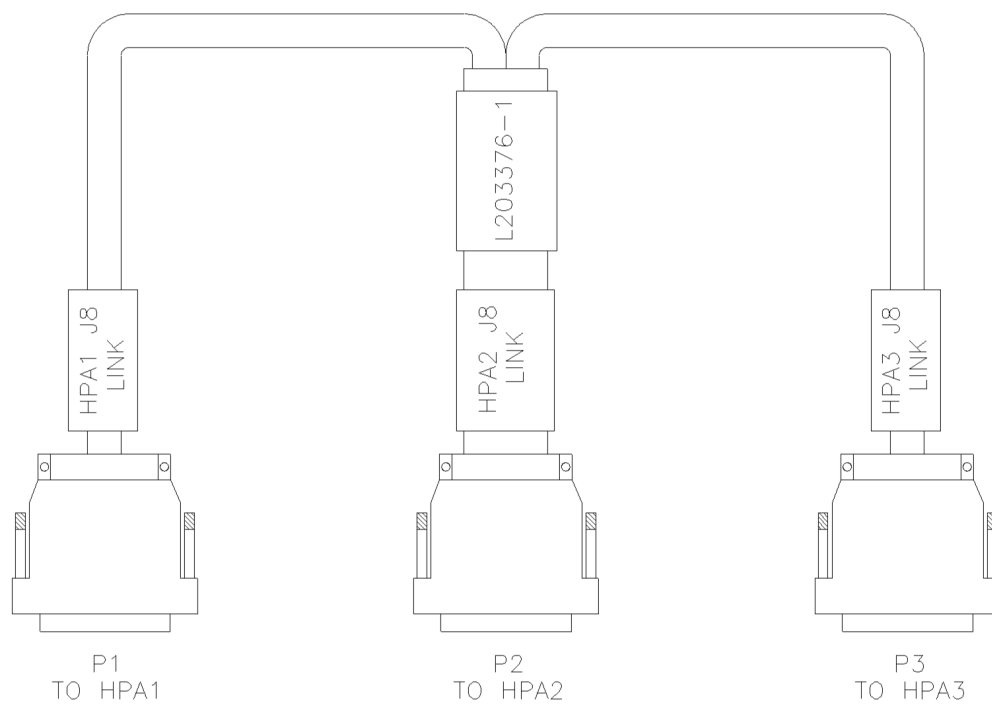


Figure 3: Outline Drawing, Link Port Cable

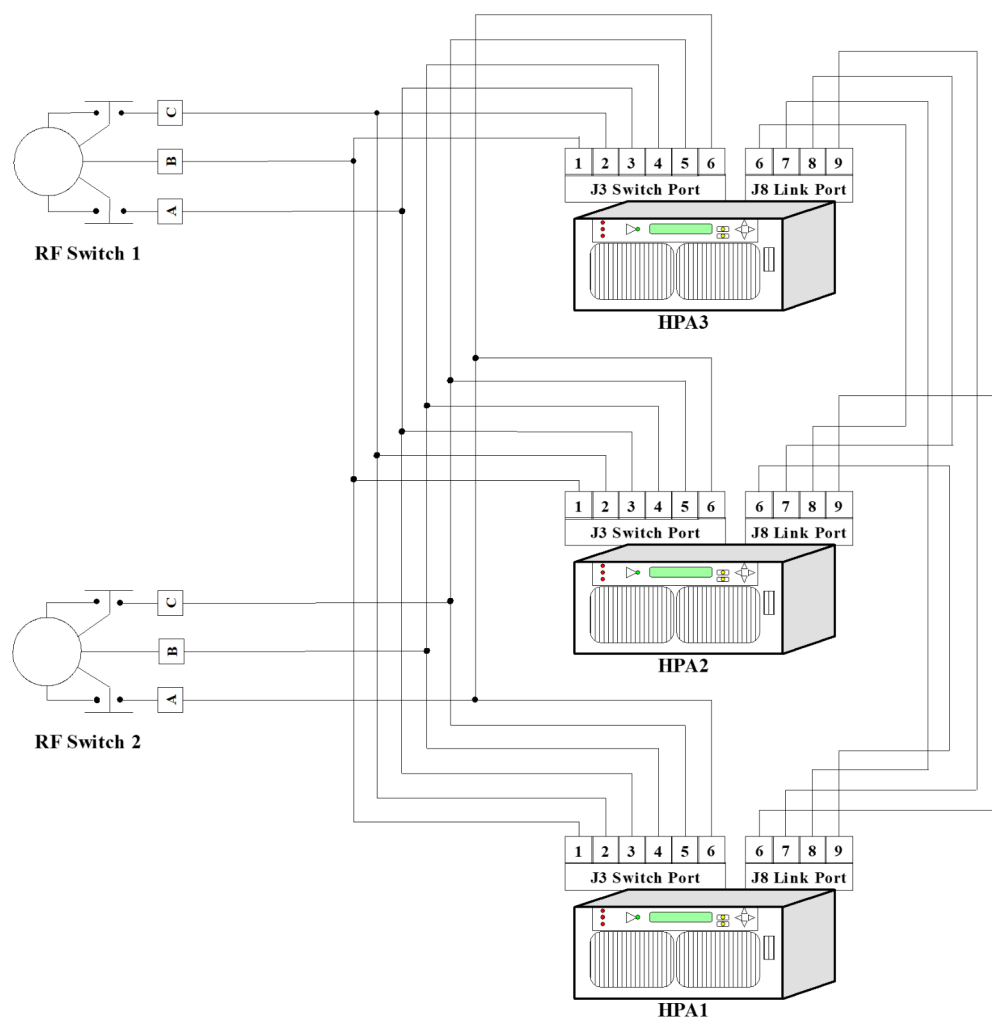



Figure 4: 1:2 Redundant System Wiring Diagram

Installation and SSPA Configuration

Installation

All three SSPA units are designed to be installed in a standard EIA rack.

 **Warning!** Ensure the equipment rack is properly supported to prevent tipping forward when the SSPAs are extended on their slides.

HPA3 should be located on the bottom of the rack, HPA2 should be located directly above HPA3 and HPA1 should be located above HPA2. The waveguide assembly (or semi-rigid coax cables) and mounting brackets connect the three units.

All three HPAs need to be configured for 1:2 mode (internal control). Each unit's status software setting has to be set to "HPA1", "HPA2", or "HPA3" according to the unit's physical position in the rack. See below for step by step instructions.

Configure HPAs for 1:2 Redundant Mode (Internal Control)

Follow the directions below to configure the system HPAs to work in 1:2 redundant mode with internal control.

Configure HPA1

- On the front panel touchscreen of HPA1, tap the Home icon;
- Tap the Redundancy button;
- Tap the System Mode button;
- Tick the 1:2 Mode box;
- Once the System Mode setting is accepted, tap the HPA Status button;
- Tick the HPA1 box;
- Once the HPA Status setting is accepted, tap the Standby Select button;
- Tick the Online box.

Configure HPA2

- On the front panel touchscreen of HPA2, tap the Home icon;
- Tap the Redundancy button;
- Tap the System Mode button;
- Tick the 1:2 Mode box;
- Once the System Mode setting is accepted, tap the HPA Status button;
- Tick the HPA2 box;
- Once the HPA Status setting is accepted, tap the Standby Select button;
- Tick the Standby box.

Configure HPA3

- On the front panel touchscreen of HPA3, tap the Home icon;
- Tap the Redundancy button;
- Tap the System Mode button;
- Tick the 1:2 Mode box;
- Once the System Mode setting is accepted, tap the HPA Status button;
- Tick the HPA3 box;
- Once the HPA Status setting is accepted, tap the Standby Select button;
- Tick the Online box.

 **Note:** In a 1:2 system using a system controller (RCP2-1200), the System Mode for each amplifier in the system must be set to "Standalone".

Set SSPA Polarization Priority

Polarization priority selection becomes very important in then case when two out of the three SSPAs have developed summary faults. In this occasion, the remaining online SSPA may redirect its output to support either polarization. This setting applies only for HPA1 and HPA2. HPA3 has no physical ability to redirect its output to polarization 1 output due to obvious topological factors. The setting for HPA1 or HPA2 doesn't have to match and may be selected to suit the particular system needs.

Set Priority Select for HPA1

- On the front panel touchscreen of HPA1, tap the Home icon;
- Tap the Redundancy button;
- Tap the Priority Select button;
- Tick the box for desired polarization priority for HPA1: Pol1 or Pol2.

Set Priority Select for HPA2

- On the front panel touchscreen of HPA2, tap the Home icon;
- Tap the Redundancy button;
- Tap the Priority Select button;
- Tick the box for desired polarization priority for HPA2: Pol1 or Pol2.

Online/Standby Amplifier Selection

To determine the online state of a particular SSPA in a system, check the triangular amplifier icon on the front panel mimic display. If the display shows the individual amplifier status, tap on the hand icon as shown in Figure 5 to view the system status.



Figure 5: Tap icon to switch to System Screen

The resulting screen will display the redundant system signal path. See Figure 6. The Online (transmitting) amplifiers are illuminated green; the Standby amplifier is illuminated white. An amplifier with a fault condition is illuminated red.



Figure 6: Touchscreen display showing 1:2 Redundant System Signal Path screen

To put one of the Online SSPAs in Standby mode, tap the green triangular amplifier icon on the front panel mimic display. If a confirmation window appears, tap the OK button. If the system is in "Auto" switching mode, the Standby SSPA will accept the Online state only if there is no summary alarm.

In "Manual" switching mode, the Standby SSPA will always accept the Online state regardless of its own fault status.

The triangular amplifier icon on the SSPA previously in Standby should illuminate green, indicating it is now in the Online state. The waveguide switches will rotate to the correct position. If the SSPA does not accept the Online state, the original SSPA will revert to the Online state after 1 second.

⚠ Important! Only the Online amplifiers may give away their status by tapping the triangular amplifier icons on the signal path display. Attempts to switch the standby unit to the online state will not work.

Figure 7 shows the front panel touchscreens for three amplifiers in a 1:2 Redundant System configuration. Unit 1 and Unit 3 are in the Online state and Unit 2 is in the Standby state. The signal path display, a green dotted line, shows the signal passing from the Input source, through the first set of switches, on to the Unit 1 and Unit 3 amplifiers, then through the second set of switches to the system outputs.



Figure 7: HPA 2 in Standby mode; HPA 1 and HPA 3 in Online mode

⚠ Note that Unit 2 is the standby amplifier for Polarity 1 (POL-1) and Polarity 2 (POL-2). The Priority Select setting is used to determine which polarity the standby amplifier should prioritize should the online amplifiers for both polarities enter fault conditions at the same time. In the example above, the Priority Select setting is set to POL 1. The Priority Select setting is only active for 1:1 redundant systems.

Figure 8 shows the front panel touchscreens of the 1:2 Redundant System after the Online state has been passed from Unit 1 to Unit 2, placing Unit 1 in Standby mode. Note that the signal path display shows the signal passing from the Input source, through the first set of switches, on to the Unit 2 and Unit 3 amplifiers, then through the second set of switches to the system outputs.

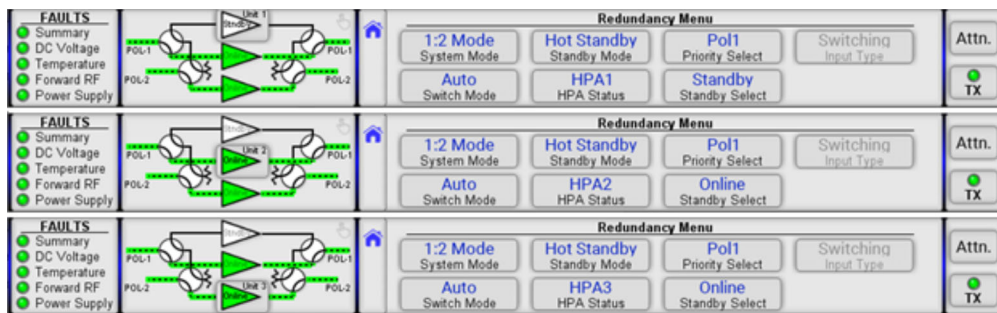


Figure 8: HPA 1 in Standby mode; HPA 2 and HPA 3 in Online mode

Figure 9 shows the front panel touchscreens of the 1:2 Redundant System after the Online state has been passed from Unit 3 to Unit 2, placing Unit 3 in Standby mode. Note that the signal path display shows the signal passing from the Input source, through the first set of switches, on to the Unit 1 and Unit 2 amplifiers, then through the second set of switches to the system outputs.



Figure 9: HPA 3 in Standby mode; HPA 1 and HPA 2 in Online mode

The SSPA polarity output selection can be monitored from the Status > Redundancy informative menu of the front panel display, or through the remote control protocol. The SSPAs will indicate "Pol1" or "Pol2", depending on the selected Priority Select mode.

Note that when a switch fault is detected, the switch icons in the signal path display will illuminate red. See Figure 10. In the Status > Redundancy informative menu of the front panel display, the Switch 1 Position status and Switch 2 Position status indicate a Fault condition.




Figure 10: Signal path display showing Switch Fault conditions

Auto Versus Manual Switching Mode

Normal operating mode for a RM SSPA in 1:2 redundant configuration is "Auto." This mode provides automatic detection of a SSPA fault and switchover to the operational SSPA. The system is also protected from operator error; selecting a faulted SSPA is not allowed.

In situations when system maintenance must be performed, "Manual" mode should be used. In "Manual" mode, the operator can select the online and standby SSPA by pressing the triangular amplifier icon. The system will not provide automatic switchover from a faulted SSPA, but rather will keep the selected SSPA online, regardless of its state.



Note: In order to function normally, all SSPAs in the system must utilize the same switching mode.

Physically Rotating Transfer Switch

It is possible to physically rotate the shaft on the transfer switch to change the online and standby amplifiers. This can be done in either manual or automatic mode.

In "Auto" mode, the system will prevent the user from putting a faulted SSPA online. The online SSPAs will keep trying to rotate the switch until the proper configuration is restored.

If manual rotation is completed, the triangular amplifier icon(s) and switch icon(s) on the front panel mimic display will change state to reflect the new system configuration.

Switchover Muting

The option to set the amplifier to mute during the interval when the transfer switch changes position was introduced into the SSPA control setup to overcome a problem with microwave arcing. Such arcing may potentially damage a switching component if the switching RF power exceeds 400 Watts. This particular problem becomes a critical issue if coaxial RF pass switches are used.

In general, all Teledyne Paradise Datacom SSPAs are well protected against high reflected power conditions, which may take place during output microwave switchover. However, waveguide or coaxial switches will develop an internal electrical arc during switchover if the output power is significant. Such conditions will not lead to instant failure, but over time may diminish some critical RF switch characteristics.

If this option is activated, the system ability to output RF power will be bonded to the switch position sensing circuitry. Such circuitry consists of the following components: SSPA electronic switch position detector; wiring harness between SSPA and RF switch; RF switch position sensors. Failure of any of these components will lead to a break in transmission.



Note: The factory strongly recommends to NOT turn on this option unless absolutely necessary.

- On the front panel touchscreen of each HPA in the system, tap the Home icon;
- Tap the Fault Setup button;
- Tap the RF Switch Fit button;
- Tick the MuteOnSwitch box.

Parallel Port Special Functions

As with any redundant mode, each SSPA chassis will change some of its parallel I/O functions to an alternative. See Table 3 for details.

Table 3: Parallel I/O (Port J7) Pin-outs

Pin	Function/Description
1	Closed on Power Supply Fault Form C relay NC
2	Open on Power Supply Fault Form C relay NO
20	Power Supply Fault Common
21	2. Redundancy Mode. Closed on Automatic switchover mode. Form C relay NC 1. Standalone mode. Closed on Auxiliary Fault
22	2. Redundancy Mode. Closed on Manual switchover mode. Form C relay NO 1. Standalone Mode. Open on Auxiliary Fault
3	Auxiliary Fault/Auto-Manual Common
4	Open on Mute. Form C Relay NC
5	Closed on Mute. Form C Relay NO
23	Mute Status Common
24	Closed on BUC Fault. Form C Relay NC
25	Open on BUC Fault. Form C Relay NO
6	BUC Fault Common
7	Closed on High Temperature Fault. Form C Relay NC
8	Open on High Temperature Fault. Form C Relay NO
26	High Temperature Fault Common
27	2. Redundancy Mode. Closed on HPA Standby. Form C relay NC 1. Standalone mode. Closed on Regulator Low Voltage Fault
28	2. Redundancy Mode. Closed on HPA Online Mode. Form C relay NO 1. Standalone Mode. Open on Regulator Low Voltage Fault.
9	Regulator Low Voltage Fault/Standby-Online Common
10	Closed on DC Current Low Fault. Form C Relay NC
11	Open on DC Current Low Fault. Form C Relay NO
29	DC Current Low Fault Common
30	Closed on Low Forward RF Fault. Form C Relay NC
31	Open on Low Forward RF Form C Relay NO
12	Low Forward RF Fault Common
16	Auto/Manual toggle input. 50mS Closure to isolated ground to activate
17	Mute/Unmute toggle input. 50mS Closure to isolated ground to activate
18	Auxiliary Fault & Auxiliary Mute Input. 50 ms min. response
35	HPA Standby input. 50mS Closure to isolated ground to activate
36	Local/Remote toggle. 50mS Closure to isolated ground to activate
37	Fault clear. 50mS Closure to isolated ground to activate
19	Isolated Signal Ground
15	+5V Isolated Power 20 mA
13, 32	+28V Auxiliary Power 1A
14, 33	Chassis Ground

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-10.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Indoor RM SSPAs, Remote Control Protocol

Teledyne Paradise Datacom
Drawing Number: 216512-11 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-11.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Overview

A system which includes an SSPA can be managed from a remote computer over a variety of remote control interfaces (see Figure 1).

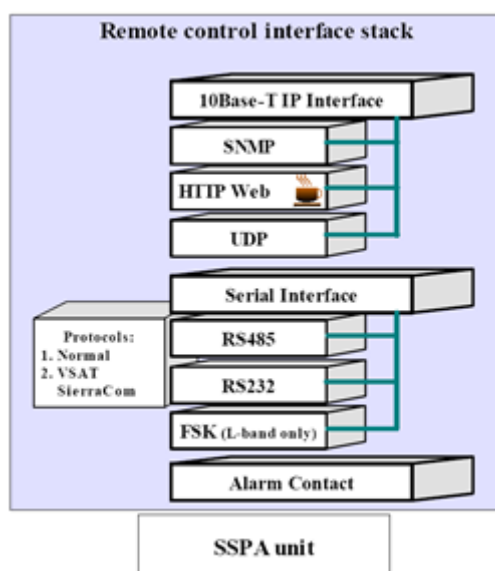


Figure 1: Remote Control Interface Stack

The parallel port on SSPA unit provides a simple form of remote control. There are 10 "dry" Form-C relay contacts for remote monitoring and six (6) galvanic isolated inputs for remote control commands. Parallel interface is always enabled, and does not require any special settings to operate.

Serial interface supports both RS232 and RS485 standards. The control protocol supports two formats: Normal serial protocol and ASCII based protocol suitable for HyperTerminal applications. Serial interface is equipped with overvoltage and overcurrent protection and benefits from full galvanic isolation from the chassis ground for extra protection.

The Ethernet interface supports multiple communication standards which can be used exclusively or simultaneously depending on the selected setting:

- [IPNet - UDP encapsulated Normal serial protocol;](#)
- [SNMP V1 with support of SNMP traps;](#)
- [HTTP web interface](#)

Serial protocol format for both RS232 and RS485 interfaces is set at no parity, 8 bit, 1 stop bit, no handshaking. If using a Terminal mode protocol, the SSPA provides remote menu access through a HyperTerminal program or through an actual hardware terminal.

Ethernet interface is auto selectable between 10 and 100 Mbit/s speeds, with a maximum node length of 100 feet. Use of CAT5E or CAT6 cables are preferred. CAT5 cable can be used for 10 Base-T standard or short runs of 100 Base-T.

The J4 connector for RS232 utilizes a standard DCE 9-pin pin-out (a straight through cable is required for connecting to a remote PC RS232 port). For this interface, a maximum cable run of 100 feet can be achieved for 9600 Baud, and lower speed rates with a quality ground shielded cable.

The RS485 interface pin-out is compatible with most 9-pin RS485 adapters. The interface always works in half-duplex mode and is suitable for either 4- or 2-wire RS485 configurations. The maximum achievable node length for this interface is 1500 feet. Proper termination and use of shielded twisted pair cable is required to achieve long cable runs.

The Digicor5 digital platform controller allows simultaneous support of multiple remote control interfaces.

Table 1 shows a list of enabled interfaces depending on the chosen interface setting.

Table 1: Interfaces Enabled Based on Chosen Interface Setting Selection

Interface Selection	Supported Serial Interface	Supported IP Interface
RS232	RS232	IPNet, Web M&C (read/write), SNMP (read/write)
RS485	RS485	IPNet, Web M&C (read/write), SNMP (read/write)
IPNet	RS485	IPNet, Web M&C (read/write), SNMP (read only)

SNMP	RS485	Web M&C (read only), SNMP (read/write)
------	-------	--

Serial protocol is an independent selection and allows support of Normal or Terminal mode protocols. Operation over IP interface remains unchanged regardless of serial protocol selection.

Remote Control - Parallel

Control Outputs

The hardware behind the form C relay is a single pole, double throw relay. Under normal operation (no alarms) the relays are in an energized state. When a fault occurs or the controller is powered off, the relays are in a de-energized state. The relay contacts are capable of handling a maximum of 30 VDC @ 1A . The form C relay is shown schematically in Figure 2.



Figure 2: Parallel I/O Form-C Relay

Control Inputs

All parallel control inputs feature galvanic isolation from the chassis ground. Pull up resistors are provided on each input. To trigger a remote input command, the input should be pulled to port signal ground. All inputs except the Auxiliary fault input are pulse activated. Pulse relevant pin to signal ground (J7 pin 19) for at least 20mS for function activation.

For example: To change the current mute state of the SSPA to opposite, provide momentary connection for at least 20 mS between pin 17 (Mute Input) of 37-pin connector J7 to pin 19 (Signal Ground). Subsequent pulses will be ignored until Mute state is changed to opposite. Typical time for command propagation depends on type of SSPA and can vary from 100 to 500 mS. Current Mute state can be monitored by dry Form-C relay contacts 4-23-5.

Auxiliary input is level activated. Auxiliary input function and logic is user selectable through the front panel or over remote interface.

Mute input is set up to be pulse activated by default. However, by special request it could be changed to level activated (Mute on Low or High logic levels). Contact Teledyne Paradise Datacom if you need Mute activation logic different than the default.

Serial Communication Protocol

This section describes the basic serial communication protocol between the SSPA and host computer. The amplifier will only respond to properly formatted protocol packets. The basic communication packet is shown in Figure 3. It consists of a Header, Data and Trailer sub-packet.




Figure 3: Basic Communication Packet

Header Sub-Packet

The Header packet is divided into 3 sub-packets which are the Frame Sync, Destination Address and Source Address packets (See Figure 4).

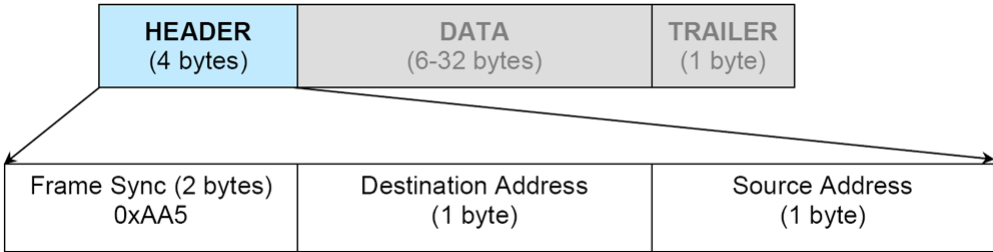


Figure 4: Header Sub-Packet

Frame Sync Word

The Frame Sync word is a two byte field that marks the beginning of a packet. This value is always 0xAA55. This field provides a means of designating a specific amplifier packet from others that may exist on the same network. It also provides a mechanism for a node to synchronize to a known point of transmission.

Destination Address

The destination address field specifies the node for which the packet is intended. It may be an individual or broadcast address. The broadcast address is 0xFF. This is used when a packet of information is intended for several nodes on the network. The broadcast address can be used in a single device connection when the host needs to determine the address of the amplifier. The amplifier will reply with its unique address.

Source Address

The source address specifies the address of the node that is sending the packet. All unique addresses, except the broadcast address, are equal and can be assigned to individual units. The host computer must also have a unique network address.

Data Packet

The data sub-packet is comprised of 6 to 32 bytes of information. It is further divided into seven (7) fields as shown in Figure 5. The first six (6) fields comprise the command preamble while the last field is the actual data.

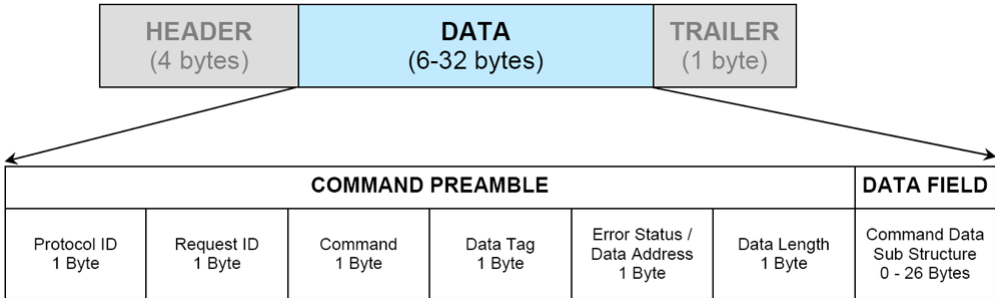


Figure 5: Data Sub-Packet

Protocol ID

This field provides backward compatibility with older generation equipment protocol. It should normally be set to zero (0). This field allows the amplifier to auto-detect other firmware versions.

Request ID

This is an application specific field. The amplifier will echo this byte back in the response frame without change. This byte serves as a request tracking feature.

Command

This one byte field tells the receiver how to use the attached data. There are four (4) possible values for this field. The sender and receiver are limited to two commands. For example: if the sender issued a "Set Request" command, the receiver must answer with a "Get Request" or "Get Response" form of the command. The byte value for each command is given in Table 2;

Table 2: Command Byte Values

Command Name	Command Byte Value
Set Request	0
Get Request	1
Set Response	2
Get Response	3

Data Tag

The data tag specifies the type of internal resource of information needed to be accessed on the amplifier. The data associated with certain tags is read only. Therefore, only the "Get" command byte would be associated with these data tags. The data tag byte values are given in Table 3.

Table 3: Data Tag Byte Values

Tag Name	Byte Value	Field Length	Description
System Settings Tag	0	1 byte	This tag allows accessing various system settings on remote unit. Host access status: Full Read/Write access. Settings can be modified at any time. Some settings may require hardware reset of the remote SSPA unit.
System Threshold Tag	1	2 bytes	This tag allows access to the critical unit thresholds. Host access status: Read Only.
System Conditions Tag	3	1 byte	This tag allows access to the unit's internal conditions flags, such as fault status or current system status. Host access status: Read only. This type of data cannot be set or modified remotely.
ADC Channel Access Tag	4	2 bytes	This tag allows access to the unit's internal Analog to Digital converter. Host access status: Read only. This type of data cannot be set or modified remotely.
Packet Wrapper	6	1 byte	This tag is used to send requests to a remote SSPA subsystem redirected through a remote systems controller (RCP). All Packet Wrapper requests frames are "Data Set" command requests. Maximum length of the data fields in both directions is 32 bytes.
Reserved	2,5	N/A	These tags are reserved for factory use only.

Error Status / Data Address

This byte is a tag extension byte and specifies the first data element of the tagged data. If the Data Length is more than 1 byte, then all subsequent data fields must be accessed starting from the specified address. For example, if the requester wants to access the amplifier's unique network address, it should set data tag 0 (Systems settings tag) and data address 8 (see Systems Settings Details table). If the following Data Length field is more than one (1), then all subsequent Settings will be accessed after the Unique Network Address. When the Response Frame Data Address is omitted, this byte position is replaced with the Error Status fields. The various error codes are given in Table 4. Note that the Request and Response frames are different.

Table 4: Error Status Byte

Error Code Name	Byte Value	Possible Cause
No Errors	0	Normal condition; no errors detected.
Data Frame Too Big	1	Specified Data length is too big for respondent buffer to accept.
No Such Data	2	Specified Data Address is out of bounds for this tag data.

Bad Value	3	Specified value not suitable for this particular data type.
Read Only	4	Originator tried to set a value which has read only status.
Bad Checksum	5	Trailer checksum not matched to calculated checksum.
Unrecognizable Error	6	Error presented in originator frame, but respondent failed to recognize it. All data aborted.

Data Length

This byte contains different information for Request and Response frames. In a Request frame, it specifies the number of data bytes that are to be accessed starting from the first byte of the value specified in the Data Address byte. That byte must not exceed the maximum data bytes from a particular tag. The maximum data length for the Settings tag is 26 bytes. The maximum data length for the System Threshold tag is six (6) bytes.

Data Field

The actual data contained in the packet must be placed in this field. The "Get Request" type of command must not contain any Data Field. Any "Get Request" will be rejected if any data is present in the Data Field. Generally, the Bad Checksum error code will be added to the response from the amplifier if the word size of the information is 16-bits or 2-bytes. Each data word is placed in the frame with its least significant byte first. All data with length of 2 bytes must be represented as integer type with maximum value range from 32767 to (-32767).

Trailer Packet

Frame Check

The trailer component contains only one (1) byte called the Frame Check Sequence, shown in Figure 6.

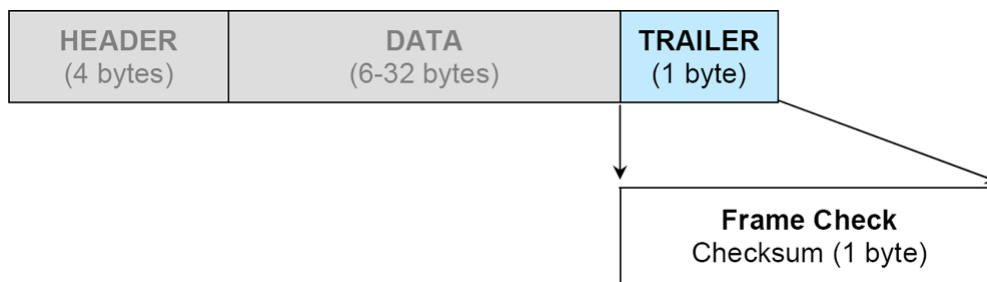


Figure 6: Trailer Sub-Packet

This field provides a checksum during packet transmission. This value is computed as a function of the content of the destination address, source address and all Command Data Substructure bytes. In general, the sender formats a message frame, calculates the check sequence, appends it to the frame, then transmits the packet. Upon receipt, the destination node recalculates the check sequence and compares it to the check sequence embedded in the frame. If the check sequences are the same, the data was transmitted without error. Otherwise an error has occurred and some form of recovery should take place. In this case, the amplifier will return a packet with the "Bad Checksum" error code set. Checksums are generated by summing the value of each byte in the packet while ignoring any carry bits. A simple algorithm is given as:

```

Checksum=0
FOR byte_index=0 TO byte_index=packet_len-1
  Chksum=(chksum+BYTE[byte_index]) MOD 256
NEXT byte_index
  
```

Timing issues

There is no maximum specification on the inter-character spacing in messages. Bytes in messages to amplifier units may be spaced as far apart as you wish. The amplifier will respond as soon as it has collected enough bytes to determine the message. Generally, there will be no spacing between characters in replies generated by unites. The maximum length of the packet sent to the amplifier node should not exceed 64 bytes, including checksum and frame sync bytes. Inter-message spacing must be provided for good data transmission. The minimum spacing should be 100 ms. This time is required for the controller to detect a "Line Cleared" condition with half duplex communications. Maximum controller respond time is 200 ms.

Request/Response Frame Structure

Table 5 outlines the request frame structure for the system amplifiers. Table 6 outlines the response frame structure for the system amplifiers.

Table 5: Request Frame Structure

Byte Position	Byte Value (Hex)	Description
1	0xAA	Frame Sync 1
2	0x55	Frame Sync 2
3	Destination Address	--
4	Source Address	--
5	Protocol Version	Protocol compatibility hole; must be set to 0
6	Request ID	Service Byte
7	Command	0 = Set Request; 1 = Get Request
8	Data Tag	0 = System Settings; 1 = System Thresholds; 2 = Temp. Sensor Settings; 3 = Conditions; 4 = ADC Data; 5 = Raw NVRAM/RAM Data
9	Data Address	Setting number; Sensor command; EEPROM address
10	Data Length	Total length of the data; Valid values: 1-30
11+N	Data	Actual Data
11+N+1	Checksum	Destination address + Source address + Protocol Version + Request ID + Command + Data Tag + Data Address + Data Length + Data

Table 6: Response Frame Structure

Byte Position	Byte Value (Hex)	Description
1	0xAA	Frame Sync 1
2	0x55	Frame Sync 2
3	Destination Address	--
4	Source Address	--
5	Protocol Version	Protocol compatibility hole; must be set to 0
6	Request ID	Service Byte
7	Command	2 = Set Response; 3 = Get Response
8	Data Tag	0 = System Settings; 1 = System Thresholds; 2 = Temp. Sensor Settings; 3 = Conditions; 4 = ADC Data; 5 = Raw NVRAM/RAM Data
9	Error Status	0 = No Errors; 1 = Too Big; 2 = No Such Data; 3 = Bad Value; 4 = Read Only; 5 = Bad Checksum; 6 = Unrecognized Error
10	Data Length	Total length of the data; Valid values: 1-30
11+N	Data	Actual Data
11+N+1	Checksum	Destination address + Source address + Protocol Version + Request ID + Command + Data Tag + Data Address + Data Length + Data

Settings, Conditions and Thresholds

Table 7 outlines the amplifier settings data values. Table 8 shows the amplifier condition data values. Table 9 describes the amplifier threshold data values.

* Indicates firmware version where this feature was first available.

Table 7: System Settings Details

Data Address	Length (Bytes)	Description	Limits and Valid Values
0	1	Device Type (read only)	0 = Reserved; 1 = RM SSPA; 2 = CO SSPA; 3 = RCP2/FPRC; 4 = RCP2-1000-CO; 5 = RCP2-1000-RM; 6 = RCP2-1000-RCP; 7 = VSAT BUC (v. 4.00*)
1	1	System Operational Mode Designator	0 = Standalone Mode; 1 = 1:1 Redundant Mode; 2 = 1:2 Redundant Mode; 3 = 1:1 Phase Combined (v. 4.70); 4 = 1:2 Phase Combined (v. 4.98); 5 = Maintenance Switch (v. 6.00*)
2	1	System Switch Mode	0 = Auto; 1 = Manual; 2 = Switch Lock
3	1	Control Mode	0 = Local; 1 = Remote
4	1	Fan Speed	0 = Low; 1 = High; 2 = Auto
5	1	Mute	0 = Mute OFF; 1 = Mute ON
6	1	Serial Protocol Select	0 = Normal; 1 = Terminal Mode; 2 = Locus (Not supported starting with v. 4.00)
7	1	Baud Rate	0 = 9600; 1 = 2400; 2 = 4800; 3 = 19200; 4 = 38400
8	1	Network Address	Valid Values: 0 - 255
9	1	Serial Interface	0 = RS232; 1 = RS485; 2 = IPNet (v. 2.50*); 3 = SNMP (v. 4.00*)
10	1	Auxiliary Fault Handling	0 = Disable Fault Checking; 1 = Major Fault; 2 = Minor Fault; 3 = Major Fault + SSPA Mute
11	1	Auxiliary Fault Logic	0 = Fault on Logic High; 1 = Fault on Logic Low
12	1	RF Switch Fault Handling	0 = Disable Fault Checking; 1 = Major Fault; 2 = Minor Fault; 3 = Mute on Switch
13	1	Fault Latch	0 = Disable; 1 = Enable
14	1	BUC Fault Handling	0 = Disable Fault Checking; 1 = Major Fault; 2 = Minor Fault; 3 = Major Fault + SSPA Mute
15	1	BUC Fault Logic	0 = Fault on Logic High; 1 = Fault on Logic Low
16	1	User Password	Valid Values: 0 - 255
17	1	Standby Select	0 = Standby; 1 = Online
18	1	Buzzer	0 = Disable; 1 = Enable
19	1	Menu Password Protection	0 = Disable; 1 = Enable
20	1	RF Units	0 = dBm; 1 = Watts (v. 3.40*)
21	1	Standby Mode	0 = Hot Standby; 1 = Cold Standby
22	1	HPA Status	0 = HPA1; 1 = HPA2; 2 = HPA3 (v. 3.10*; 1:2 mode only)
23	1	Priority Select (1:2 mode)	0 = Pol1; 1 = Pol2 (v. 3.10*)
24	1	Forward RF Fault Handling	0 = Disable; 1 = Low RF Major Fault; 2 = Low RF Minor Fault; 3 = ALC; 4 = High RF Major Fault (v. 6.14); 5 = High RF Minor Fault (v. 6.14); 6 = High RF Fault + Mute (v. 6.14)
25	1	Hi Reflected RF Fault Handling	0 = Disable; 1 = Major Fault; 2 = Minor Fault
26	1	SSPA Attenuation	Valid values: 0 - 200; 0.1 dBm per 1 value
27	1	Low Forward RF Threshold	Valid values: 0 - 80; 1 dBm per 1 value

28	1	High Reflected RF Threshold	Valid values: 0 - 80; 1 dBm per 1 value
29	1	IP Address Byte 1 (MSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
30	1	IP Address Byte 2	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
31	1	IP Address Byte 3	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
32	1	IP Address Byte 4	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
33	1	IP Gateway Byte 1	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
34	1	IP Gateway Byte 2	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
35	1	IP Gateway Byte 3	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
36	1	IP Gateway Byte 4 (LSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
37	1	Subnet Mask Byte 1 (MSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
38	1	Subnet Mask Byte 2	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
39	1	Subnet Mask Byte 3	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
40	1	Subnet Mask Byte 4 (LSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
41	1	Receive IP Port Byte 1 (MSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
42	1	Receive IP Port Byte 2 (LSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
43	1	IP Lock Address Byte 1 (MSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
44	1	IP Lock Address Byte 2	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
45	1	IP Lock Address Byte 3	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
46	1	IP Lock Address Byte 4 (LSB)	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
47	1	N+1 Array size	Available for SSPA with Ethernet IP Option (See Conditions Table, Field 20)
48	1	N+1 Priority Address	Valid range (Array of 2): 1 to 2; Valid range (Array of 4): 1 to 4; Valid range (Array of 8): 1 to 8; Valid range (Array of 16): 1 to 16; (v. 4.20*)
49	1	N+1 Auto Gain Option	0 = Auto Gain Off; 1 = Auto Gain On (v. 4.20)*; 2 = Keep Alive (v. 4.67)*; 3 = FlexGain (v. 4.78)*; 4 = OPMAX Select (v 6.31)*
50	1	N+1 Attenuation	Valid values: 0 - 200; 0.1 dBm per 1 value
51	1	Master IP Address Byte 1	Valid Values: 0 - 255 (v. 6.00)
52	1	Master IP Address Byte 2	Valid Values: 0 - 255 (v. 6.00)
53	1	Master IP Address Byte 3	Valid Values: 0 - 255 (v. 6.00)
54	1	Master IP Address Byte 4	Valid Values: 0 - 255 (v. 6.00)
55	1	Floating N+1 Master Mode	0 = Disable; 1 = Enable (v. 6.00)
56	1	Floating N+1 Master Serial Address	Valid Values: 0 - 255 (v. 6.00)


Table 8: System Conditions Details

Data Address	Length (Bytes)	Description	Limits and Valid Values
1	1	Summary Fault State	0 = No Fault; 1 = Fault
2	1	Power Supply Fault	0 = No Fault; 1 = Fault
3	1	High Temperature Fault	0 = No Fault; 1 = Fault
4	1	Low Regulator Voltage Fault	0 = No Fault; 1 = Fault
5	1	Low DC Current Fault	0 = No Fault; 1 = Fault
6	1	Auxiliary Fault	0 = No Fault; 1 = Fault
7	1	BUC Fault	0 = No Fault; 1 = Fault
8	1	Module 1 Fault	0 = No Fault; 1 = Fault; 2 = N/A
9	1	Module 2 Fault	0 = No Fault; 1 = Fault; 2 = N/A
10	1	Module 3 Fault	0 = No Fault; 1 = Fault; 2 = N/A
11	1	Module 4 Fault	0 = No Fault; 1 = Fault; 2 = N/A
12	1	Cooling Fan Fault	0 = No Fault; 1 = Fault; 2 = N/A
13	1	Low Forward RF Fault	0 = No Fault; 1 = Fault; 2 = N/A
14	1	High Reflected RF Fault	0 = No Fault; 1 = Fault; 2 = N/A
15	1	RF Switch 1 Position	1 = Fault; 2 = N/A; 3 = Pos1; 4 = Pos2
16	1	RF Switch 2 Position	1 = Fault; 2 = N/A; 3 = Pos1; 4 = Pos2
17	1	Optional Faults Port Byte 1 (External N+1 Power Supply Module Fault Identification)	Valid Value Range: 0 - 255; If using 3RU Power Supply: 0 = Fault, 1 = Normal for following bits: If using 1RU Power Supply: 0 = Normal, 1 = Fault for following bits: Bit 4 = PS Module 1 Alarm Input; Bit 5 = PS Module 2 Alarm Input; Bit 6 = PS Module 3 Alarm Input; Bit 7 = PS Module 4 Alarm Input
18	1	Optional Faults Port Byte 2	Valid Value Range: 0 - 255
19	1	I/O Board ID Byte	(Bit 0 = 0; Bit 1 = 0) = 1 Module Rack; (Bit 0 = 0; Bit 1 = 1) = 2 Module Rack; (Bit 0 = 1; Bit 1 = 1) = 4 Module Rack; Bit 2 to Bit 6 = Board Hardware Version; (Bit 7 = 0) = Internal Power Supply; (Bit 7 = 1) = External Power Supply
20	1	Digital Core Board ID Byte	0 = No Ethernet Support; 1 = Ethernet Support Version 1 (Ethernet/UDP/Normal protocol only)
21	1	Unit Standby State	0 = Standby; 1 = Online
22	1	Reserved for future use	Valid Value Range: 0 - 255 (v. 4.20*)
23	1	Unit N+1 State	0 = N+1 Slave; 1 = N+1 Master; 2 = N+1 Disabled (v. 4.20*)
24	1	Cabinet Impeller Fault	No Fault = 0; Fault = 1; N/A = 2 (v. 4.40*)
25	1	N+1 System Faults (for N+1 Master unit only)	0 to 15, depending on number of faulted N+1 SSPA units and N+1 array size; Fault detection disabled (Slave unit)=255 (v. 4.20*)
26	1	Selected SSPA Attenuation: Shows real SSPA attenuation in ALC or N+1 Auto Gain mode	0.1 dB per 1 Value
27	1	Reserved for factory use	0 - 255 (v. 4.40*)
28	1	Reserved for factory use	0 - 255 (v. 4.40*)
29	1	PreAmp Fault	0 = No Fault; 1 = Fault; 2 = N/A; 3 = Com Error (v. 4.64*)
30	1	N+1 Total Offline Units Count: Include faulted units and units in standby mode (in case of switched redundancy schema implemented along with N+1 redundancy.	0 to 15, depending on number of faulted and standby units and N+1 array size. Slave unit = 255 (v. 4.70*)
31	1	Fault Mute State	0 = Fault Mute Off; 1 = Fault Mute On
32	1	Fault Mute Cause	0 = None; 1 = Auxiliary Fault; 2 = External Mute Input; 3 = BUC Fault; 4 = PS Fault; 5 = N+1 Fault (v. 6.00*)

33	1	Last Detected Fault Cause	1 = Cold Start; 2 = High Temperature; 3 = Low Regulator Voltage; 4 = Low DC Current; 5 = Aux Fault; 6 = BUC Fault; 7 = Low Forward RF; 8 = High Reflected RF; 11 = N+ 1 Fault; 12 = PS Fault; 14 = Other Fault; 15 = No Faults (v. 6.00*)
34	1	Detected N+1 Module Faults	0 to 6, depending on number of detected faults and type of N+1 power supply. (v. 6.00*)

Table 9: System Thresholds Details

Data Address	Length (Bytes)	Description	Limits and Valid Values
1	2	Forward RF Power	If RF Units (See Settings Table, Data Address 20) = 0, then 0.1 dBm per 1 value; If RF Units = 1, then 0.1 Watt per 1 value (v. 3.40*)
2	2	Reflected RF Power	If RF Units (See Settings Table, Data Address 20) = 0, then 0.1 dBm per 1 value; If RF Units = 1, then 0.1 Watt per 1 value (v. 3.40*)
3	2	SSPA DC Current	0.1 A per 1 value; Value will return (-100) if reading is not available at this time.
4	2	Main Power Supply 1 Output Voltage	0.1 V per 1 value; Value will return (-100) if reading is not available at this time.
5	2	Main Power Supply 2 Output Voltage	0.1 V per 1 value; Value will return (-100) if reading is not available at this time.
6	2	Booster Power Supply 1 Output Voltage	0.1 V per 1 value; Value will return (-100) if reading is not available at this time.
7	2	Booster Power Supply 2 Output Voltage	0.1 V per 1 value; Value will return (-100) if reading is not available at this time.
8	2	SSPA Core Temperature	1 °C per 1 value; Value will return (-100) if reading is not available at this time.
9	2	N+1 System Forward Power (available from Master unit only!)	If RF Units (See Settings Table, Data Address 20) = 0, then 0.1 dBm per 1 value; If RF Units = 1, then 1 Watt per 1 Value. Value will return (-100) if reading is not available at this time. v. 4.20*.
10	2	N+1 Estimated System Gain (available from Master unit only!)	0.1 dB per Value. Estimated N+1 system linear gain. v. 4.20*.
11	2	N+1 System Reflected Power (available from Master unit only!)	If RF Units (See Settings Table, Data Address 20) = 0, then 0.1 dBm per 1 value; If RF Units = 1, then 1 Watt per 1 Value. Value will return (-100) if reading is not available at this time. v. 4.20*.
12	2	Cabinet Temperature	1 °C per 1 value; Value will return (-100) if reading is not available at this time. v. 4.40*.
13	2	BUC PS1 Voltage	0.1 V per 1 value; Value will return (-100) if reading is not available at this time. v. 6.00*.
14	2	BUC PS2 Voltage	0.1 V per 1 value; Value will return (-100) if reading is not available at this time. v. 6.00*.
15	2	Chassis Temperature	1 °C per 1 value; Value will return (-100) if reading is not available at this time. v. 6.00*.

 **Note:** In general, data length must be at least two (2) bytes to form an integer; the lower byte must come first. If an odd number of bytes arrived, the last data byte in the packet will be saved as the lower part of the integer; the upper part will be 0 by default.

Packet Wrapper Technique

Features introduced in firmware version 4.03 allow send requests directly to a remote SSPA subsystem. In this mode, an RCP unit redirects requests from its Serial Main or Ethernet port to its Local serial port, connected to the SSPA (see Figure 8-7). Packet wrapper requests are associated with longer response times, which must be accounted for in the host M&C software. This mode can be useful for advanced remote diagnostic of the attached SSPA subsystem.

All Packet Wrapper request frames must be "Data Set" command requests. Each frame intended for redirection must be included in request packet Data Fields. Packet Wrapping frame M&C should follow the same rules as for any other request frames with one exclusion -- the Data Address field will represent the number of bytes expected back from the remote SSPA. These bytes will be redirected back to the Host M&C in the Data Field response packet. The response packet will not be sent until the specified number of bytes is collected in the RCP unit buffer.

Maximum length of the data fields in both directions should not exceed 32 bytes. In the diagram represented in Figure 7, Request frame A is the Packet Wrapper frame. It contains Request frame B, intended to be redirected to the remote SSPA.

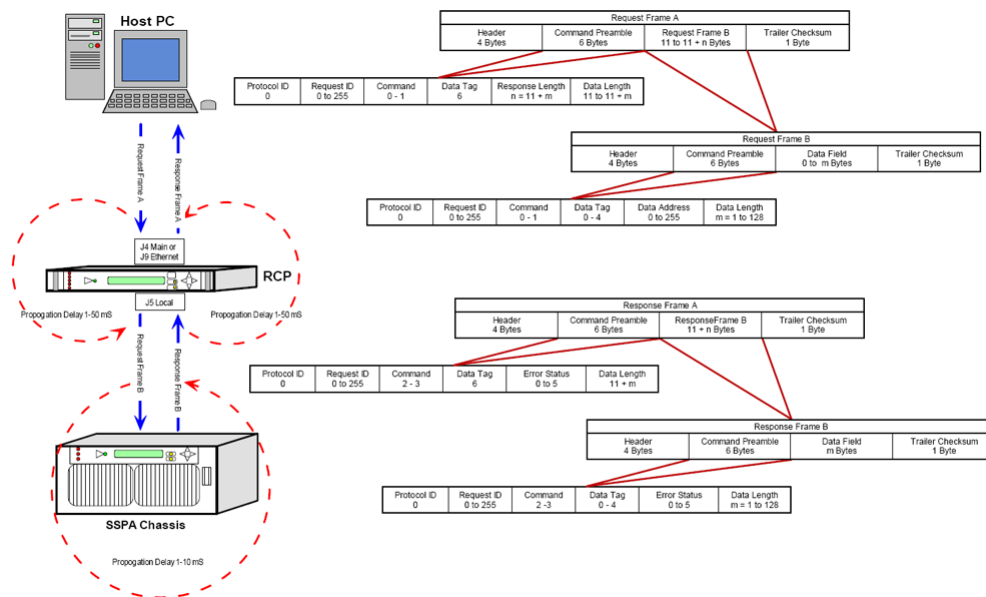


Figure 7: Packet Wrapper Technique

Example 1 Check SSPA settings

Assumptions: SSPA unit unique network address: 5;
 PC Host unique network address: 10;
 Request ID: 111;
 Unit attached to the serial line;

Table 10: PC Request String

Byte Count	Value	Description
1	170	Frame Sync Byte 1
2	85	Frame Sync Byte 2
3	5	Destination Address of Unit
4	10	Source Address of Request Originating PC Host
5	0	Protocol Version Compatibility. Field must always be "0".
6	111	Request ID byte is set by originator, will be echoed back by respondent.
7	1	Command field for "Get" type of the request.
8	0	"System Settings" tag indicates which data from respondent required in response frame.
9	1	Data Address field indicates the beginning data address inside of the "System Settings" data set to 1 (first element).
10	28	Data Length field indicates how many data bytes of the "System Settings" requested from the unit.
11	156	Arithmetic checksum of bytes number 3 through 10.

Table 11: SSPA Response String

Byte Count	Value	Description
1	170	Frame Sync Byte 1
2	85	Frame Sync Byte 2
3	10	Destination Address of PC request originator
4	5	Source address of the respondent
5	0	Protocol Version Compatibility Field must be always 0
6	111	Echo of the Originator's Request ID byte
7	3	Command field for "Get" type of the response
8	0	System Settings tag indicates which data from respondent included in response frame
9	0	Data Address field omitted, replaced with Error status code. 0 in this field indicates absence of errors
10	28	Data Length field indicates how many data bytes of the "System Settings" requested from SSPA
11	1	Data field 1 contains data element 1 of the "System Settings"
12	0	Data field 2 contains data element 2 of the "System Settings"
13	0	Data field 3 contains data element 3 of the "System Settings"
14	3	Data field 4 contains data element 4 of the "System Settings"
15	0	Data field 5 contains data element 5 of the "System Settings"
16	0	Data field 6 contains data element 6 of the "System Settings"
17	0	Data field 7 contains data element 7 of the "System Settings"
18	5	Data field 8 contains data element 8 of the "System Settings"
19	0	Data field 9 contains data element 9 of the "System Settings"
20	0	Data field 10 contains data element 10 of the "System Settings"
21	0	Data field 11 contains data element 11 of the "System Settings"
22	0	Data field 12 contains data element 12 of the "System Settings"

23	0	Data field 13 contains data element 13 of the "System Settings"
24	0	Data field 14 contains data element 14 of the "System Settings"
25	0	Data field 15 contains data element 15 of the "System Settings"
26	0	Data field 16 contains data element 16 of the "System Settings"
27	1	Data field 17 contains data element 17 of the "System Settings"
28	0	Data field 18 contains data element 18 of the "System Settings"
29	0	Data field 19 contains data element 19 of the "System Settings"
30	0	Data field 20 contains data element 20 of the "System Settings"
31	0	Data field 21 contains data element 21 of the "System Settings"
32	0	Data field 22 contains data element 22 of the "System Settings"
33	0	Data field 23 contains data element 23 of the "System Settings"
34	0	Data field 24 contains data element 24 of the "System Settings"
35	0	Data field 25 contains data element 25 of the "System Settings"
36	0	Data field 26 contains data element 26 of the "System Settings"
37	0	Data field 27 contains data element 27 of the "System Settings"
38	40	Data field 28 contains data element 28 of the "System Settings"
39	207	Arithmetic checksum of bytes number 3 through 38

Terminal Mode Serial Protocol

The Teledyne Paradise Datacom Rack Mount SSPA utilizes Terminal Mode Serial Protocol (TMSP) as a secondary serial protocol for management and control through a remote serial interface.

TMSP allows the user to access internal SSPA functions via a remote ASCII Terminal or its equivalent (such as HyperTerminal for Windows). TMSP is accomplished through either the RS-232 or RS-485, half duplex, serial communication link. US ASCII encoded character strings are used to represent commands and data messages.


A remote terminal or controller initiates a communication session and the SSPA Terminal takes action and returns a report of requested status. The SSPA terminal will not initiate communication and will transmit data only when commanded to do so. Prior to establishing the session with the SSPA Terminal, this mode must be enabled through the SSPA front panel menu.

The remote terminal must be configured with serial settings that match the SSPA's serial port settings. For example, if the SSPA is set at 9600 Baud, the remote terminal must be also configured as ASCII terminal at 9600 Baud, no parity, 8 bit data with 1 stop bit serial connection. The SSPA will not echo back any incoming characters, so local echo must be enabled on the remote terminal.

To establish a remote control session with the SSPA terminal, the user must type "UNIT#XXX" in the terminal window (all letters must be in upper case), where XXX is the RM SSPA unique network address or the global call address (255). Press the "Enter" key on remote terminal keyboard.

The SSPA should answer with "Unit#XXX OnLine", with the first menu screen on the following lines. After a remote session is successfully established, the unit will stay connected as long as needed. The session interface mimics the SSPA's front panel menu. To help the user navigate through the menu, the help string with the list of active keys always follows the menu strings. For example, the last transmission string on all informative menu screens will be:

Active Keys:(U)p+Enter;(D)own+Enter;(C)lrearFlt;(M)enu+Enter;(E)nd+Enter.

 **Note: All letters must be in upper case!**

To refresh the current screen on the remote terminal, press the "Enter" key. To end a session, press "E" and the "Enter" key.


 **Important! If multiple SSPA units are networked on the same serial link. Do not establish a session with more than one SSPA at a time. If you do so you will not get any valid answer from any SSPA!**

Figure 8 shows an example screen shot of a terminal session.

```
UNIT#001
Welcome! Unit#001 Online

Atten.(dB):20.0   Frwrdr.RF( dBm):00.0
Alarms:FAULT!   Ref.RF( dBm):N/A
Active Keys:(C)lrearFlt;(U)p;(D)own;(M)enu;(E)nd;(B)ack; + Enter

M

1.Sys.Info  3.Operation 5.Options
2.Com.Setup 4.Flt.Setup 6.Redund.
Active Keys:0-9;(C)lrearFlt;(M)enu;(E)nd;(B)ack; + Enter

3

1.Info  3.Mute  5.Attenuation
2.Buzzer 4.Sys.Mode 6.RF.Units
Active Keys:0-9;(C)lrearFlt;(M)enu;(E)nd;(B)ack; + Enter

-
```

Figure 8: Terminal Mode Session Example

Ethernet Interface

The rack mount SSPA Ethernet Port (J9) supports several IP network protocols to provide a full-featured remote M&C interface over an Ethernet LAN.

- IPNet protocol - Redirection of standard Teledyne Paradise Datacom serial protocol over UDP transport layer protocol. This protocol is fully supported in the Teledyne Paradise Datacom Universal M&C software.
- SNMPv1 protocol - This protocol is intended for integration into large corporate NMS architectures.

In order to utilize either of the protocols listed above, the relevant interface option has to be turned on.

Of course, standard IP level functions such as ICMP Ping and ARP are supported as well. There is currently no support for dynamic IP settings, all IP parameters.

IPNet Interface

Satcom system integrators are recognizing the benefits of an Ethernet IP interface. These benefits include:

- Unsurpassed system integration capabilities;
- Widely available and inexpensive set of support equipment (network cable; network hubs);
- Ability to control equipment over Internet;
- Ease of use

General Concept

Implementation of the raw Ethernet interface is not practical due to the limitations it places on M&C capabilities by the range of a particular LAN. It is more practical to use an Ethernet interface in conjunction with the standard OSI (Open System Interconnect) model to carry a stack of other protocols. In an OSI layered stack, an Ethernet interface can be represented as a Data Link layer. All upper layers are resolved through a set of IP protocols. In order to keep data bandwidth as low as possible (which is important when M&C functions are provided through a low-bandwidth service channel) the IP/UDP protocol set is used as the Network/Transport layer protocol on Teledyne Paradise Datacom SSPAs.

UDP (User Datagram Protocol) was chosen over TCP (Transmission Control Protocol) because it is connectionless; that is, no end-to-end connection is made between the SSPA unit and controlling workstation when datagrams (packets) are exchanged.

Teledyne Paradise Datacom provides a Windows-based control application to establish UDP-based Ethernet communication with SSPAs. The control application manages the exchange of datagrams to ensure error-free communication. An attractive benefit of UDP is that it requires low overhead resulting in minimal impact to network performance. The control application sends a UDP request to the SSPA unit and waits for a response. The length of time the control application waits depends on how it is configured. If the timeout is reached and the control application has not heard back from the agent, it assumes the packet was lost and retransmits the request. The number of the retransmissions is user configurable.

The Teledyne Paradise Datacom RM SSPA Ethernet IP interface can use UDP ports from 0 to 65533 for sending and receiving. The receiving port needs to be specified through the front panel menu. For sending, it will use the port from which the UDP request originated. Of course, it is up to the user to select an appropriate pair of ports that are not conflicting with standard IP services. Paradise Datacom recommends usage of ports 1038 and 1039. These ports are not assigned to any known application.

As an application layer protocol (which actually carries meaningful data), the standard Teledyne Paradise Datacom RM SSPA serial protocol was selected. This protocol is extremely flexible and efficient. It is also media independent and can be easily wrapped into another protocol data frame. An example of the UDP frame with encapsulated Teledyne Paradise Datacom protocol frame is shown in Figure 9.

UDP Header (8 bytes)	SSPA Serial Protocol Frame (11+N Bytes, 0<N<128)	CRC 16 checksum
--------------------------------	--	---------------------------

Figure 9: UDP Redirect Frame Example

A detailed OSI model for the RM SSPA M&C interface is represented in Table 10.

This set of Ethernet IP protocols is currently supported by the Teledyne Paradise Datacom Universal M&C software package. The software is supplied on CD with the unit, or can be download from company's web site, <http://www.paradisedata.com>.


Setting IPNet Interface

Before enabling the Ethernet IP interface, the following IP parameters need to be set: IP Port address, Default Gateway, Subnet Mask, Receive IP Port and Lock IP address. All IP related menu items consolidate under the Communication Setup menu.

1. At the front panel touchscreen, tap the Home icon to return to the Main Menu;
2. Tap the Communication button;
3. Tap the IP Setup button.

The Lock IP address is a security measure. Setting this parameter either to 255.255.255.255 or 0.0.0.0 will allow any host to control the SSPA. Setting the parameter to the specific address of the remote host will lock SSPA access to this host. Packets received from other hosts will be ignored.

For other parameters (IP address, Gateway, Subnet, IP port) contact your network system administrator for assistance.

 **Important! If the SSPA RM will be accessible over the Internet, exercise appropriate security measures. Teledyne Paradise Datacom strongly recommends placing amplifiers behind a protective Firewall or setting up a VPN link for remote access.**

After selecting the IP parameters, turn on IP interfaces through front panel:


1. Tap the Home icon on the front panel touchscreen to return to the Main Menu;
2. Tap the Communication button;
3. Tap the Interface button;
4. Tick the IPNET checkbox.

Ethernet Interface is now the primary remote control interface and the RS232/485 Main port is disabled. The user may adjust any IP settings when the IPNet interface is turned on, as needed, without losing IP link. New settings become effective only after a hardware reset.

1. Either cycle power to the unit, or:
2. Tap the Home icon to return to the Main Menu;
3. Tap the Options button;
4. Tap the System button;
5. Tap the Reset button;
6. Tap the Comms Only button. At the prompt, confirm you want to reset the I/O card.

To disable the Ethernet port and enable the RS-232/RS-485 Serial Main port:

1. Tap the Home icon to return to the Main Menu;
2. Tap the Communications button;
3. Tap the Interface button;
4. Tick either the RS232 or the RS485 checkbox (depending on the desired method of serial communication).

 **Important! At present, the RM SSPA controller supports only one remote control protocol selection through its Ethernet interface port. This protocol is referred to as "Normal" on the front panel display. If the protocol selection is set differently (Terminal), the controller will force its protocol selection to "Normal".**

The RM SSPA Ethernet port can be connected to a network hub using straight through network cable or directly to a work station NIC card through a null-modem or cross-over cable (Rx and Tx lines are crossed). As soon as an Ethernet interface has been selected as the primary interface, you should be able to verify the network connection to the unit by using the Ping command from your host workstation.

To do so on a Windows based PC, open a Command Prompt window and type PING and the dot delimited IP address of the RM SSPA, then press the Enter key. If the unit is successfully found on the network, the request statistic will be displayed.

If the unit does not answer on the ping command, check all hardware connections and verify that the IP settings on your host workstation and the RM SSPA match your network parameters. On a Windows-based PC you may also check Address Resolution Protocol (ARP) table entries. The new IP address of the RM SSPA may be set to another PC or network equipment with a different MAC address.

Open a Command Prompt window and type "ARP -a", the press Enter. The current ARP data will be displayed. If you see the RM SSPA IP address entry in the table, delete it by issuing the command "ARP -d XXX.XXX.XXX.XXX" and press Enter (XXX.XXX.XXX.XXX is the IP address of the RM SSPA unit). Try the PING command again.

Using the Rack Mount Web Interface

Starting with firmware version 6.00, the rack mount web interface no longer needs to have a pre-installed Java application to operate. The web interfaces uses a standard hypertext transfer protocol on port 80. The web interface is compatible with most modern web browsers, such as Firefox, Chrome or Internet Explorer, which support asynchronous JavaScript XML transactions (aka AJAX).

To connect to SSPA internal web page, the user must make sure Web/IPNet interface is enabled on the device and that an IP address has been assigned to the unit. Connect the unit to an Ethernet network or directly to a PC 10/100 Base-T adapter and then open a web browser.

Enter IP address of the unit into the address bar of the browser. A security login window will appear. In the User Name field, enter admin, the default User Name. See Figure 10. The User Name is fixed and cannot be changed by the operator.

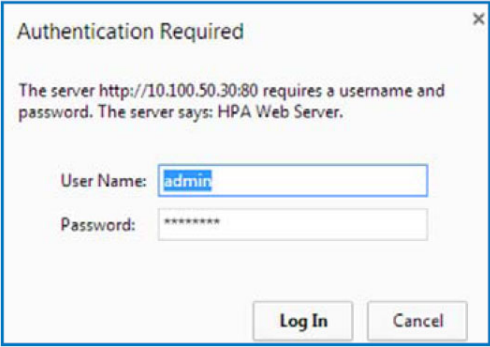


Figure 10: Web Interface Login Window

In the Password field, enter the web password assigned to the unit. The factory default password is **paradise**. The User Name and Password are case sensitive. The password may be changed at any time and may comprise up to 15 alpha-numeric characters.

Note: The web server has limited hardware resources to support multiple simultaneously connected users. In the case that multiple users are connected to the same amplifier, service quality cannot be assured.

Click on the [Log In] button to open the M&C control in the web browser (Figure 11).

Web-Based Monitor & Control

The initial M&C screen displayed in the web browser is shown in Figure 11, with the Status tab as the default view.

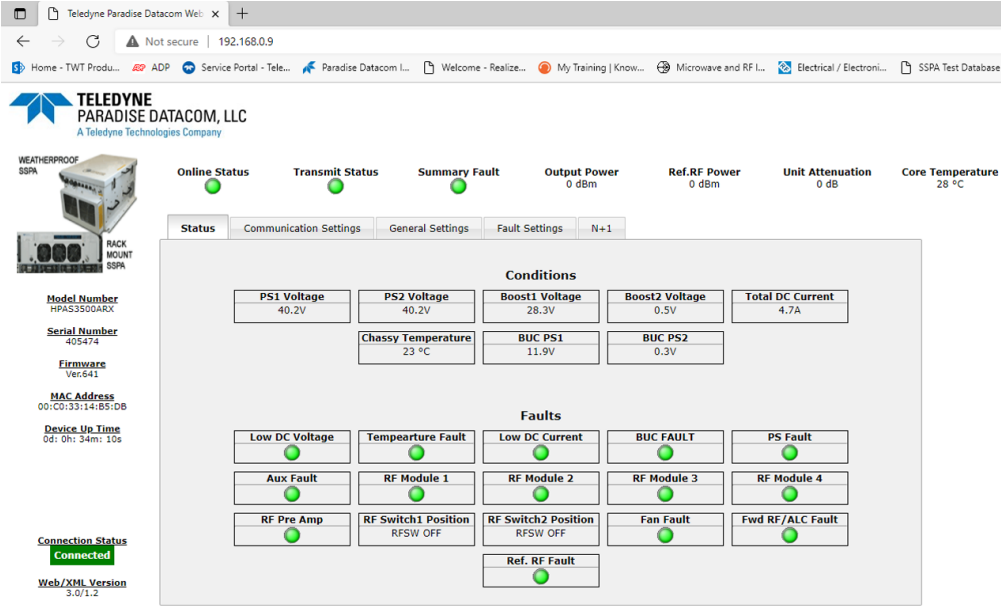


Figure 11: Web-based Monitor & Control (M&C) Interface

At the top of the page, the following information is displayed: the device's online status (Green for Online; Red for Standby), transmit status (Green for Mute Off; Red for Mute On), Summary Fault status (Green for no fault; Red for Summary fault), forward (output) and reflected RF power (if available), unit attenuation, and the core temperature of the RF module.

Information about the connected unit is shown at the left side of the page, including: the model number, serial number, firmware version, device MAC address and device up time since last I/O card power up or reboot. At the bottom left of the page is displayed the connection status, which shows "Connected" with a green background or "Disconnected" with a red background, and the Web/XML version number.

Additional information is displayed in multipage tabs in the middle of the screen:

Status Tab

The Status Tab includes a report of the various conditions and faults that exist in the connected unit, as shown in Figure 12.

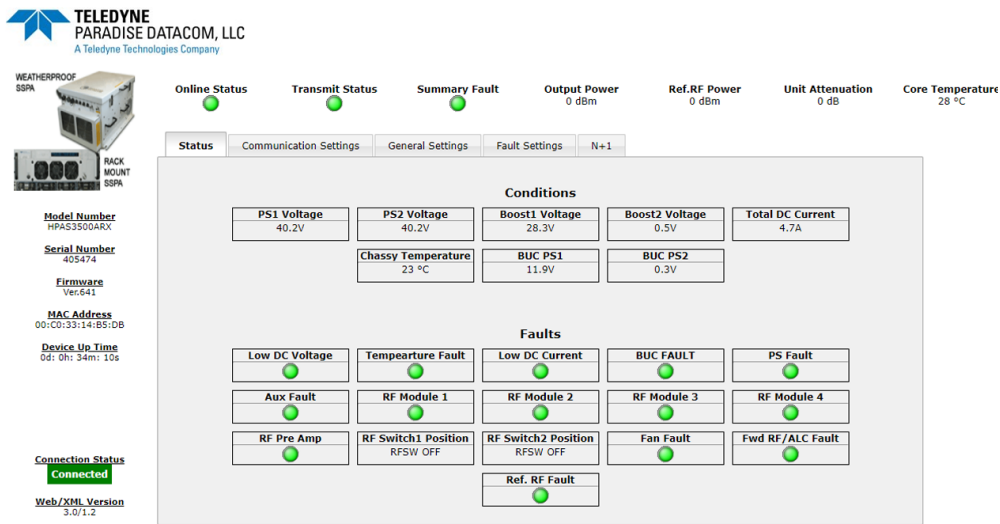


Figure 12: Status Tab

The top row of Conditions includes the measured values for the amplifier's power supply voltages (PS1 Voltage, PS2 Voltage), booster board voltages (Boost1 Voltage, Boost2 Voltage), and total DC current drawn.

The second row of Conditions includes the measured chassis temperature, and BUC power supply voltages (BUC PS1, BUC PS2).

The Faults section displays the fault status of various parameters for the connected amplifier. A green indicator means a normal operational status. A red indicator means a fault exists for that parameter. A yellow indicator in the RF Module # status blocks means there is no communication with that module. (Most amplifiers include only RF Module 1).

The top row of Faults displays the fault conditions for: Low DC Voltage, Temperature Fault, Low DC Current, BUC Fault, and PS (power supply) Fault.

The second row of Faults shows the fault conditions for Aux (auxiliary) Fault, RF Module 1, RF Module 2, RF Module 3, and RF Module 4.


The third row indicates the fault conditions for RF Pre Amp, RF Switch 1 Position and RF Switch 2 Position (both of which display RFSW OFF if the amplifier is set to Standalone operational mode), Fan Fault, and Fwd RF/ALC Fault (Forward output power/Automatic Level Correction).


The bottom row shows the fault condition for Ref. (reflected) RF Fault.

Depending on selected settings, a fault may also trigger a Summary fault.

Communication Settings Tab

Click on the Communication Settings tab to open the screen where such settings can be assigned. See Figure 13.


TELEDYNE
 PARADISE DATACOM, LLC
A Teledyne Technologies Company



Model Number
 HPAS3500ARX

Serial Number
 405474

Firmware
 Ver:641

MAC Address
 00:00:33:14:85:0B

Device Up Time
 0d: 0h: 34m: 35s

Connection Status
Connected

Web/XML Version
 3.0/1.2

Online Status
Transmit Status
Summary Fault
Output Power
0 dBm
Ref.RF Power
0 dBm
Unit Attenuation
0 dB
Core Temperature
28 °C

Status
Communication Settings
General Settings
Fault Settings
N+1

IP Settings

IP Address*: 192 . 168 . 0 . 9
Gateway Address*: 192 . 168 . 0 . 1
Subnet Mask*: 255 . 255 . 255 . 0
Lock Address*: 255 . 255 . 255 . 255
IP Port*: 1007

SNMP & Web

Read Community*: public
Write Community*: private
Web Password*: paradise

Communication Settings

Description	Current Setting	Change Setting
Amplifier Address:	1	1
Communication Interface*:	RS232 + IP	RS232 + IP
Serial Baud Rate*:	9600	9600
Serial Com Protocol*:	Normal	Normal

*Setting requires a power cycle before taking effect.

Confirm
Reset

Figure 13: Communication Settings Tab

There are three main sections to this tab: IP Settings, SNMP & Web, and Communication Settings.

Click into the field you wish to modify. The field will highlight in yellow when a new value is entered. Click the Confirm button at the bottom of the page to send the new value to the connected unit.

 **Changes to all Communication Settings require a power cycle of the unit before taking effect.**

IP Settings

In the IP Settings section, the user may assign the IP Address, Gateway Address, Subnet Mask, Lock Address and IP Port for the connected unit. Valid values for the IP-type addresses are 0 to 255 for each field.

Default IP Address is 192.168.0.9.

Default Gateway is 192.168.0.1.

Default Subnet Mask is 255.255.255.0.

Default Lock Address is 255.255.255.255.

Default Local Port is 1007. Valid values are 0 to 65535.

SNMP & Web

The SNMP & Web section is used to assign the various passwords for web or SNMP monitor and control. Any changes to these settings requires a power cycle of the unit before they take effect.

Communication Settings

The Communication Settings section allows the user to assign the Amplifier Address, or select the Communication Interface, Serial Baud Rate, and Serial Com Protocol for the connected unit. Changing any of these values except the Amplifier Address requires a power cycle before the new settings take effect.

General Settings Tab

Click on the General Settings tab to open the screen where certain control settings may be assigned. See Figure 14.

Figure 14: General Settings Tab

There are two main sections to this tab: Amplifier Settings and Redundant Settings.

Amplifier Settings

In the Amplifier Settings section, the user may assign an attenuation level, change the mute status, select a fan speed control, enable or disable fault latching, sound alarm, and menu protection, assign the menu password, and select the RF units.

Click into the field you wish to modify. The field will highlight in yellow when a new value is entered. See Figure 15 for an example.

Figure 15: Field Being Modified Highlighted in Yellow

Click the Confirm button at the bottom of the page to send the new value to the connected unit. The new setting will be applied immediately, although it may take a short time span for the M&C to register the change.

Redundant Settings

In the Redundant Settings section, the user may assign the operation mode, hierarchical address, standby select (online/standby status), and toggle the standby mode between Hot and Cold standby.

Operation Mode

This setting allows the user can select the type of system into which the amplifier will be configured.

Standalone -- Select this option for standalone amplifier applications, or whenever the unit is configured in a system which includes a redundant system controller. All RF waveguide switch controls are disabled in this mode.

1:1 Mode -- Select this option for internal 1:1 redundant configurations. For proper function, a second amplifier is required which needs to be configured for the same operation mode.

1:2 Mode -- This setting is used for internal 1:2 redundancy operation. Two additional amplifiers are required, which need to be configured in the same operational mode.

1:1 Ph. Comb. -- This setting is used for hybrid 1:1 phase combined system operation. The use of N+1 controls in conjunction with this setting is highly recommended.

1:2 Ph. Comb. -- This mode is similar to 1:2 mode, but is used to combine two amplifier outputs, rather than supplying a signal for two separate polarizations. The use of N+1 controls in conjunction with this setting is highly recommended.

Hierarchical Address

The user may select the identity of the amplifier: HPA1, HPA2, or (in 1:2 redundant systems only) HPA3.

Standby Select

This setting allows the user can assign the online/standby status for the amplifier.

Selecting Standby will place the amplifier in a redundant system configuration in the standby state. If there is another non-faulted amplifier in the redundant system, it will be switched to the online state.

Selecting Online will place the amplifier in a redundant system configuration in the online state. If there is another non-faulted amplifier in the redundant system, it will be switched to the standby state.

HPA1 is typically set as the online amplifier in 1:1 systems. In 1:1 and 1:2 redundant systems, HPA2 is typically the standby amplifier. In 1:2 redundant systems, HPA3 is typically set to online status.

For amplifiers in Standalone operation mode, the Standby Select setting is immaterial.

Standby Mode

This setting allows the user can select either Hot or Cold Standby Mode.

Hot Standby -- In this mode, the amplifier in standby mode is transmitting its signal to the dummy load. If the standby amplifier is switched to the online state, full output power is immediately available.

Cold Standby -- In this mode, when the amplifier is in standby mode, it is muted. If the standby amplifier is switched to the online state, it will unmute and will take several moments to reach full output power.

Fault Settings Tab

Click on the Fault Settings tab to open the screen where conditions which trigger a fault may be assigned. See Figure 16.

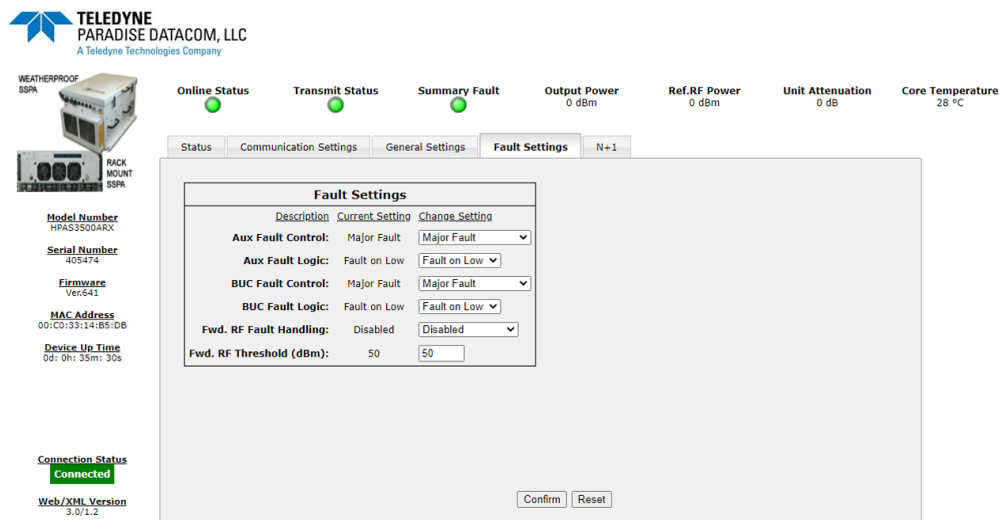


Figure 16: Fault Settings Tab

Click into the field you wish to modify. The field will highlight in yellow when a new value is entered. Click the Confirm button at the bottom of the page to send the new value to the connected unit. The new setting will be applied immediately, although it may take a short time span for the M&C to register the change.

Aux Fault Control

Selections include: Disable; Major Fault; Minor Fault; Major Fault + Mute

If Disable is selected, no action will be taken by the unit if an Auxiliary fault occurs.

If Major Fault is selected, in the event of an Auxiliary fault, the unit will exhibit a Summary fault, as well as an Auxiliary fault indicator.

If Minor Fault is selected, in the event of an Auxiliary fault, the unit will only trigger the illumination of the Auxiliary fault indicator.

If Major Fault w/ Mute is selected, in the event of an Auxiliary fault, the unit will exhibit a Summary fault, as well as an Auxiliary fault indicator, and the amplifier is placed in a mute state.

If Minor Fault w/ Mute is selected, in the event of an Auxiliary fault, the unit will only trigger the illumination of the Auxiliary fault indicator, and the amplifier is placed in a mute state.

Aux Fault Logic

Selections include: Fault on High, Fault on Low

Fault on High is the default setting, where faults are triggered by a high impedance state.

If Fault on Low is selected, faults are triggered by a low impedance state.

BUC Fault Control

Selections include: Disable; Major Fault; Minor Fault; Major Fault + Mute

If Disable is selected, no action will be taken by the unit if a BUC fault occurs. This is the default setting for units without an internal BUC.

If Major Fault is selected, in the event of a BUC fault, the unit will exhibit a Summary fault, as well as a BUC fault indicator.

If Minor Fault is selected, in the event of a BUC fault, the unit will only trigger the illumination of the BUC fault indicator.

If Major Fault w/ Mute is selected, a BUC fault will trigger a Summary fault, as well as illuminate the BUC fault indicator, and will mute the amplifier. This is the default setting for units which include an internal BUC.

BUC Fault Logic

Selections include: Fault on High, Fault on Low

Fault on High is the default setting, where faults are triggered by a high impedance state.

If Fault on Low is selected, faults are triggered by a low impedance state.

Fwd. RF Fault Handling

Selections include: Disable; Low RF Major Fault; Low RF Minor Fault; ALC; High RF Major Fault; High RF Minor Fault; High RF Fault + Mute

Selecting Disable disables the Forward RF Fault Alarm function, as well as the Automatic Level Control function. Selecting this item also unlatches any Forward RF fault conditions.

If Low RF Major Fault is selected, in the event that the Forward RF power falls below the defined level, a Summary fault is triggered, as well as a Forward RF fault.

If Low RF Minor Fault is selected, if the Forward RF power falls below the defined level, a Forward RF fault is triggered.

If ALC is selected, the Automatic Level Control function will take control of the amplifier's attenuation settings to maintain the desired RF output power level and will not allow any attenuation adjustments via the front panel. The ALC circuit will have the greatest ability to adjust for positive and negative RF input level changes when the amplifier's gain level is typically 65 dB.

The ALC function has the ability to accurately control the RF output power over a 15 dB range from saturated power. The ALC will operate over a 20 dB range, but the accuracy of the last 5 dB will suffer. For example, if the saturated power from the amplifier is 59 dBm, the lowest accurate power setting during ALC control is 44 dBm. If the output power set point is set outside the operational range of the ALC circuit, the ALC will adjust the output power to the lowest possible level and set a minor fault on the amplifier's front panel.



Note: Automatic Level Control is inactive when the system is in N+1 operation.

When High RF Major Fault is selected, if the Forward RF power rises above the defined level, a Summary fault is triggered, as well as a Forward RF fault alarm.

When High RF Minor Fault is selected, if the Forward RF power rises above the defined level, a Forward RF fault alarm is triggered.

When High RF Mute is selected, in the event that the Forward RF power rises above the defined level, a Summary fault is triggered, as well as a Forward RF fault alarm, and the amplifier is placed in a mute state. To avoid output oscillations between the Mute and Unmute states, this fault condition will latch itself and will not self-clear without operator intervention.

Fwd. RF Threshold (dBm)

The entered value defines the threshold that will be used to trigger a High or Low RF fault condition or, in the case of ALC, the desired output power level to be maintained. Valid values are 0 to 80; 1 dBm per 1 value.

N+1 Tab

Click on the N+1 tab to open the screen where system settings for N+1 configurations may be assigned. See Figure 17.

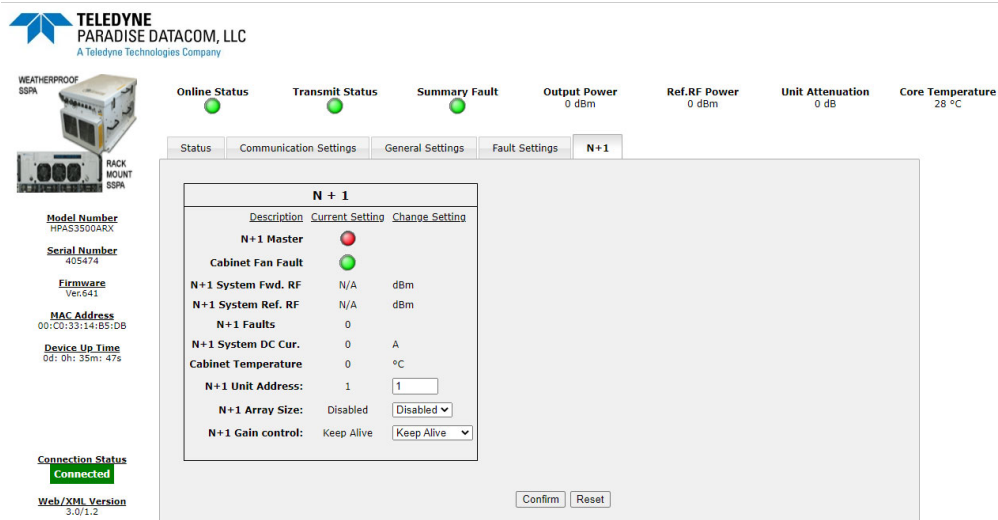


Figure 17: N+1 Tab

This tab is used to monitor the various conditions of an N+1 system of amplifiers, and to set the parameters of the system.

Click into the field you wish to modify. The field will highlight in yellow when a new value is entered. Click the Confirm button at the bottom of the page to send the new value to the connected unit. The new setting will be applied immediately, although it may take a short time span for the M&C to register the change.

N+1 Master/Slave

The N+1 Master/Slave indicator is at the top of the display. The indicator for the Master/Slave unit in an N+1 system is colored green when operating normally, or colored red if the unit has a fault condition. See Figure 18 for an example of the Master screen.

N + 1		
Description	Current Setting	Change Setting
N+1 Master		
Cabinet Fan Fault		
N+1 System Fwd. RF	N/A	dBm
N+1 System Ref. RF	N/A	dBm
N+1 Faults	3	
N+1 System DC Cur.	4.4	A
Cabinet Temperature	N/A	°C
N+1 Unit Address:	1	<input type="text" value="1"/>
N+1 Array Size:	4 Units	<input type="text" value="4 Units"/>
N+1 Gain control:	Keep Alive	<input type="text" value="Keep Alive"/>

Figure 18: N+1 Master Unit

Cabinet Fan Fault

This indicator is green when the cabinet fans are operating normally, or red if there is a fault condition in the cabinet fans.

N+1 System Fwd. RF

This value shows the detected forward output power of the system. It is displayed in dBm or Watts, depending on the RF Units selected in the General Settings tab.

N+1 System Ref. RF

Requires a RF detector module for reflected power. Value displayed is the measured reflected power of the system. It is displayed in dBm or Watts, depending on the RF Units selected in the General Settings tab.

N+1 Faults

Shows the number of faults currently active in the system. The example in Figure 18 shows a single amplifier arranged in a 4-unit N+1 array, which is why it shows three N+1 faults (units 2-4 are not detected).

N+1 System DC Cur.

Provides the total DC current draw for the system.

Cabinet Temperature

Displays the measured temperature of the ambient air inside the cabinet.

N+1 Unit Address

This field shows the assigned unit address for the connected unit. Each unit in the system must have a unique address. Valid addressing range is 1 to 16. For N+1 systems, assigning an address greater than the selected N+1 Array Size makes the unit so assigned invisible to the N+1 Master unit.

N+1 Array Size

Displays the selected number of units that comprise the N+1 system. Valid selections include: Disabled, 2 Units, 4 Units, 8 Units, 16 Units.

Units connected to an N+1 system must have an identical N+1 array selection or have N+1 operation disabled. A unit connected to an N+1 link cable with the N+1 option disabled will not be controlled by a N+1 Master. To the Master unit, it will appear as a faulted chassis.

N+1 Gain control

Shows the selected gain control mode in effect for the system. Valid choices include: Disabled, Auto Gain On, Keep Alive, and Flex Gain.

Disabled -- When Auto Gain is disabled, the system can be adjusted as if it was a single SSPA unit, attenuating system gain between 0 and 20 dBm. System gain will not apply automatic gain compensation if any of the units in the N+1 redundancy array fails.

Auto Gain On -- When Auto Gain is enabled, the system will automatically increase its gain to compensate for a failed module. The system will keep 5 dB of gain in reserve, thus allowing only 15 dB of system gain adjustment.

Keep Alive -- The Keep Alive setting disables the automatic mute function when a module enters a fault condition. This option may be beneficial in systems where the N+1 option is used only as a convenient single point of control, rather than as a redundancy control measure. Consult the factory on the use of this option.

Flex Gain -- Flex Gain is a form of automatic gain control for N+1 systems. This control option has the same basic operation principles as the standard Auto Gain option except that the gain reserves and amount of gain compensation differ. This setting is designed to serve the special gain compensation needs of hybrid PowerMAX SSPA systems. When Flex Gain mode is enabled, the Master unit of the PowerMAX system automatically reserves a predetermined amount of attenuation to each amplifier in the system and reduces overall system gain. In case of one or more amplifier unit failures, the system will return a certain amount of reserved gain in order to compensate system gain degradation from the failed unit(s). In the case of hybrid 4- and 2-way modes, the Master unit monitors the amplifiers placed in standby mode and provides the proper amount of gain compensation for these system configurations. Consult the factory on the use of this option.

SNMP Interface

SNMP-based management was initially targeted for TCP/IP routers and hosts. However, the SNMP-based management approach is inherently generic so that it can be used to manage many types of systems. This approach has become increasingly popular for remote management and control solutions for various SSPA systems.

Teledyne Paradise Datacom devices with Ethernet interface support the most popular SNMPv1 format (SMIv1, RFC1155), SNMP Get, SNMP GetNext and SNMP Set commands. SNMP Traps are currently unsupported on units with serial numbers below 400000.

In order to utilize SNMP protocol, the operator has to enable this feature through the front panel or by remote serial protocol. SNMP uses the UDP fixed port 161.

The definition of managed objects described in the Management Information Base (MIB) file. The MIB file is available for download from the Downloads section of the Teledyne Paradise Datacom web site, <http://www.paradisedata.com>.

Interface

The Teledyne Paradise Datacom MIB is a table-based MIB, and is the same for all devices. The MIB table is designed to follow the same pattern as the tables for serial protocol. For additional information about OID values, refer to Table 11 through Table 13.

The text values in the tables help automatic value parsing within NMS or make the values readable through an MIB browser. All text value OIDs follow the same pattern:

1. For settings or parameters with discreet values:
SettingName'ValueName1=xxx, ...,ValueNamex=xxx
Example: ControlMode'Local=0,Remote=1
2. For settings or parameters with continuous values:
SettingName'LowLimit..HighLimit
Example: NetworkAddress'0..255

As with the serial protocol, the MIB allows access to a remote SSPA (default state) as well as to the RCP unit itself. To switch between the MIBs of those devices, the proper Device Type has to be selected (OID -1.3.6.1.4.1.20712.1.4).

SNMP V3 issues in Teledyne Paradise Datacom SSPAs

Simple Network Management Protocol (SNMP) is an interoperable standards-based protocol that allows for external monitoring of the Content Engine through an SNMP agent.

A SNMP-managed network consists of three primary components: managed devices, agents, and management systems. A managed device is a network node that contains a SNMP agent and resides on a managed network. Managed devices collect and store management information and use SNMP to make this information available to management systems that use SNMP. Managed devices include routers, servers, switches, bridges hubs, computer hosts, and printers.

An agent is a software module that has local knowledge of management information and translates that information into a form compatible with SNMP: the Management Information Base (MIB). The agent can send traps, or notification of certain events, to the manager. Essentially, a Teledyne Paradise Datacom SSPA is considered a "SNMP agent".

A manager is a software module that listens to the SNMP notifications sent by SNMP agents. The manager can also send requests to an agent to collect remote information from the Management Information Base (MIB).

The communication between the agent and the manager uses the SNMP protocol, which is an application of the ASN.1 BER (Abstract Syntax Notation 1 with Basic Encoding Rules), typically over UDP (for IP networks).

- Version 1 (SNMPv1, described in RFC 1157) is the initial implementation of SNMP.
- Version 2 (SNMPv2c, described in RFC 1902) is the second release of SNMP. It provides additions to data types, counter size, and protocol operations.
- Version 3 (SNMPv3, described in RFC 2271 through RFC 2275) is the most recent version of SNMP.

SNMP V1

SNMP version 1 (SNMPv1) is the initial implementation of the SNMP protocol. SNMPv1 operates over protocols such as User Datagram Protocol (UDP), Internet Protocol (IP), OSI Connectionless Network Service (CLNS), AppleTalk Datagram-Delivery Protocol (DDP), and Novell Internet Packet Exchange (IPX). SNMPv1 is widely used and is the de-facto network-management protocol in the Internet community.

The Teledyne Paradise Datacom SSPA family of products utilizes the most popular implementation, SNMP V1 over UDP transport layer.

SNMP V2

SNMPv2 (RFC 1441--RFC 1452) revises version 1 and includes some improvements in the areas of performance, security, confidentiality, and manager-to-manager communications. It introduced GetBulkRequest, an alternative to iterative GetNextRequests for retrieving large amounts of management data in a single request.

However, the new party-based security system in SNMPv2, viewed by many as overly complex, was not widely accepted.

The format of the trap message was also changed in SNMPv2. To avoid these compatibility issues, the trap mechanism was not implemented in the Teledyne Paradise Datacom SSPA MIB.


SNMP V3

Although SNMPv3 makes no changes to the protocol aside from the addition of cryptographic security, it looks much different due to new textual conventions, concepts, and terminology. SNMPv3 primarily added security and remote configuration enhancements to SNMP.

Many embedded controllers and microprocessors that are used in electronic components such as amplifier modules do not have support for SNMP V2 or V3. This is due to the extensive memory resources required by the computation intensive cryptographic security of SNMP V3.

For this reason V3 has not gained widespread support amongst embedded MCU platform manufacturers. Existing port implementations are limited to very powerful ARM5 or above cores, running under full-scale OS systems (Linux, Android, etc.). At large, these configurations require external bulk RAM/FLASH to operate. This requirement ultimately affects the minimum device startup time (tens of seconds, due to the large boot BIOS) and working temperature range (mostly indoor).

As noted in Cisco's release notes about SNMP V3:

 **SNMP notifications can be sent as traps or inform requests. Traps are unreliable because the receiver does not send acknowledgments when this device receives traps. The sender cannot determine if the traps were received. However, an SNMP entity that receives an inform request acknowledges the message with an SNMP response protocol data unit (PDU). If the sender never receives the response, the inform request can be sent again. Therefore, informs are more likely to reach their intended destination. However, informs consume more resources in the agent and in the network. Unlike a trap, which is discarded as soon as it is sent, an inform request must be held in memory until a response is received, or the request times out. Traps are sent only once, while an inform can be retried several times. The retries increase traffic and contribute to a higher overhead on the network.**

(<http://www.cisco.com/c/en/us/support/docs/ip/simple-network-management-protocol-snmp/13506-snmp-traps.html>, last visited on 15 March 2019.)

SNMP MIB Tree

```
--paradiseDatacom(1.3.6.1.4.1.20712)
|
+--deviceINFO(1)
|   |
|   +-- r-n OctetString deviceID(1)
|   +-- rwn OctetString deviceLocation(2)
|   +-- r-n OctetString deviceRevision(3)
|   +-- r-n Enumeration deviceType(4)
|
+--devices(2)
|   |
|   +--paradiseDevice(1)
|   |   |
|   |   +--settings(1)
|   |   |   |
|   |   |   +--settingsEntry(1) [settingIndex]
|   |   |   |   |
|   |   |   |   +-- rwn Integer32  settingIndex(1)
|   |   |   |   +-- rwn Integer32  settingValue(2)
|   |   |   |   +-- r-n OctetString settingTextValue(3)
|   |   |
|   |   +--thresholds(2)
|   |   |   |
|   |   |   +--thresholdsEntry(1) [thresholdIndex]
|   |   |   |   |
|   |   |   |   +-- rwn Integer32  thresholdIndex(1)
|   |   |   |   +-- r-n Integer32  thresholdValue(2)
|   |   |   |   +-- r-n Enumeration thresholdStatus(3)
|   |   |   |   +-- r-n OctetString thresholdText(4)
|   |   |
|   |   +--conditions(3)
|   |   |   |
|   |   |   +--conditionsEntry(1) [conditionsIndex]
|   |   |   |   |
|   |   |   |   +-- rwn Integer32  conditionsIndex(1)
|   |   |   |   +-- r-n Integer32  conditionsValue(2)
|   |   |   |   +-- r-n Counter    conditionsEventCount(3)
|   |   |   |   +-- r-n OctetString conditionsText(4)
|   |
|   +--paradiseDeviceA(2)
|   +--paradiseDeviceB(3)
|   +--paradiseDeviceC(4)
|   +--modem(5)
```

Description of MIB Entities

deviceINFO - This field includes general device information.

deviceID - Octet string type; maximum length -60; field specifies device model and serial number; read only access; OID -1.3.6.1.4.1.20712.1.1

deviceLocation - Octet string type; maximum length 60; field allows customer to store information about device physical location or any other textual information related to the device; read/write access; OID -1.3.6.1.4.1.20712.1.2

deviceRevision - Octet string type; maximum length 60; field specifies device firmware revision; read only access; OID -1.3.6.1.4.1.20712.1.3

deviceType - Enumeration, integer type; field allows simple detection of SNMP device type. Values: rmsspa(1), coss(2), rcp2fprc(3), rcp21000co(4), rcp21000rm(5), rcp21000rcp(6), buc(7), rbc(8), minicoss(9); read only access; Setting the ID to any other value will default type to coss. OID -1.3.6.1.4.1.20712.1.4

devices - This field is subdivided into 5 branches: paradiseDevice, paradiseDeviceA, paradiseDeviceB paradiseDeviceC and modem. paradiseDevice branch currently is used for all Paradise Datacom LLC SNMP enabled devices except Modem. Branches for Devices A, B and C are reserved for future use.

paradiseDevice - Field contains tables that hold specific device information: Settings, Thresholds and Conditions. All table formats follow a common pattern: Index, Value, TextValue. The threshold table has an additional column for parameter validation. The conditions table has an extra column for event counters.

The Index column provides general table indexing; the Value column presents the current value of the relevant parameter; the TextValue column provides information about parameter name, measurement units and limits.

A value of "1" in the validation column of the thresholds table indicates the parameter is valid; a value of "2" indicates the parameter is invalid or "Not available".

The event counter column of the conditions table indicates how many times a value of a relevant parameter changed its state since system power-up.

settings - Table contains current device configuration and provides device management. See Table 12. Read/write access for settingsValue column.

thresholds - Table provides information about device internal limits and subsystems info. Refer to Table 13. Read only.

conditions - Table details device fault status information. See Table 14. Read only.

Table 12: SNMP Settings Values

settingIndex /settingValue	settingTextValue	Value OID 1.3.6.1.4.1.20712...	Description
1/INTEGER	SysMode'StandAlone=0,1:1Mode=1, 1:2Mode=2	2.1.1.1.2.1	System Operation mode
2/INTEGER	SwitchMode'Auto=0,Manual=1, SWLock=2	2.1.1.1.2.2	Redundancy switching mode
3/INTEGER	ControlMode'Local=0,Remote=1	2.1.1.1.2.3	Unit control mode
4/INTEGER	FanSpeed'Low=0,High=1,Auto=2	2.1.1.1.2.4	Fan Speed
5/INTEGER	Mute'Off=0,On=1	2.1.1.1.2.5	Unit mute status
6/INTEGER	Protocol'Normal=0,Terminal=1, Locus=2	2.1.1.1.2.6	Unit remote control protocol
7/INTEGER	Baud'9600=0,2400=1,4800=2, 19200=3,38400=4	2.1.1.1.2.7	Serial Interface speed
8/INTEGER	NetworkAddress'0..255	2.1.1.1.2.8	Serial interface address
9/INTEGER	Interface'RS232=0,RS485=1, IPNet=2,SNMP=3	2.1.1.1.2.9	Unit remote control interface
10/INTEGER	AuxFltHandle'Ignore=0,Major=1, Minor=2,Major+Mute=3,Minor+Mute=4	2.1.1.1.2.10	Auxiliary fault handling
11/INTEGER	AuxFltLofic'FaultOnHigh=0, FaultOnLow=1	2.1.1.1.2.11	Auxiliary fault logic
12/INTEGER	RFSWFltHandle'Ignore=0,Major=1, Minor=2,SwMute=3	2.1.1.1.2.12	RF switch fault handling
13/INTEGER	FaultLatch'Disable=0,Enable=1	2.1.1.1.2.13	Fault latch state
14/INTEGER	BUCFltHandle'Ignore=0,Major=1, Minor=2,Major+Mute=3	2.1.1.1.2.14	Internal BUC fault handling
15/INTEGER	BUCFltLofic'FaultOnHigh=0, FaultOnLow=1	2.1.1.1.2.15	Internal BUC fault logic
16/INTEGER	UserPassword'0..255	2.1.1.1.2.16	Numeric menu password
17/INTEGER	StartUpState'Standby=0,Online=1	2.1.1.1.2.17	Redundancy online/standby selection
18/INTEGER	Buzzer'Off=0,On=1	2.1.1.1.2.18	Audible alarm state
19/INTEGER	MenuPassword'Off=0,On=1	2.1.1.1.2.19	Menu password protection
20/INTEGER	Reserved'0..255	2.1.1.1.2.20	Reserved for future use
21/INTEGER	StandbyMode'HotStandby=0, ColdStandby=1	2.1.1.1.2.21	Redundancy standby mode
22/INTEGER	HPAStatus'HPA1=0,HPA2=1,HPA3=2	2.1.1.1.2.22	Redundancy HPA status
23/INTEGER	Priority'Pol1=0,Pol2=1	2.1.1.1.2.23	1:2 Mode priority select

24/INTEGER	FwdRFFltDis=0,LoRF1=1,LoRF2=2,ALC=3,HiRF1=4,HiRF2=5,HiRF3=6	2.1.1.1.2.24	Forward RF fault handling
25/INTEGER	HighRefRFFltHandleIgnore=0,Major=1, Minor=2	2.1.1.1.2.25	High reflected RF fault handling
26/INTEGER	SSPAAttenuation(dBx10)'0..200	2.1.1.1.2.26	Unit attenuation level
27/INTEGER	LowForwardRFthreshold(dBm)'0..80	2.1.1.1.2.27	Low forward RF threshold
28/INTEGER	HighRefRFThreshold(dBm)'0..80	2.1.1.1.2.28	High reflected RF threshold
29/INTEGER	IPAddressByte1'0..255	2.1.1.1.2.29	Device IP address byte1 (MSB)
30/INTEGER	IPAddressByte2'0..255	2.1.1.1.2.30	Device IP address byte2
31/INTEGER	IPAddressByte3'0..255	2.1.1.1.2.31	Device IP address byte3
32/INTEGER	IPAddressByte4'0..255	2.1.1.1.2.32	Device IP address byte4 (LSB)
33/INTEGER	IPGateWayByte1'0..255	2.1.1.1.2.33	Device Gateway address byte1 (MSB)
34/INTEGER	IPGateWayByte2'0..255	2.1.1.1.2.34	Device Gateway address byte2
35/INTEGER	IPGateWayByte3'0..255	2.1.1.1.2.35	Device Gateway address byte3
36/INTEGER	IPGateWayByte4'0..255	2.1.1.1.2.36	Device Gateway address byte4 (LSB)
37/INTEGER	IPSubnetByte1'0..255	2.1.1.1.2.37	Device Subnet Mask byte1 (MSB)
38/INTEGER	IPSubnetByte2'0..255	2.1.1.1.2.38	Device Subnet Mask byte2
39/INTEGER	IPSubnetByte3'0..255	2.1.1.1.2.39	Device Subnet Mask byte3
40/INTEGER	IPSubnetByte4'0..255	2.1.1.1.2.40	Device Subnet Mask byte4 (LSB)
41/INTEGER	IPPortByte1'0..255	2.1.1.1.2.41	Device Port address byte1 (MSB) (required only for IPNet Interface)
42/INTEGER	IPPortByte2'0..255	2.1.1.1.2.42	Device Port address byte2 (LSB) (required only for IPNet Interface)
43/INTEGER	IPLockByte1'0..255	2.1.1.1.2.43	Device IP lock address byte1 (MSB) (required only for IPNet Interface)
44/INTEGER	IPLockByte2'0..255	2.1.1.1.2.44	Device IP lock address byte2 (required only for IPNet Interface)
45/INTEGER	IPLockByte3'0..255	2.1.1.1.2.45	Device IP lock address byte3 (required only for IPNet Interface)
46/INTEGER	IPLockByte4'0..255	2.1.1.1.2.46	Device IP lock address byte4 (LSB) (required only for IPNet Interface)
47/INTEGER	N1Size'N1Off=0,Size2=2,Size4=4,Size8=8,Size16=16	2.1.1.1.2.47	N+1 Array Size
48/INTEGER	N1Address'1..16	2.1.1.1.2.48	N+1 Priority Address
49/INTEGER	N1AutoGain'Off=0,On=1	2.1.1.1.2.49	N+1 Auto Gain Option
50/INTEGER	Reserved	2.1.1.1.2.50	Reserved

Table 13: SNMP Threshold Values

thresholdIndex /thresholdValue	thresholdTextValue	Value OID 1.3.6.1.4.1.20712...	Description
1/INTEGER	ForwardRFPower(dBmx10)'0..800	2.1.2.1.2.1	Current value of forward RF power

2/INTEGER	ReflectedRFPower(dBmx10)'0..800	2.1.2.1.2.2	Current value of reflected RF power
3/INTEGER	SSPADCCurrent(Ampx10)'0..10000	2.1.2.1.2.3	SSPA DC current consumption
4/INTEGER	PS1Voltage(Voltx10)'0..200	2.1.2.1.2.4	Power Supply 1 output voltage
5/INTEGER	PS2Voltage(Voltx10)'0..200	2.1.2.1.2.5	Power Supply 2 output voltage
6/INTEGER	Booster1Voltage(Voltx10)'0..320	2.1.2.1.2.6	Booster 1 output voltage
7/INTEGER	Booster2Voltage(Voltx10)'0..320	2.1.2.1.2.7	Booster 2 output voltage
8/INTEGER	SSPACoreTemperature(C)'-100..100	2.1.2.1.2.8	SSPA core temperature
9/INTEGER	N1FwdRFPower(RFunitsx1)'0..10000	2.1.2.1.2.9	N+1 System Forward Power
10/INTEGER	N1SystemGain(dBx10)'500..900	2.1.2.1.2.10	N+1 System Linear Gain
11/INTEGER	N1RefRFPower(RFunitsx1)'0..10000	2.1.2.1.2.11	N+1 System Reflected Power
12/INTEGER	N1CabinetTemp(C)'-100..100	2.1.2.1.2.12	N+1 Cabinet Temperature

Table 14: SNMP Condition Values

conditionIndex /conditionValue	conditionTextValue	Value OID 1.3.6.1.4.1.20712...	Description
1/INTEGER	SummaryFault'NoFault=0,Fault=1	2.1.3.1.2.1	Summary fault state
2/INTEGER	PowerSupplyFault'NoFault=0,Fault=1	2.1.3.1.2.2	Power supply fault state
3/INTEGER	HighTemperatureFault'NoFault=0, Fault=1	2.1.3.1.2.3	High Temperature fault state
4/INTEGER	LowRegulatorVoltageFault'NoFault=0, Fault=1	2.1.3.1.2.4	Low Regulator voltage state
5/INTEGER	LowDCCurrentFault'NoFault=0 ,Fault=1	2.1.3.1.2.5	Low DC Current fault state
6/INTEGER	AuxiliaryFault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.6	Auxiliary fault state
7/INTEGER	BUCFault'NoFault=0,Fault=1,N/A=2	2.1.3.1.2.7	BUC fault state
8/INTEGER	Module1Fault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.8	Module1 summary fault state
9/INTEGER	Module2Fault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.9	Module2 summary fault state
10/INTEGER	Module3Fault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.10	Module3 summary fault state
11/INTEGER	Module4Fault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.11	Module4 summary fault state
12/INTEGER	CoolingFanFault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.12	Cooling fan fault state
13/INTEGER	LowForwardRFFault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.13	Low forward RF fault state
14/INTEGER	HighReflectedRFFault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.14	High reflected RF fault state
15/INTEGER	RFSwitch1Position'Fault=1, N/A=2,Pos1=3,Pos2=4	2.1.3.1.2.15	RF switch 1 position /fault state
16/INTEGER	RFSwitch2Position'Fault=1, N/A=2,Pos1=3,Pos2=4	2.1.3.1.2.16	RF switch 2 position /fault state
17/INTEGER	FaultsPortbyte1'0..255	2.1.3.1.2.17	Faults on logic port 1 raw data
18/INTEGER	FaultsPortbyte2'0..255	2.1.3.1.2.18	Faults on logic port 2 raw data
19/INTEGER	IOBoardHardwareID'0..255	2.1.3.1.2.19	I/O Board hardware revision

20/INTEGER	DigitalCoreBoardID'0..255	2.1.3.1.2.20	Digital Core board hardware revision
21/INTEGER	UnitStandbyState'Online=0, Standby=1	2.1.3.1.2.21	Current unit redundancy state
22/INTEGER	Reserved'0..255	2.1.3.1.2.22	Reserved for factory use only
23/INTEGER	N1UnitState'Slave=0, Master=1,N1Off=2	2.1.3.1.2.23	Unit N+1 state
24/INTEGER	ExtFanFault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.24	N+1 Cabinet Impeller Fault
25/INTEGER	N1SysFaults'0..16	2.1.3.1.2.25	Number of SSPA faults in N+1 system
26/INTEGER	SelectedAtten(dBx10)'0,,200	2.1.3.1.2.26	Actual SSPA attenuator value
27/INTEGER	Reserved'0..255	2.1.3.1.2.27	Reserved for factory use only
28/INTEGER	Reserved'0..255	2.1.3.1.2.28	Reserved for factory use only
29/INTEGER	PreAmpFault'NoFault=0, Fault=1,N/A=2	2.1.3.1.2.29	Pre-Amplifier Fault

Configuring SSPA to Work with SNMP Protocol

Set up the unit IP Address. Select the following sequence from the SSPA Front Panel:

1. Tap the Home icon to return to the Main Menu;
2. Tap the Communication button;
3. Tap the IP Setup button;
4. Tap the IP Address button;
5. Input the unit IP address. Tap the OK button when complete.

Set up the unit Gateway Address. Select the following sequence from the touchscreen:

1. Tap the Home icon to return to the Main Menu;
2. Tap the Communication button;
3. Tap the IP Setup button;
4. Tap the Gateway button;
5. Input the unit Gateway address. If no gateway is needed, set the address to 0.0.0.0. Tap the OK button when complete.

Set up the unit Subnet Mask. Select the following sequence from the touchscreen:

1. Tap the Home icon to return to the Main Menu;
2. Tap the Communication button;
3. Tap the IP Setup button;
4. Tap the Subnet button;
5. Input the Subnet Mask address. Tap the OK button when complete.

Set up the unit Community Set and Community Get strings. Select the following sequence from the touchscreen:

1. Tap the Home icon to return to the Main Menu;
2. Tap the Communication button;
3. Tap the SNMP Setup button;
4. Tap the Community Get or Community Set button;
5. Enter the unit community strings information. Tap the OK button when complete.

Set up the unit interface to SNMP. Select the following sequence from the touchscreen:

1. Tap the Home icon to return to the Main Menu;
2. Tap the Interface button;
3. Tick the SNMP checkbox;
4. Restart the unit by cycling power or by selecting the Reset option from the front panel menu.

SNMP protocol now is set and ready to be used.

Connecting to a MIB Browser

For a MIB browser application example, we will be using the freeware browser GetIf, version 2.3.1. There are many other browsers available for download from <http://www.snmpplink.org/software/forenduser/#7>.

1. Copy the provided Paradise Datacom LLC MIB file into the Getif Mibs subfolder.
2. Start the Getif application.
3. Select the unit IP address and community strings in the relevant text boxes on the Parameters tab (see Figure 19) and then click the Start button.
4. Select the MIBBrowser tab.
5. Click on 'iso main entity' on the MIB tree, then click the Start button.
6. See update data in output data box (Figure 20).
7. Select settingValue.5 entity (SSPA Mute), set the value to 1 and click the Set button.
8. Observe the Mute state on the SSPA change to a "Mute On" state. See Figure 21.

Figure 19: Getif Application Parameters Tab

Figure 20: Getif MBrowser Window

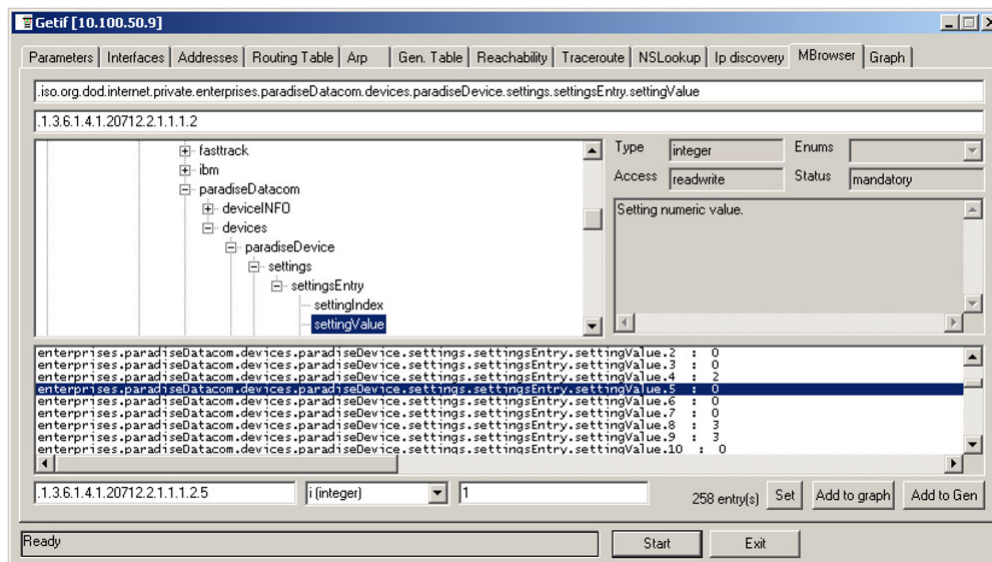


Figure 21: Getif MBrowser Window, Assign settingValue.5 to a Value of '1'

Extended SNMP Operation

The SSPA is equipped with a DigitalCore5 control board and utilizes firmware version 6.00 and above. These units feature an extended SNMP MIB and support SNMP traps. This extended MIB covers several OID objects related to SNMP trap functions.

These units allow independent functioning of two SNMP traps (asynchronous notifications): Fault trap and Conditions trap. Both traps can be enabled or disabled by the operator. The operator can also specify how many times the same trap notification will be sent back to the SNMP manager.

The SNMP manager IP address is also selectable by the operator. This IP address must be specified in the relevant OID branch.

Every trap message is marked by the fixed trap community string "trap". This community name is not user selectable.

The Fault trap allows asynchronous notification of the SSPA fault state change. When enabled, trap notification will be sent to a manager every time either the summary fault state or a fault type is changed. The Last Fault Time ticks counter will be reset each time the summary fault changes its state to "Alarm" or when a new fault condition is detected. This counter also resets itself during device power-up. If no faults are present after device power-up, Fault Trap will issue a "Cold Start" notification to the manager.

The Condition Trap allows the unit to generate asynchronous notifications independent from the unit fault state. Currently, the following conditions can be used for this trap triggering: Forward RF Level, Reflected RF Level (for units equipped with a Reflected RF sensor), DC Current level, PS Voltage level, module plate temperature, LNA current (if an external LNA is powered through the SSPA auxiliary power port).

To enable this trap, set the Condition Trap Resend option to a non-zero value and determine the upper and lower limits for the condition window. Window values must be selected according to the relevant selected condition measured by the unit. For example: Temperature must be selected in degrees, RF power in tenth of dBms, etc.

After successful configuration, the SSPA will generate a notification every time the selected condition is outside the selected measurement window. For units with multiple measured parameters, the relevant condition location must be selected (i.e., units with two power supplies use 1 for PS1, and 2 for PS2). For other conditions, this value is "don't care".

Both traps will send a "Device Up Time" time stamp with every trap notification.

Extended SNMP MIB Tree


```

--paradiseDatacom(1.3.6.1.4.1.20712)
|
+--deviceINFO(1.3.6.1.4.1.20712.1)
|
|   +-- r-n OctetString deviceID(1.3.6.1.4.1.20712.1.1)
|   +-- rwn OctetString deviceLocation(1.3.6.1.4.1.20712.1.2)
|   +-- r-n OctetString deviceRevision(1.3.6.1.4.1.20712.1.3)
|   +-- r-n Enumeration deviceType(1.3.6.1.4.1.20712.1.4)
|   |
|   +--deviceTimeTicks(1.3.6.1.4.1.20712.1.5)
|   |
|   |   +-- r-n TimeTicks deviceUpTime(1.3.6.1.4.1.20712.1.5.1)
|   |   +-- r-n TimeTicks deviceFaultTime(1.3.6.1.4.1.20712.1.5.2)
|   |
|   +--deviceCounters(1.3.6.1.4.1.20712.1.6)
|   |
|   |   +-- r-n Counter deviceSFaultCounter(1)
|   |
|   +--deviceFaultState(1.3.6.1.4.1.20712.1.7)
|   |
|   |   +-- r-n Enumeration deviceSummaryFault(1)
|   |   +-- r-n Enumeration deviceLastFault(2)
|   |
|   +--deviceTrapedCondition(1.3.6.1.4.1.20712.1.8)
|   |
|   |   +-- r-n Integer32 deviceTrappedConditionValue(1)
|   |
|   +--deviceTrapControl(1.3.6.1.4.1.20712.1.9)
|   |
|   |   +-- rwn IPAddress deviceManagerIP(1)
|   |   +-- rwn Integer32 deviceFaultsTrapResend(2)
|   |   +-- rwn Integer32 deviceConditionTrapResend(3)
|   |   +-- rwn Enumeration deviceConditionToMonitor(4)
|   |   +-- rwn Integer32 deviceConditionULimit(5)
|   |   +-- rwn Integer32 deviceConditionLLimit(6)
|   |   +-- rwn Integer32 deviceConditionLocation(7)
|   |
|   +--deviceTraps(1.3.6.1.4.1.20712.1.10)
|   |
|   |   +-- (1.3.6.1.4.1.20712.1.10.0)
|   |
|   +--deviceFaultsTrap(1.3.6.1.4.1.20712.1.10.0.11)
|   |   [deviceUpTime,deviceSummaryFault,deviceLastFault]
|   |
|   +--deviceConditionTrap(1.3.6.1.4.1.20712.1.10.0.12)
|   |   [deviceUpTime,deviceConditionToMonitor,deviceTrappedConditionValue]
|
+--devices(2)
|
+--paradiseDevice(1)
|
|   +--settings(1)
|   |
|   |   +--settingsEntry(1) [settingIndex]
|   |   |
|   |   |   +-- rwn Integer32 settingIndex(1)
|   |   |   +-- rwn Integer32 settingValue(2)
|   |   |   +-- r-n OctetString settingTextValue(3)
|   |   |
|   |   +--thresholds(2)
|   |   |
|   |   |   +--thresholdsEntry(1) [thresholdIndex]
|   |   |   |
|   |   |   |   +-- rwn Integer32 thresholdIndex(1)
|   |   |   |   +-- r-n Integer32 thresholdValue(2)
|   |   |   |   +-- r-n Enumeration thresholdStatus(3)
|   |   |   |   +-- r-n OctetString thresholdText(4)
|   |   |   |
|   |   |   +--conditions(3)
|   |   |   |
|   |   |   |   +--conditionsEntry(1) [conditionsIndex]
|   |   |   |   |
|   |   |   |   |   +-- rwn Integer32 conditionsIndex(1)
|   |   |   |   |   +-- r-n Integer32 conditionsValue(2)
|   |   |   |   |   +-- r-n Counter conditionsEventCount(3)
|   |   |   |   |   +-- r-n OctetString conditionsText(4)
|   |   |   |
|   |   |
|   |   +--paradiseDeviceA(2)
|   |   |
|   |   +--paradiseDeviceB(3)
|   |   |
|   |   +--paradiseDeviceC(4)

```

|
+--modem(5)

Extended SNMP MIB Tree Elements in Detail

deviceRevision -- Octet string type; maximum length 60; field specifies device firmware revision; read only access; OID -1.3.6.1.4.1.20712.1.3

deviceUpTime -- Device total up time in hundredths of a second;

deviceFaultTime -- Time elapsed since deviceLastFault last state change in hundredths of second;

deviceSFaultCounter -- Counts number of Summary alarms since device power up;

deviceSummaryFault -- Enumerated value of device last detected fault condition. The following enumerated values are possible: coldStart(1), overTemp(2), badRegltr(3), lowDCCur(4), aux(5), buc(6), lna(7), hpa(8), lowFwdRF(9), highRefRF(10), nPlusOne (11), badPS(12), timeOut(13), other(14), noFaults(15);

deviceTrappedConditionValue -- Condition value trapped by deviceConditionTrap;

deviceManagerIP -- Trap recipient IP address;

deviceFaultsTrapResend -- Defines how many times deviceFaultsTrap will repeat the message. 0 - Disables trap triggering;

deviceConditionTrapResend -- Defines how many times condition trap will repeat the message. 0 - Disables trap triggering

deviceConditionToMonitor -- Enumerated value. Object defines which condition to trap. The following enumerations are possible: fwdRF(1), dcCurrent(2), voltagePS(3), temperature(4), lnaCur(5), refRF(6);

deviceConditionULimit -- Conditions upper trap limit. Trap will be sent when the condition exceeds this limit.

deviceConditionLLimit -- Conditions lower trap limit. Trap will be sent when condition falls below this limit.

deviceConditionLocation -- Parameter specifying condition measuring location in device containing multiple location of the same type (multiple PS, RF modules, LNAs etc.). Set to 0 for system-wide conditions, 1, ... n for relevant unit. For devices with single condition location parameter is "don't care".

deviceFaultsTrap -- Trap fires deviceFaultsTrapResend times when deviceLastFault or deviceSummaryFault state changes.

deviceConditionTrap -- Trap fires deviceConditionTrapResend times when value specified by deviceConditionToMonitor is outside of the window specified by deviceConditionULimit and deviceConditionLLimit. In the case of a device with multiple conditions of the same type, specify measurement location in deviceConditionLocation.

Teledyne Paradise Datacom
Drawing Number 216512-11 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-11.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Ethernet Interface Set-Up and Cabling

Teledyne Paradise Datacom
Drawing Number: 216512-12 Revision E
ECO A26266
October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-12.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Ethernet Interface Quick Set-Up

This section describes the procedure for setting up the RM SSPA Ethernet IP interface through the front panel interface. It also describes basic network setup of a Windows-based host PC for a peer-to-peer network connection with the RM SSPA.

⚠ Important! Do not use a crossover cable to connect to the network hub, use crossover only for direct PC-to-RM SSPA connection!

Using a crossover null-modem network cable, connect the Ethernet Port (J9) of the RM SSPA to a host PC. See the **10/100 Base-T Ethernet Cable Wiring** section for wiring details.

If the PC NIC card has not previously been set, do so now using the following procedure; otherwise skip to the **Configure Unit to Use IPNET Protocol** section.

⚠ Note: For PCs running earlier versions of Windows, go to the Control panel and open the Network settings and open the TCP/IP properties of your LAN card. Pick up the procedure with Step 8.

1. On a PC running Windows 10, click on the Start icon.
2. Type "Settings" and open the Settings window.
3. Click on the Network & Internet icon.
4. Click Ethernet.
5. Click Change Adapter Options.
6. Right-click on the connection that you want to configure and select Properties from the menu.
7. Select Internet Protocol Version 4 (TCP/IPv4) and click on the Properties button.
8. Select "Use the following IP Address" and enter the parameters shown in Figure 1 in the IP Address and Subnet Mask fields.

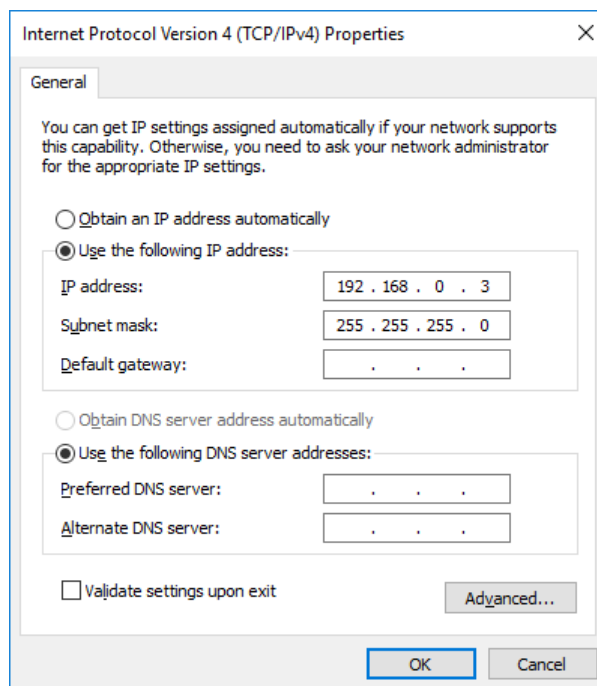


Figure 1: TCP/IPv4 Properties Window

IP Address.....:192.168.0.3
Subnet Mask.....:255.255.255.0

After you press "OK", depending on the operating system, you may need to reboot the workstation.

After optional reboot, open the Command Prompt console window and enter:

C:\>IPCONFIG

This will display the IP settings:

```
0 Ethernet Adapter:  
IP Address:      192.168.0.3  
Subnet Mask:     255.255.255.0  
Default Gateway:
```

You can now try to Ping your PC. In Command Prompt window enter the following:

C:\>ping 192.168.0.3

This will display:

```
Pinging 192.168.0.3 with 32 bytes of data:  
Reply from 192.168.0.3: bytes=32 time < 10ms TTL=128  
Reply from 192.168.0.3: bytes=32 time < 10ms TTL=128  
Reply from 192.168.0.3: bytes=32 time < 10ms TTL=128  
Reply from 192.168.0.3: bytes=32 time < 10ms TTL=128  
Ping statistics for 192.168.0.3:  
    Packets: Sent=4, Received=4, Lost=0 (0%loss),  
    Approximate round trip times I milli-seconds:  
        Minimum=0ms, Maximum=0ms, Average=0ms
```

Your network LAN card is now set up.

Configure Unit to Use IPNET Protocol

Use the following procedure to configure your unit to operate using the IPNET protocol.

1. On the RM SSPA unit front panel, tap the Home icon to return to the Main Menu;
2. Tap the Communications button;
3. Tap the IP Setup button;
4. Tap the IP Address button;
5. Enter IP address 192.168.0.0;
6. Tap the OK button to accept the entered values.

Follow the same menu route to select the Subnet, Gateway, IP Port and IP Lock items, and set those parameters to:

```
Subnet:255.255.255.0;  
Gateway:0.0.0.0;  
IPLock:255.255.255.255;  
IPPort:1038.
```

Verify that the values entered above are displayed in the Communications > IP Setup menu.

1. On the RM SSPA unit front panel, tap the Home icon to return to the Main Menu;
2. Tap the Communications button;
3. Tap the Interface button;
4. Tick the IPNET checkbox.

The RM SSPA is now set up to work with Ethernet Interface. You may now ping the SSPA unit from host PC:

```
C:\>ping 192.168.0.0
```

This will display:

```
Pinging 192.168.0.0 with 32 bytes of data:  
Reply from 192.168.0.0: bytes=32 time < 10ms TTL=128  
Reply from 192.168.0.0: bytes=32 time < 10ms TTL=128  
Reply from 192.168.0.0: bytes=32 time < 10ms TTL=128  
Reply from 192.168.0.0: bytes=32 time < 10ms TTL=128  
Ping statistics for 192.168.0.3:  
    Packets: Sent=4, Received=4, Lost=0 (0%loss),  
    Approximate round trip times I milli-seconds:  
        Minimum=0ms, Maximum=0ms, Average=0ms
```

Run the Paradise Datacom Universal M&C software on a host PC to check all M&C functions. When prompted, select an Internet connection to the unit using IP Address 192.168.0.0, local port address to 1039 and remote port address to 1038. The SSPA now connected to your host workstation for remote M&C.

10/100 Base-T Ethernet Cable Wiring

This section briefly describes the basic theory related to the physical layer of 10/100Bas-T networking, as well as proper wiring techniques.

There are several classifications of cable used for twisted-pair networks. Recommended cable for all new installations is Category 5 (or CAT 5). CAT 5 cable has four twisted pairs of wire for a total of eight individually insulated wires. Each pair is color coded with one wire having a solid color (blue, orange, green, or brown) twisted around a second wire with a white background and a stripe of the same color. The solid colors may have a white stripe in some cables. Cable colors are commonly described using the background color followed by the color of the stripe; e.g., white-orange is a cable with a white background and an orange stripe.

The straight through and crossover patch cables are terminated with CAT 5 RJ-45 modular plugs. RJ-45 plugs are similar to those you'll see on the end of your telephone cable except they have eight versus four or six contacts on the end of the plug and they are about twice as big. Make sure they are rated for CAT 5 wiring. (RJ means "Registered Jack"). A special Modular Plug Crimping Tool (such as that shown in Figure 2) is needed for proper wiring.



Figure 2: Modular Plug Crimping Tool

The 10BASE-T and 100BASE-TX Ethernets consist of two transmission lines. Each transmission line is a pair of twisted wires. One pair receives data signals and the other pair transmits data signals. A balanced line driver or transmitter is at one end of one of these lines and a line receiver is at the other end. A simplified schematic for one of these lines and its transmitter and receiver is shown in Figure 3.

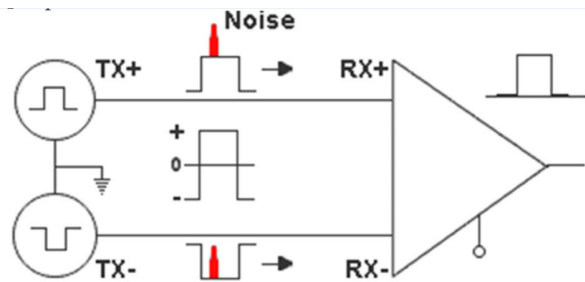


Figure 3: Transmission Line

The main concern is the transient magnetic fields which surrounds the wires and the magnetic fields generated externally by the other transmission lines in the cable, other network cables, electric motors, fluorescent lights, telephone and electric lines, lightning, etc. This is known as noise. Magnetic fields induce their own pulses in a transmission line, which may literally bury the Ethernet pulses.

The twisted-pair Ethernet employs two principle means for combating noise. The first is the use of balanced transmitters and receivers. A signal pulse actually consists of two simultaneous pulses relative to ground: a negative pulse on one line and a positive pulse on the other. The receiver detects the total difference between these two pulses. Since a pulse of noise (shown in red in the diagram) usually produces pulses of the same polarity on both lines one pulse is essentially canceled by out the other at the receiver. In addition, the magnetic field surrounding one wire from a signal pulse is a mirror of the one on the other wire. At a very short distance from the two wires, the magnetic fields are opposite and have a tendency to cancel the effect of each other. This reduces the line's impact on the other pair of wires and the rest of the world.

The second and the primary means of reducing cross-talk between the pairs in the cable, is the double helix configuration produced by twisting the wires together. This configuration produces symmetrical (identical) noise signals in each wire. Ideally, their difference, as detected at the receiver, is zero. In actuality, it is much reduced.

Pin-out diagrams of the two types of UTP Ethernet cables are shown in Figure 4.

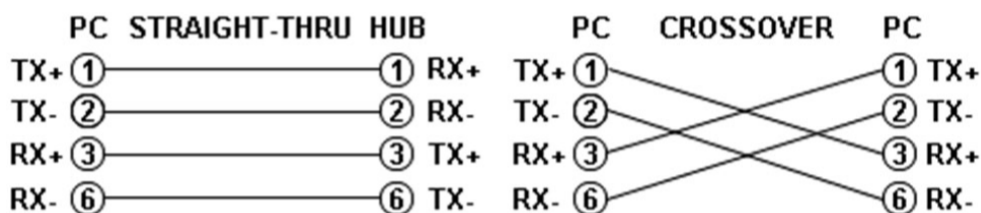


Figure 4: Ethernet Cable Pin-outs

Note that the TX (transmitter) pins are connected to corresponding RX (receiver) pins, plus to plus and minus to minus. Use a crossover cable to connect units with identical interfaces. If you use a straight-through cable, one of the two units must, in effect, perform the crossover function.

Two wire color-code standards apply: EIA/TIA 568A and EIA/TIA 568B. The codes are commonly depicted with RJ-45 jacks as shown in Figure 5.

If we apply the 568A color code and show all eight wires, our pin-out looks like Figure 6.

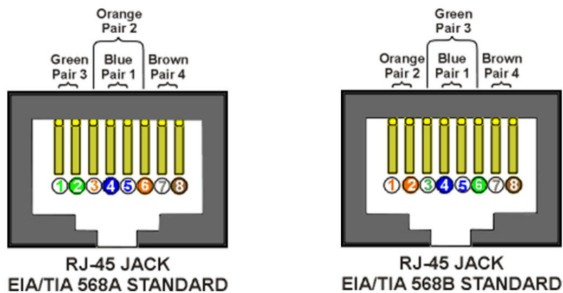


Figure 5: Ethernet Wire Color Code Standards

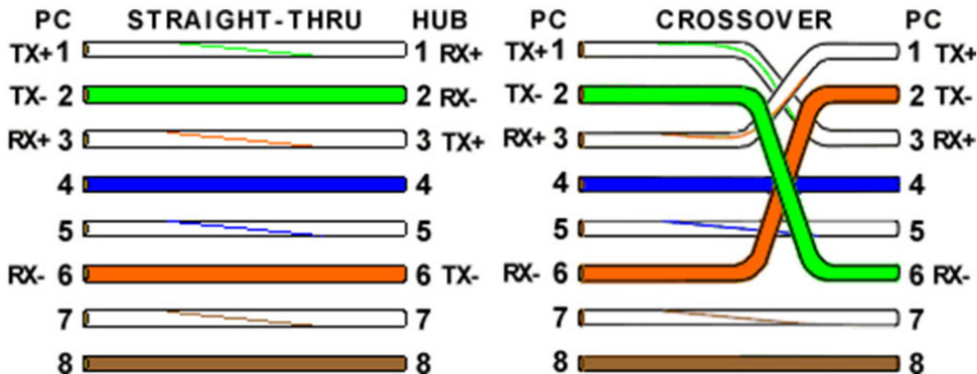


Figure 6: Wiring Using 568A Color Codes

Note that pins 4, 5, 7, and 8 and the blue and brown pairs are not used in either standard. Quite contrary to what you may read elsewhere, these pins and wires are not used or required to implement 100BASE-TX duplexing.

There are only two unique cable ends in the preceding diagrams, they correspond to the 568A and 568B RJ-45 jacks and are shown in Figure 7.

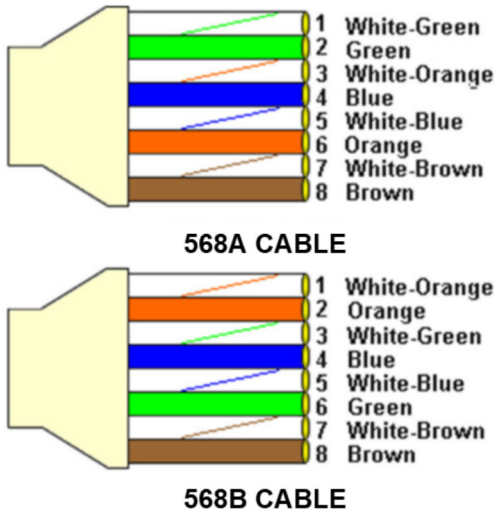


Figure 7: Wiring Using 568A and 568B Color Codes

Again, the wires with colored backgrounds may have white stripes and may be denoted that way in diagrams found elsewhere. For example, the green wire may be labeled Green-White. The background color is always specified first.

To properly configure the cables, all you need to remember are the diagrams for the two cable ends and the following rules:

- A straight-thru cable has identical ends.
- A crossover cable has different ends.

It makes no functional difference which standard you use for a straight-thru cable. You can start a crossover cable with either standard as long as the other end is the other standard. It makes no functional difference which end is which. A 568A patch cable will work in a network with 568B wiring and a 568B patch cable will work in a 568A network.

Here are some essential cabling rules:

- Try to avoid running cables parallel to power cables.
- Do not bend cables to less than four times the diameter of the cable.
- If you bundle a group of cables together with cable ties (zip ties), do not over-cinch them. It's okay to snug them together firmly; but don't tighten them so much that you deform the cables.
- Keep cables away from devices which can introduce noise into them, such as: copy machines, electric heaters, speakers, printers, TV sets, fluorescent lights, copiers, welding machines, microwave ovens, telephones, fans, elevators, motors, electric ovens, dryers, washing machines, and shop equipment.
- Avoid stretching UTP cables (tension when pulling cables should not exceed 25 lbs.).
- Do not run UTP cable outside of a building. It presents a very dangerous lightning hazard!
- Do not use a stapler to secure UTP cables. Use telephone wire/RG-6 coaxial wire hangers, which are available at most hardware stores.

Teledyne Paradise Datacom
Drawing Number 216512-12 Revision E
ECO A26266
Last Modified: October 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216512/216512-12.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Unit Control with Universal M&C Software

Teledyne Paradise Datacom
Drawing Number: 216594-2 Revision D
ECO A26152
June 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216594/216594-2.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Introduction

This section describes the control of a remote unit using Teledyne Paradise Datacom's free Windows-based Universal Monitor and Control software.

Download/Install Software

Teledyne Paradise Datacom provides a free version of its Universal Monitor and Control (M&C) Software available for download from its web site. Install the software on a PC running Windows 7 or later.

Navigate to the Support > Downloads page and click on the latest version of the software to download the zip file.

Unzip the package and run the setup.exe file. This launches the Universal M&C Software installer. Follow the prompts and agree to the license agreement to install the application. When complete, close the installer.



By default the installer saves the software to C:\Program Files (x86)\Paradise Datacom. When running the installer, you can change the destination of the installation.

The software may be used to remotely monitor and control any of the following Teledyne Paradise Datacom products:

- [Rack mountable \(RM\) Amplifiers \(3RU, 5RU, 7RU\)](#)
- [Compact Outdoor \(CO\) Amplifiers](#)
- [High Power Outdoor \(HPO\) Amplifiers](#)
- [Indoor PowerMAX Amplifier Systems](#)
- [Outdoor PowerMAX Amplifier Systems](#)
- [System Controllers](#)

Add RM Unit to Universal M&C

Launch the Teledyne Paradise Datacom Universal M&C software from the Programs Menu of your PC. During installation, a shortcut to the software may have been added to your desktop.

To add a new rack mountable amplifier, click the 'Action' menu and select 'Add Unit' from the pull-down menu. Select 'Rackmount' from the menu choices. See Figure 1.

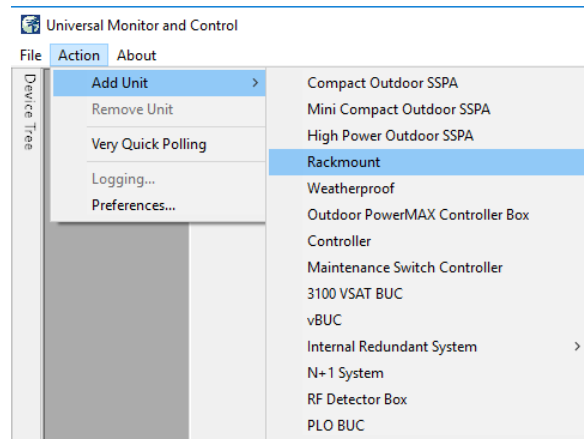


Figure 1: Universal M&C > Action > Add Unit > Rackmount

An 'Add Rackmount SSPA' dialog window will appear.

Enter a Unit ID (not required although it is recommended). If a Unit ID isn't entered the Unit ID will be assigned by the M&C.

To add a unit connected to a serial port you must supply a Port and a Baud Rate. See Figure 2.


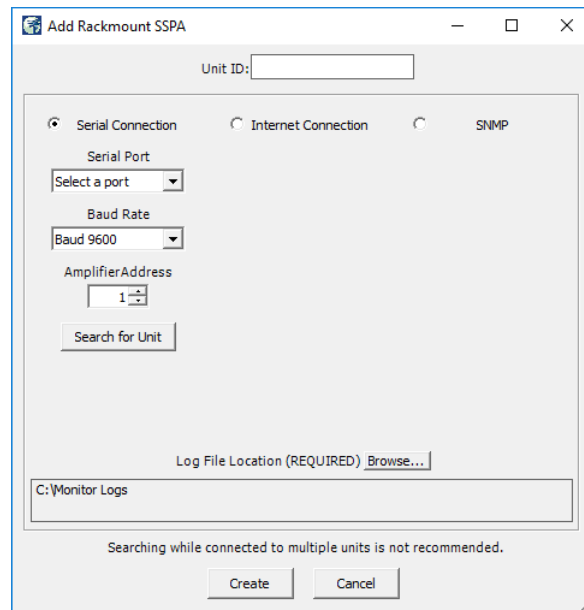


Figure 2: Select a COM Port and Baud Rate for Serial COMs

To add a unit connected via UDP (TCP/IP) you must supply either a Hostname or an IP Address. See Figure 3.

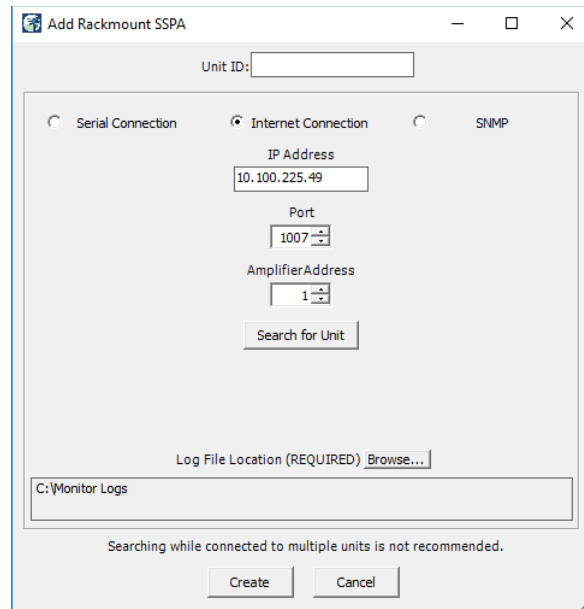

Unit ID:

☐ Serial Connection ☒ Internet Connection ☐ SNMP

IP Address

Port

AmplifierAddress

Log File Location (REQUIRED)

Searching while connected to multiple units is not recommended.

Figure 3: Enter IP Address and Port Address for UDP COMs

Specify the Unit's unique address in the Amplifier Address box. If you don't know the address of the unit you may search for it. Be aware that this search feature is only useful when you have only one unit connected to your PC at a time.

Choose a log file location by clicking the 'Browse...' button. The default is the "My Documents" folder. The log file name will be the UnitID and the extension ".log" appended to it. i.e. "Unit1.log".

Click on the 'Create' button to connect to the unit. The Universal M&C software will open a new window from which you can control and review the status of the connected unit.

Overview of RM SSPA M&C

Each SSPA in the Rackmount M&C has six screens:

- [Status Tab](#)
- [Settings Tab](#)
- [Faults Tab](#)
- [IP Setup Tab](#)
- [N+1 Settings Tab](#)
- [SNMP Tab](#)

Status Tab

The first screen is the "Status" tab, shown in Figure 4. The Status tab shows the current conditions (or state) of the connected SSPA. In addition, the Status tab allows the operator to change the Mute state of the carrier and allows adjustment of the on-board attenuator for gain control.

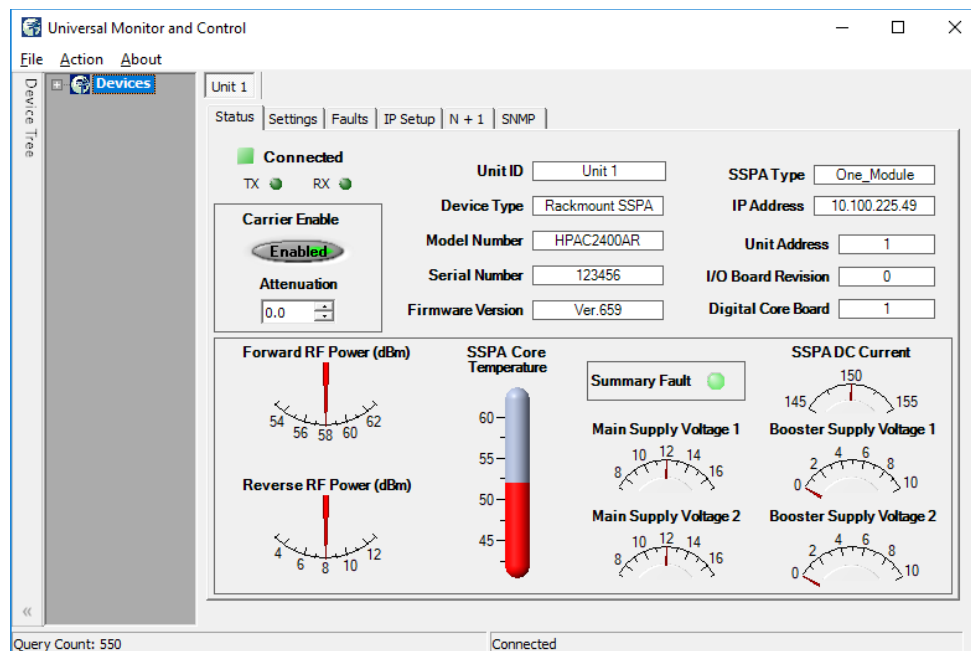


Figure 4: Universal M&C Software > Status Tab

Settings Tab

The second screen is the "Settings" tab, shown in Figure 5. It shows the user all available settings on the SSPA. All user-adjustable settings are allowed to be modified to suit the specific needs of the customer. However, it should be noted that the SSPA is configured for the customer at the factory.

If modification of any settings is necessary, details of each setting, condition and threshold are available in the Settings, Conditions and Thresholds description of the **Remote Control Protocol** section of any rack mountable amplifier manual.

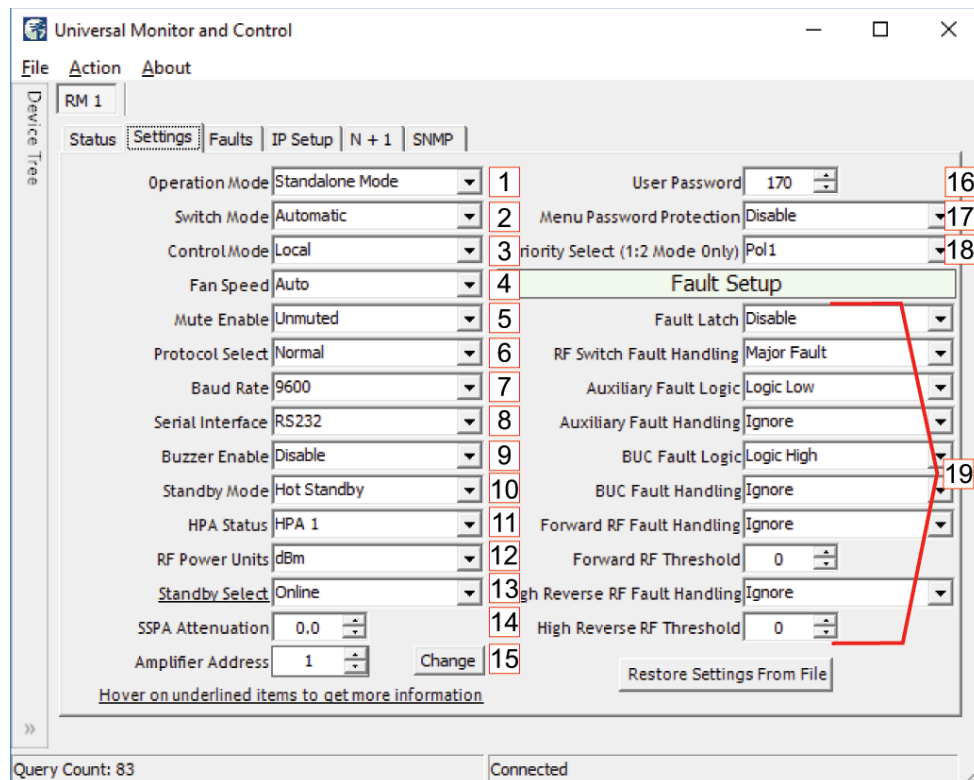


Figure 5: Universal M&C Software > Settings Tab

Operation Mode [1]

Select between Standalone Mode, (single unit), 1:1 Mode, 1:2 Mode, 1:1 Phase Combined or 1:2 Phase Combined.

If the amplifier will be configured in a redundant system and controlled with an external controller, each system amplifier should be set to Standalone Mode.

If the amplifier will be configured in a redundant system but will be controlled using internal control logic, each system amplifier should be set to the appropriate redundant mode. All amplifiers in the redundant system should be set to the same mode.

For more information on settings used for internal 1:1 redundancy mode, see the **Internal 1:1 Redundant System Operation** section.

For more information on settings used for internal 1:2 redundancy mode, see the **Internal 1:2 Redundant System Operation** section.

Switch Mode [2]

Select between Automatic switching, Manual switching or Switch Lock.

Control Mode [3]

Select between Local or Remote control.

Fan Speed [4]

Select between Low, High or Auto.

Mute Enable [5]

Select Muted or Unmuted.

Protocol Select [6]

Select Normal or Terminal. The operator will be asked to verify any to change to the Protocol Select setting. Communication with the amplifier may be affected.

Baud Rate [7]

Select a baud rate of 2400, 4800, 9600 (the default), 19200, or 38400. The operator will be asked to verify any to change to the Baud Rate setting. Communication with the amplifier may be affected.

Serial Interface [8]

Select the type of serial communications interface to use: RS232, RS485, IPNET or SNMP. The operator will be asked to verify any to change to the Serial Interface setting. Communication with the amplifier may be affected.

Buzzer Enable [9]

Enable or Disable the audible buzzer on the unit.

Standby Mode [10]

Select Hot Standby or Cold Standby. In Cold Standby mode, the RF module is muted when its Standby Select setting is set to Standby.

HPA Status [11]

Select HPA1, HPA2 or HPA3. For use in redundant systems.

RF Power Units [12]

Select the type of unit displayed on the front panel: dBm or Watts.

Standby Select [13]

Select the disposition of the amplifier in a redundant system: Standby or Online.

SSPA Attenuation [14]

The Gain Adjustment of the unit is adjustable here, from 0 to 20 in 0.1 dB steps.

Amplifier Address [15]

Sets a network address for the unit. Range is 0 to 255. Click the 'Change' button to change the address. The operator will be asked to verify any to change to the Amplifier Address setting. Communication with the amplifier may be affected.

User Password [16]

Sets a password for the unit. Range is 0 to 255.

Menu Password Protection [17]

Enable or Disable password protection for the unit.

Priority Select [18]

For use in 1:2 Mode only. Assign whether the standby unit will be switched to Pol1 or Pol2 if the amplifiers transmitting to both polarities exhibit failures and the standby unit must switch to one of the polarities. All units in a 1:2 configuration must use the same Priority Select setting.

Fault Setups [19]

The user may Enable or Disable fault latching, and set the fault logic and handling for RF Switch faults, Auxiliary faults, BUC faults, Forward RF faults and High Reverse RF faults. Logic settings are Logic Low or Logic High.

RF Switch Fault Handling settings include Ignore, Minor Fault, Major Fault, and Switchover Mute.

Auxiliary Fault Handling settings include Ignore, Minor Fault, Major Fault, Minor Fault with Mute, and Major Fault with Mute.

Forward RF Fault Handling settings include Ignore, Low RF Major Fault, Low RF Minor Fault, ALC On, High RF Major Fault, High RF Minor Fault, and High RF Major Fault with Mute.

High Reverse RF Fault Handling settings include Ignore, Major Fault, and Minor Fault.

The user can also set the threshold levels for Forward RF and High Reverse RF.

Faults Tab

The third screen is the "Faults" tab, shown in Figure 6. It shows the user the status of all faults on-board the SSPA. These include: Summary, Module # faults, Standby State (green = Online; red = Standby); Power Supply, Low DC Voltage and Current, Fans, BUC, High Temperature, Forward RF and High Reflected RF, Auxiliary, switch faults (for units configured in a redundant system), and optional faults.

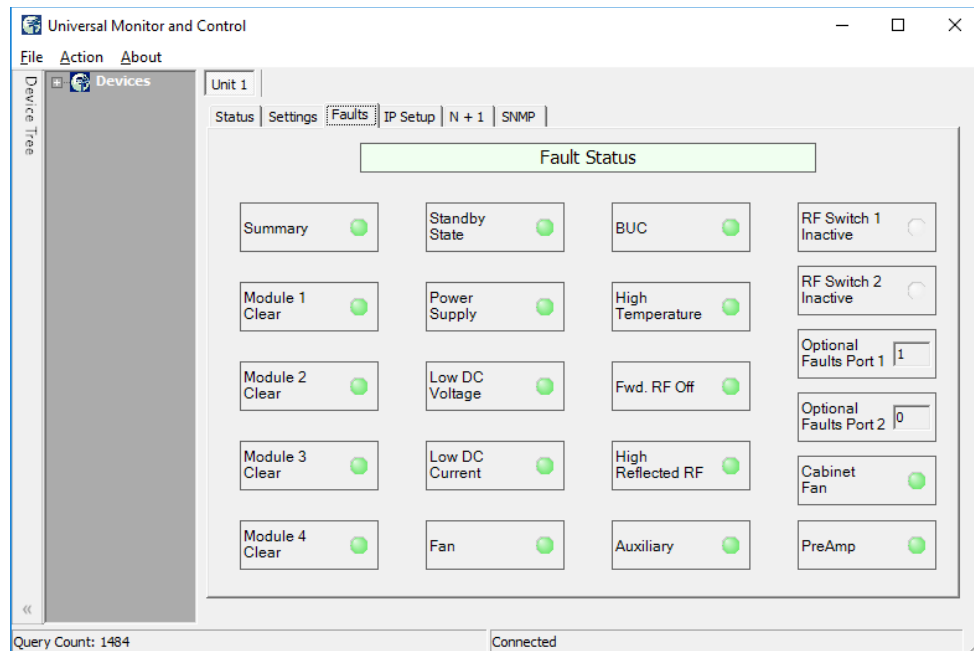


Figure 6: Universal M&C Software > Faults Tab

Each RF Module in the SSPA is monitored for faults in addition to the SSPA itself. If the SSPA does not include a module, non-existent modules will show up with a status of 'N/A' in the Module Status box, and the indicator will turn yellow.

IP Setup Tab

The fourth screen is the "IP Setup" screen, shown in Figure 7. It displays all of the TCP/IP settings on the SSPA.

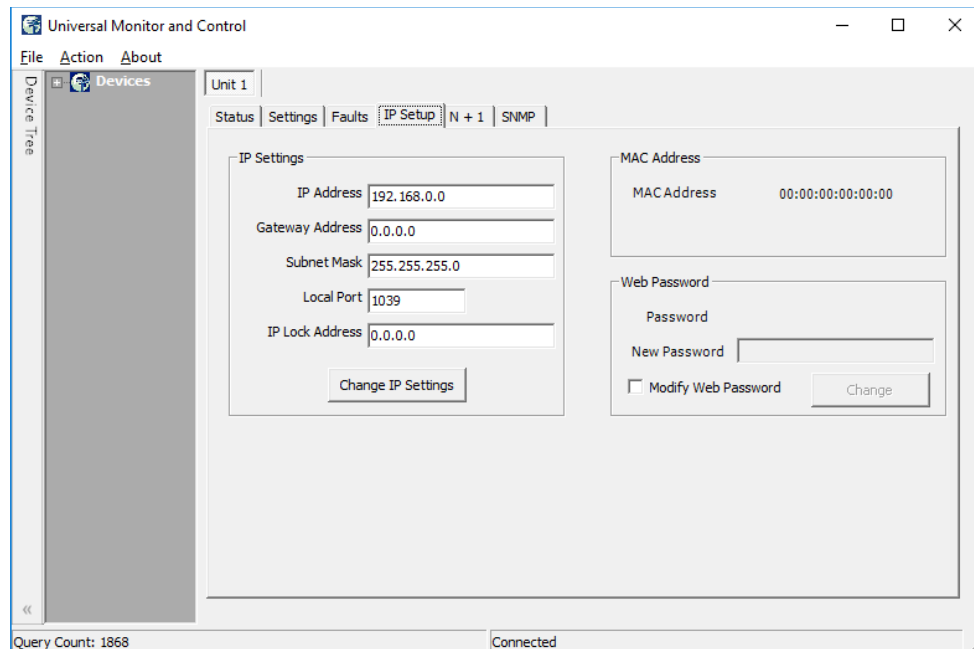


Figure 7: Universal M&C Software > IP Setup Tab

When the IP Address is modified, the SSPA must be reset for it to use the new IP Address. Until the SSPA is reset, it will use the old IP Address. The Local Port is the port that the SSPA uses for UDP requests. The SSPA also answers requests using the same port. If the Local Port is changed, the SSPA must be reset.

The Gateway Address and Subnet Mask are standard settings for TCP/IP communications. If either of these settings is changed, the SSPA must be reset for the new settings to take effect.

The IP Lock Address is used for security. If it is set to something besides 0.0.0.0 or 255.255.255.255 it will only answer the address it is set to. For example, if the IP Lock Address is 192.168.0.50, then a request from 192.168.0.100 will not be accepted. The IP Lock Address may be changed without resetting the SSPA.

N+1 Settings Tab

The fifth window is the "N+1 Settings and Conditions" tab, as shown in Figure 8. This screen is used for setting N + 1 system parameters, and monitoring N+1 system conditions. Note that only the master module in an N+1 system will show the N+1 Master settings.

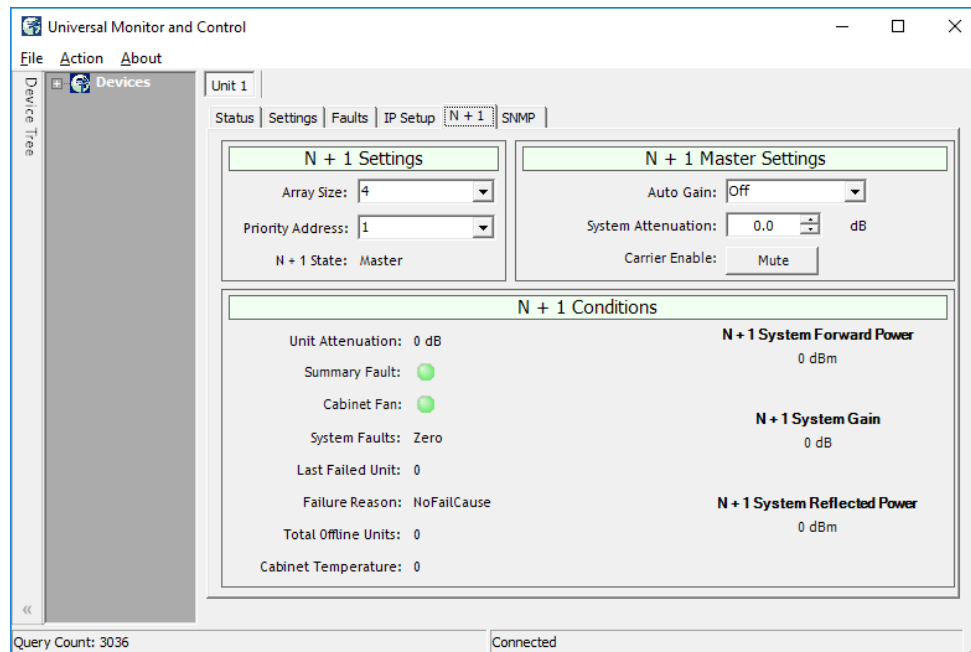


Figure 8: Universal M&C Software > N+1 tab

See the **Overview of the PowerMAX M&C** section for more information on Master/Slave functions using the N+1 Settings Tab.

SNMP Tab

The sixth window is the "SNMP Settings" tab, as shown in Figure 9. This screen is used for setting SNMP communication parameters, and for assigning trap conditions.

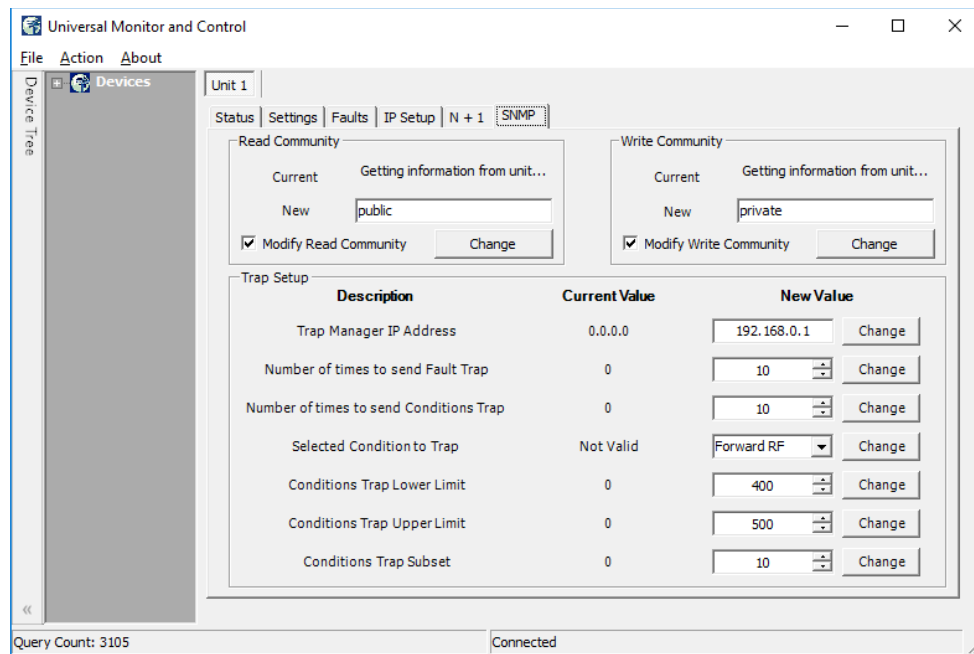


Figure 9: Universal M&C Software > SNMP tab

Add CO Unit to M&C

Launch the Teledyne Paradise Datacom Universal Monitor and Control software from the Programs Menu of your PC. Upon installation, a shortcut to the software may have been added to your desktop.

Click the 'Action' menu and select 'Add Unit' from the pull-down menu. Select 'Compact Outdoor SSPA' from the menu choices. See Figure 10.

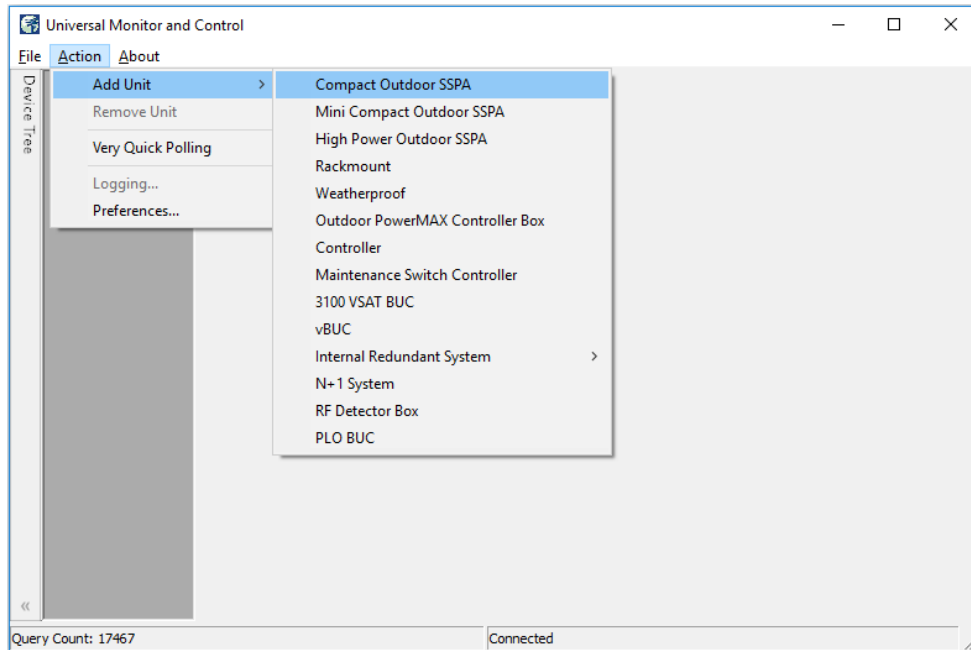


Figure 10: Universal M&C > Add Unit > Compact Outdoor SSPA

A new dialog window will open. Enter the following information where applicable: Unit ID; if using a RS-232 Connection, the Serial Port and Baud Rate. See Figure 11.

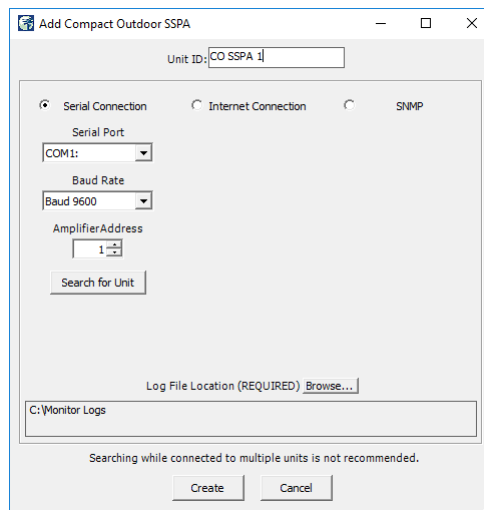


Figure 11: Add Compact Outdoor SSPA > Serial Connection

If using an Ethernet Connection, enter the unit's IP Address and Port number. See Figure 12.

Unit ID: CO SSPA 1

☐ Serial Connection ☒ Internet Connection ☐ SNMP

IP Address
192.168.0.9

Port
1007

AmplifierAddress
1

Search for Unit

Log File Location (REQUIRED) Browse...

C:\Monitor Logs

Searching while connected to multiple units is not recommended.

Create Cancel

Figure 12: Add Compact Outdoor SSPA > Internet Connection

Specify the unit's Address in the Amplifier Address box. If you don't know the address of the unit you may search for it. Be aware that this search feature is only useful when you have only one unit connected to your PC at a time.

If you wish to change the log file location, click on the 'Browse' button and navigate to the desired location.

Click on the 'Create' button to generate the operation window for this unit.

Overview of the CO M&C

The operational status, settings and conditions of the connected Compact Outdoor amplifier are displayed in the Universal M&C application's four tabs:

- [Status Tab](#)
- [Settings Tab](#)
- [IP Setup Tab](#)
- [SNMP Settings Tab](#)

Status Tab

The Universal M&C Software will initialize and open to the Status tab, the main monitoring display. See Figure 13. The Status tab shows the current conditions (or state) of the Compact Outdoor SSPA. In addition, the status screen allow the user to alter the Mute condition of the carrier and adjust the on-board Attenuator for gain control.

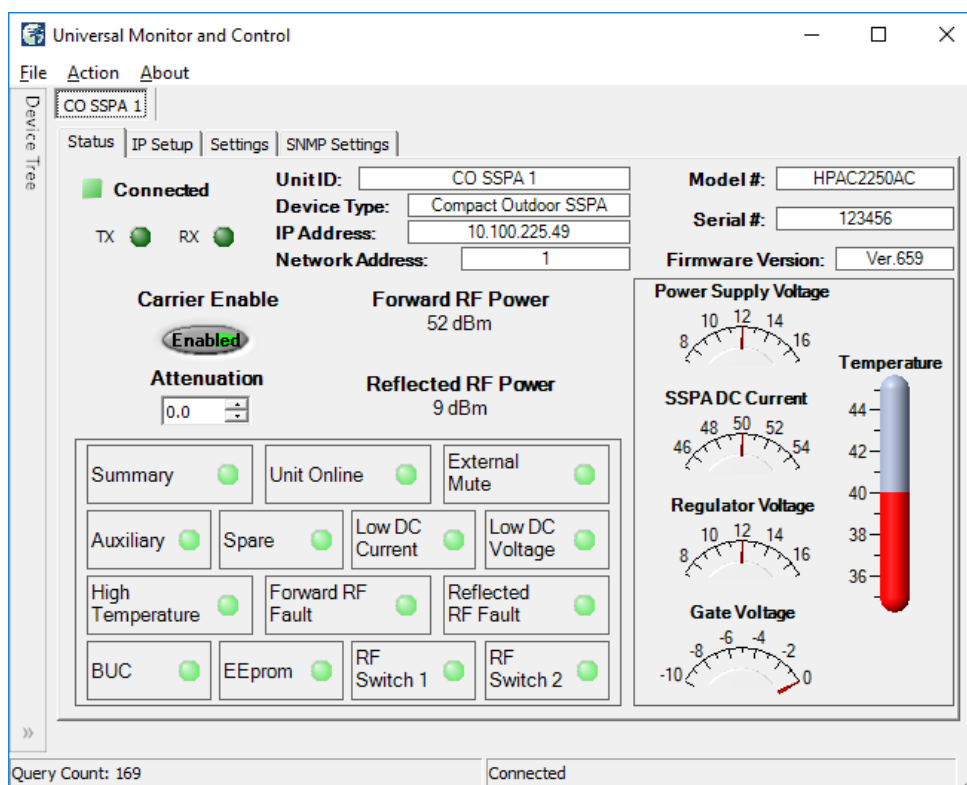


Figure 13: Compact Outdoor SSPA > Status Tab

Upon connection with a unit, the M&C application obtains and displays the unit ID, the amplifier's model number and serial number. The SSPA module's firmware version number is also displayed here for convenience.

The unit's network address and serial COM or IP address are also listed, which can be helpful in optimizing serial communications.

Signal Indicators

Three rows of indicators show the connection status of the connected amplifier. Top-most is an indicator that displays a green square when Connected, or a red square when Disconnected. Immediately below are two indicators for the TX and RX paths. The third row displays the mute state (Carrier Enable). The operator may click on the indicator to toggle between enabling or muting the amplifier. See Figure 14.

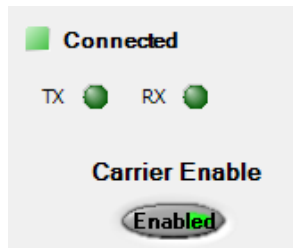


Figure 14: Status Tab > Signal Indicators

Fault Status Indicators

The Fault Status frame in the lower left side of the Status tab contains a 3x4 grid of SSPA fault lights. See Figure 15.

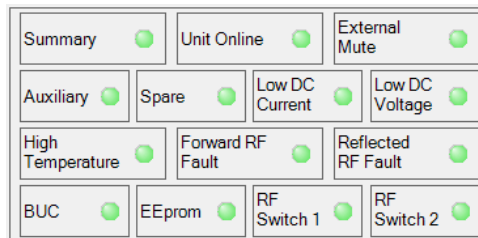


Figure 15: Status Tab > Fault Status Indicators

- **Summary Alarm:** The Summary Alarm is simply a logical 'OR' of any major alarm indicators.
- **Unit Online:** This is a status indicator that illuminates green when the unit is online.
- **External Mute Alarm:** The External Mute line gives an indication that the SSPA has been externally muted by J4-Pin B. This alarm can be configured to trigger a summary alarm if desired. Factory default is to signal a External Mute fault but no summary alarm.
- **Auxiliary & Spare Alarms:** The Auxiliary and Spare Alarms are configurable from the Settings Window.

These alarms can be configured to trigger a summary alarm. See the **Settings Tab** section.

- **Low DC Current Alarm:** The Current Fault is factory preset to alarm if the SSPA module current falls below 60% of its nominal value. This alarm will also trigger a summary alarm.
- **Low DC Voltage Alarm:** The Voltage Alarm is factory preset to alarm if the SSPA module current falls below 80% of its nominal value. This alarm will also trigger a summary alarm.
- **High Temperature Alarm:** The Temperature Fault indicator is factory preset to alarm at 80°C. The amplifier will continue to operate up to 90°C. Beyond 90°C the DC power will be interrupted to the SSPA module. This measure will protect the sensitive microwave transistors from catastrophic failure. The fans and monitor and control circuitry will continue to operate normally. This function has approximately a 5°C hysteresis window which will allow the amplifier to re-enable itself when the ambient temperature is reduced by 5°C. This alarm will also trigger a summary alarm.
- **Forward RF Alarm:** The Forward RF Fault Alarm indicates when the RF output of the amplifier falls below the threshold set in the Settings Window.
- **BUC Alarm:** The BUC fault is only active in units that are supplied with an optional L-Band Block Up Converter module. If the Up Converter's phase locked local oscillator loses lock, a BUC alarm is set and the amplifier is muted so that spurious RF cannot be transmitted. This alarm can be configured to trigger a summary alarm.
- **EEPROM Alarm:** The EEPROM Alarm is primarily used as a Fiber RX Link alarm for Compact Outdoor SSSPA units configured with a fiber-optic interface.
- **RF Switch Alarms:** The RF Switch 1 Alarm is only active if a 1:1 Redundant System has been configured in the M&C program. The RF Switch 2 Alarm is only active if a 1:2 Redundant System has been configured. These configurations are covered in Section 7.

Voltage, Current and Temperature Display

On the right side of the Status window is a thermometer display that reports the present baseplate temperature of the amplifier. The baseplate temperature typically experiences a 20-30 degree rise above ambient on the highest power Compact Outdoor amplifiers and 15-20 degree rise on lower power units. See Figure 16.

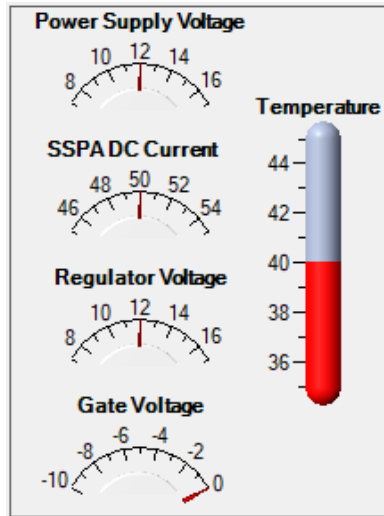


Figure 16: Status Tab > Signal Indicators

To the left of the thermometer display are several indicators that show various operating conditions of the Compact Outdoor Amplifier in real time. These indicators are helpful for any diagnostic procedures and consist of: Power Supply Voltage monitor SSPA DC Current monitor Regulator Voltage monitor Gate Voltage monitor.

The Power Supply voltage indicator displays the primary 12 volt power supply output. SSPA DC Current is the total current drawn by the microwave transistors. Regulator Voltage is the DC voltage of the drain circuitry that feeds the GaAs transistors. The Gate Voltage indicator monitors the DC voltage of the gate circuitry of the microwave GaAs transistors. These indicators provide direct access to the active device operating characteristics.

Gain Adjustment (Attenuation Control)

The Gain Attenuation Control is located above the Fault Condition Indicators and below the Carrier Enable status. See Figure 17.




Figure 17: Status Tab > Attenuation Control

The gain can be adjusted by setting the Attenuation Control. An Attenuation Control of 0 dB is the maximum gain (typically 75 dB) setting on the amplifier. By setting the Attenuation Control to 20 dB; the gain is set to 55 dB. The Attenuation Control can be varied using the up/down arrows to the right of the displayed value or by typing a value between 0 and 20 in the field and hitting the Enter key.

Forward/Reflected RF Power Display

The Forward RF Power is displayed in the central part of the Operation window. This indicator reports the approximate forward output power of the amplifier. It uses the voltage from the RF Power Detector to determine a corresponding power level in dBm. The accuracy of the power indicator is ± 1 dB at the mid-point of the specified band, with a single CW or QPSK carrier.

Units with the reflected power meter option also display the Reflected RF Power. See Figure 18.

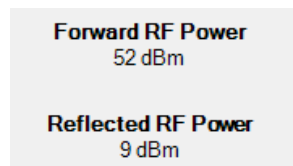


Figure 18: Status Tab > Forward/Reflected RF Power Display

Settings Tab

Figure 19 shows the Settings tab of the Universal M&C software. The Settings tab contains many of the global settings that are available in the SSPA.

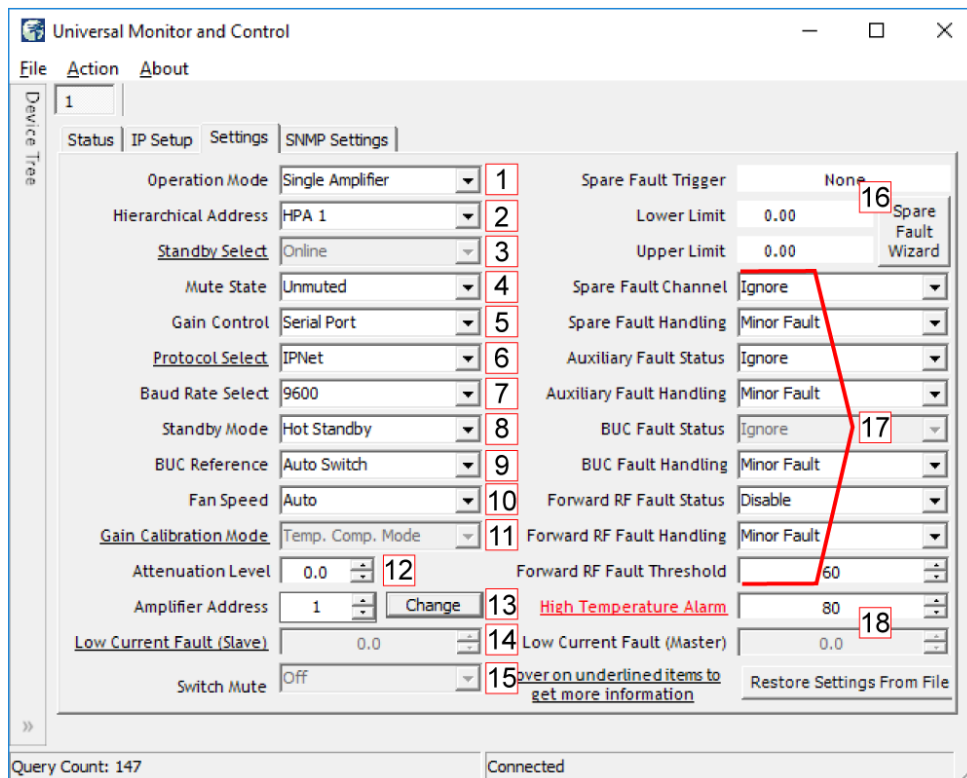


Figure 19: Compact Outdoor SSPA > Settings Tab

The Compact Outdoor amplifier will power up with the "last-state" settings before the unit was powered down. Whatever attenuation setting or mute state the amplifier was in when powered down will be the restored settings when the amplifier is powered back on.

Operation Mode [1]

Select between stand-alone (single unit), Dual 1:1 mode, 1:1 Redundant mode, or Maintenance Switch mode.

Hierarchical Address [2]

Identifies each amplifier in a redundant system as HPA 1, HPA2 or HPA 3.

Standby Select [3]

Selects whether the unit should start up as the online amplifier or the standby amplifier. When in a redundant system configuration, if the amplifier Standby Select state is changed from the Online state to the Standby state, the system will drive the switch so that another amplifier in the system is in the Online state. Only the Online amplifier can give away its Online state. This setting is saved upon unit shut-down, and the unit will start up in the last saved state.

Mute State [4]

Determines if the unit should start up muted (transmit disabled) or mute cleared (transmit enabled).

Gain Control [5]

Select between serial communication control of the unit's gain or analog voltage gain control via J4.

Protocol Select [6]

The operator may select either the standard string protocol, Terminal mode, IPNET or SNMP (as well as legacy Binary Mode and NDSatcom protocols). The operator will be asked to verify any change in protocol. Communication with the amplifier may be affected.

Baud Rate Select [7]

Sets the baud rate of the unit. The supported baud rates include: 2400, 4800, 9600, 19200, and 38400 baud. The factory default baud rate is 9600. The operator will be asked to verify any change to the baud rate. Communication with the amplifier may be affected.

Standby Mode [8]

Selects between Hot and Cold standby mode for units in redundant systems.

BUC Reference [9]

Selects between an Internal or External reference for an optional block up converter integrated with the unit, or allows the unit to Auto-switch between Internal and External reference.

Fan Speed [10]

Selected GaN units are equipped with a Fan Speed Control option. The fan speed control circuit is shared with the RF power detector analog output (pin R on M&C connector J4). This pin remains not connected on units with the fan speed control option installed. Available control options: Auto, High, Low, Default/Off

- Auto - This setting allows the unit to control the cooling fan speed according to the internal RF module temperature. If the module plate temperature remains below 50 °C, the fan speed will be set to minimum. If the registered module plate temperature is above 50 °C, unit will gradually increase the fan speed. Fan speed will reach maximum at a plate temperature of 65 °C.
- High - This option sets the fan speed to maximum. Air velocity will remain at the same level regardless of other operation parameters.
- Low - This option sets the fan speed to minimum. Air velocity will remain at the same level regardless of other operation parameters.
- Default/Off - This setting should be set on units without the fan speed control option. It will allow proper functioning of the RF power monitor analog output. Applying this setting on units with the fan speed control option allows the fan speed to be proportional to the output RF level. Fan speed will be set at the minimum when output RF is below a detectable level. Fan speed will gradually increase when RF output increases within the detectable RF range. Fan speed will be at maximum level when unit reaches saturated power (Psat).

Gain Calibration Mode [11]

This feature is disabled for most users. Should be set for Temp. Comp. (Temperature Compensation) Mode. Consult the factory if set for Calibration Mode.

Attenuation Level [12]

The Gain Adjustment of the unit is adjustable here, from 0 to 20 in 0.1 dB steps.

Amplifier Address [13]

Sets a network address for the unit. Range is 0 to 255. Click the 'Change' button to change the address. The operator will be asked to verify any to change to the Amplifier Network Address. Communication with the amplifier may be affected.

Low Current Fault (Slave) [14]

This feature is not available on all units. Consult the factory.

Switch Mute [15]

This is a read-only view of the Switch Mute setting. Higher power amplifiers which include a maintenance switch or are configured in a system which includes a transfer switch may be set to mute on switch (setting = On) at the factory.

Spare Fault Wizard [16]

This feature allows the user to set the Spare Fault Trigger using the Spare Fault Wizard.

Click on the Spare Fault Wizard button, which opens a new window. See Figure 20. Select between the following fault triggers: Analog Gain Adjust Voltage, Gate Voltage, Regulator Voltage, Power Supply Voltage, SSPA Current, External Mute, or None.

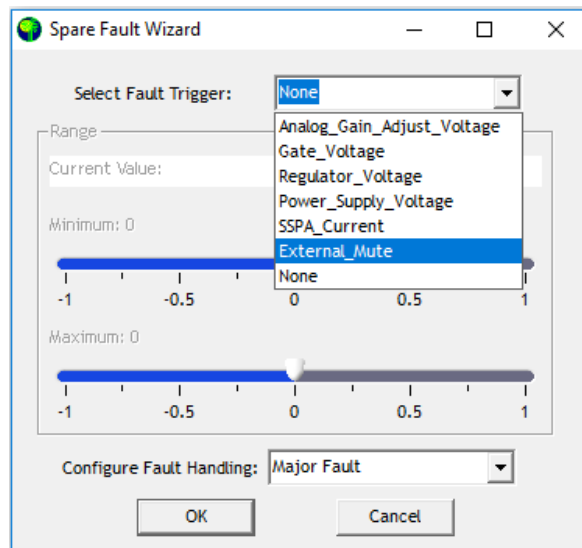


Figure 20: Spare Fault Wizard

Set the range of thresholds (maximum and minimum) that would trigger the selected fault, and configure the fault handling via a pull-down menu (Major Fault, Minor Fault, Major Fault plus Mute).

Click the OK button to set the fault trigger for the Spare Fault.

Fault Setups [17]

The user may also adjust the Spare, Auxiliary, BUC, and Forward RF Fault Status and Handling via the appropriate pull-down menus on the Settings Window.

- Spare/Auxiliary/BUC/Forward RF Fault Handling: Selects whether the associated fault should be a major or minor fault, and whether the fault should mute the unit. A minor fault will trigger a Spare/Auxiliary/BUC/Forward RF Fault alarm but not trigger a Summary Fault. A major fault will trigger both an Spare/Auxiliary/BUC/Forward RF Fault and a Summary Fault.
- Spare/Auxiliary/BUC Fault Status: Determines if the associated fault input should be ignored or enabled based on the available selections.
- Forward RF Threshold: Allows the user to assign the threshold at which a Forward RF Fault will be triggered.

Fault Thresholds [18]

Allows the user to set the limit for triggering the unit's Current Fault or High Temperature Fault.

- High Temperature Alarm Threshold: Range is 0 to 125 °C.
- Low Current Fault Threshold: This setting is factory pre-set.

⚠ Take care not to adjust the High Temperature Alarm Threshold within the temperature range of the amplifier's normal operation. Doing so will trigger unnecessary high temperature alarm faults.

IP Setup Tab

If the user wishes to set up the networked Compact Outdoor SSPA with custom IP settings, the internal IP settings need to be modified. Click on the IP Setup Tab. See Figure 21.

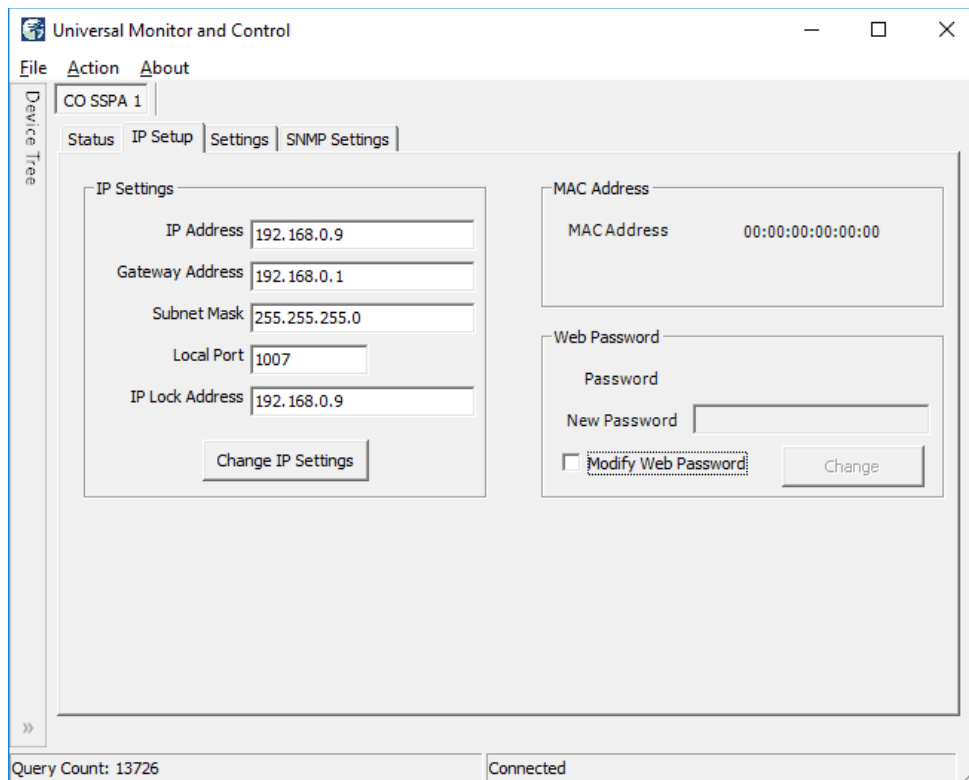


Figure 21: Compact Outdoor SSPA > IP Setup Tab

In this window, the user may enter custom IP settings, including the IP Address of the unit, the Gateway Address, the Subnet Mask and the Local Port.

The IP Lock Address allows the operator to set the IP address from which the amplifier will accept requests. This selection gives the operator the ability to increase the security measure for the IPNet protocol. The SSPA will only answer a request which comes from the assigned IP address.

To disable this feature in firmware versions prior to 6.00, set the Lock IP Address value to 0.0.0.0 or 255.255.255.255. The Lock IP address function was updated in firmware version 6.00 to allow "Binding" and "Masking" functions. "Binding" means that the first datagram re-trieved for this socket will bind to the source IP address and port number. Once binding has been set, the SSPA will answer to the bound IP source until the unit is restarted or reset. Without binding, the socket accepts datagrams from all source IP addresses. Address 0.0.0.0 allows all peers, but provides binding to the first detected IP source; Address 255.255.255.255 accepts all peers, without binding. If the Lock IP Address is a multicast address, then the amplifier will accept queries sent from any IP address of the multicast group.

Click on the 'Change IP Settings' button to save the entered settings into non-volatile memory.

The user may also modify the web password used when accessing the web-based remote M&C. Tick the 'Modify Web Password' checkbox to enable the New Password field. Enter a new password and click on the 'Change' button to save.

Using Custom IP Settings with Quick Start Cable

If the Quick Start Cable is connected to Port J4 when power is applied to the amplifier, it will use the default settings.

Default Settings with Quick Start Cable Connected:

```
Interface: IPNET
IP Address: 192.168.0.9
Local Port: 1007
Gateway: 192.18.0.1
Subnet Mask: 255.255.255.0
IP Lock: 255.255.255.255
Web password: paradise
Read Community: public
Write Community: private
Unit Starts Up: Unmuted
```

To use custom IP settings while using the Quick Start cable, remove power from the amplifier.

Unplug the Quick Start cable from the M&C connector, J4. (If the unit is restarted with the Quick Start cable connected, it will always come up with default IP settings).

Connect power to the SSPA.

Connect the Quick Start cable to J4, and check connectivity with the custom IP settings. Make sure that the Protocol setting in the Settings tab of the Universal M&C is set to IPNet.

If custom IP settings will be used in normal operation, the user will need to construct an IP cable or modify the Quick Start Cable by disconnecting the interface control pins (pins j and e, Baud Select 0 and Baud Select 1) from ground.

In this configuration, the SSPA will always use the saved communication control settings rather than the default configuration.

SNMP Settings Tab

The SNMP Settings Tab allows the operator to change the Read/Write Community strings and the Trap settings (if communicating over SNMP protocol). See Figure 22

Description	Current Value	New Value
Trap Manager IP Address	192.168.0.1	Change
Number of times to send Fault Trap	10	Change
Number of times to send Conditions Trap	10	Change
Selected Condition to Trap		Change
Conditions Trap Lower Limit	400	Change
Conditions Trap Upper Limit	500	Change
Conditions Trap Subset	10	Change

Figure 22: Compact Outdoor SSPA > SNMP Settings Tab

The current Read/Write Community strings are displayed as read from the connected unit. Tick the Modify Read/Write Community checkbox to enable the New Read/Write Community field. Enter a new password and click on the 'Change' button to save.

Add HPO Unit to M&C

Launch the Teledyne Paradise Datacom Universal Monitor and Control software from the Programs Menu of your PC. Upon installation, a shortcut to the software may have been added to your desktop.

Click the 'Action' menu and select 'Add Unit' from the pull-down menu. Select 'High Power Outdoor SSPA' from the menu choices. See Figure 23.

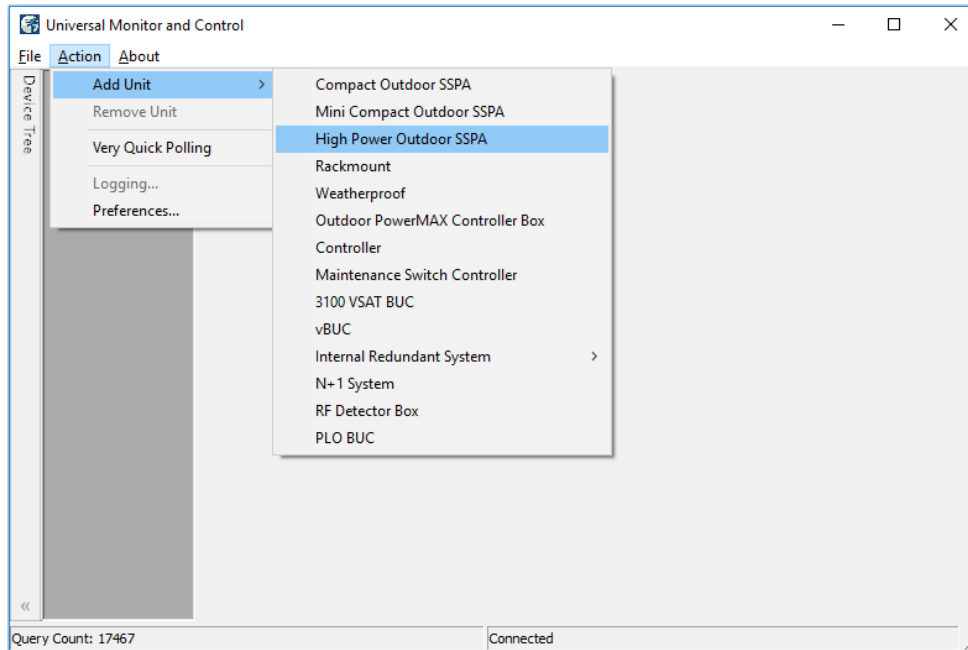


Figure 23: Universal M&C > Add Unit > High Power Outdoor SSPA

A new dialog window will open. Enter the following information where applicable: Unit ID; if using a RS-232 Connection, the Serial Port and Baud Rate. See Figure 24.

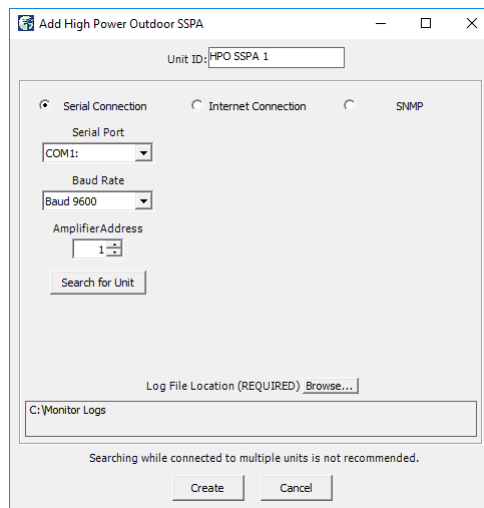


Figure 24: Add High Power Outdoor SSPA > Serial Connection

If using an Ethernet Connection, enter the unit's IP Address and Port number. See Figure 25.

The screenshot shows a Windows-style dialog box titled "Add High Power Outdoor SSPA". At the top, there is a text field for "Unit ID:" containing the text "HPO SSPA 1". Below this, there are three radio buttons: "Serial Connection", "Internet Connection" (which is selected), and "SNMP". Under the "Internet Connection" section, there are three text fields: "IP Address" with the value "192.168.0.9", "Port" with the value "1007", and "AmplifierAddress" with the value "1". Each of these fields has a small up/down arrow icon to its right. Below these fields is a button labeled "Search for Unit". At the bottom of the dialog, there is a text field for "Log File Location (REQUIRED)" containing the path "C:\Monitor Logs", followed by a "Browse..." button. A warning message at the bottom reads "Searching while connected to multiple units is not recommended." and there are "Create" and "Cancel" buttons at the very bottom.

Figure 25: Add High Power Outdoor SSPA > Internet Connection

Specify the unit's Address in the Amplifier Address box. If you don't know the address of the unit you may search for it. Be aware that this search feature is only useful when you have only one unit connected to your PC at a time.

If you wish to change the log file location, click on the 'Browse' button and navigate to the desired location.

Click on the 'Create' button to generate the operation window for this unit.

Overview of the HPO M&C

The H-Series High Power Outdoor SSPA uses the same protocol as the Compact Outdoor SSPA, and also the same structure of Universal M&C.

See the **Overview of the CO M&C** section when using the software with a High Power Outdoor SSPA.

Add Indoor PowerMAX System to M&C

Launch the Teledyne Paradise Datacom Universal M&C software from the Programs Menu of your PC. Upon installation, a shortcut to the software may have been added to your desktop. An Indoor PowerMAX system requires Universal M&C version 4.4.8b or later.

Add Each RM SSPA to M&C

Each individual amplifier in the PowerMAX System should first be added to the Universal M&C. Follow the instructions detailed in the **Add RM Unit to Universal M&C** section.

PowerMAX systems are typically configured with four, eight or 16 amplifiers.

Set the N+1 Settings for each individual unit to include the Array Size (four, eight or 16) for the PowerMAX System and the unique Priority Address for each unit. The amplifier assigned with the lowest Priority Address (typically 1) is granted the Master status for the N+1 system, and controls the other (Slave) amplifiers in the system.

Add PowerMAX System to M&C

To add the PowerMAX System, click the 'Action' menu and select 'Add Unit' from the pull-down menu. Select 'N+1 System' from the menu choices. See Figure 26.


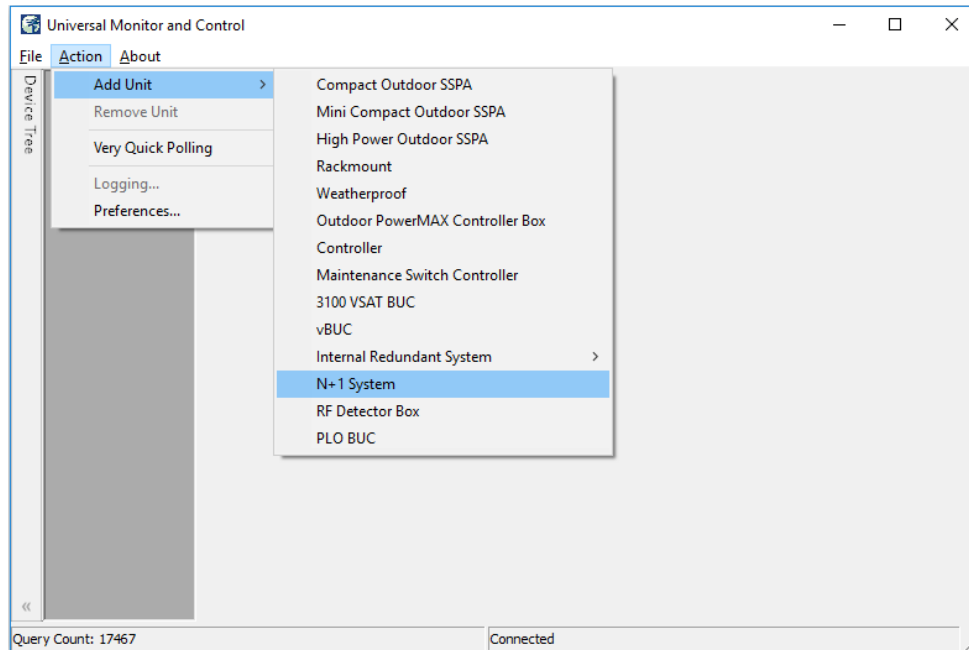


Figure 26: Universal M&C > Add Unit > N+1 System

A new 'Add N+1 System' dialog window will appear, as shown in Figure 27. If the individual amplifier N+1 settings were properly set, the Unit #s should automatically populate in ascending Priority Address order, using the Unit ID entered in the M&C. Otherwise, select the Unit # for each unit in the system and enter a System Name in the field at the bottom of the window. Click on the 'OK' button to initialize the system.

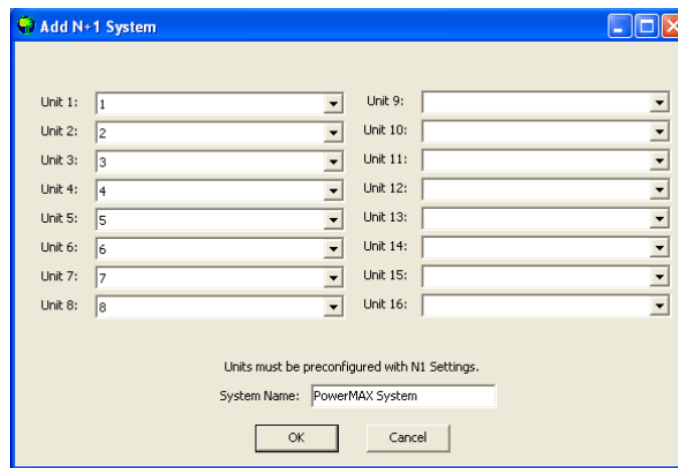

The image shows a software window titled "Add N+1 System". It contains two columns of dropdown menus for selecting units. The left column is labeled "Unit 1:" through "Unit 8:" and the right column is labeled "Unit 9:" through "Unit 16:". Below these menus, there is a text label "Units must be preconfigured with N1 Settings." followed by a text input field labeled "System Name:" containing the text "PowerMAX System". At the bottom of the window are two buttons: "OK" and "Cancel".

Unit	Value
Unit 1:	1
Unit 2:	2
Unit 3:	3
Unit 4:	4
Unit 5:	5
Unit 6:	6
Unit 7:	7
Unit 8:	8
Unit 9:	
Unit 10:	
Unit 11:	
Unit 12:	
Unit 13:	
Unit 14:	
Unit 15:	
Unit 16:	

Units must be preconfigured with N1 Settings.

System Name: PowerMAX System

OK Cancel

Figure 27: Add N+1 System Selection Window

 **The System window may take several moments to load as the software collects and compiles the data from each unit in the system.**

Overview of the Indoor PowerMAX M&C

The N+1 System tab displays an overview of each unit in the system, and overall system performance. The Universal M&C screen shown in Figure 28 displays the N+1 system tab (labeled PowerMAX System), as well as tabs for each of the eight (8) SSPA units (labeled 1, 2, 3, 4, 5, 6, 7 and 8) being monitored.

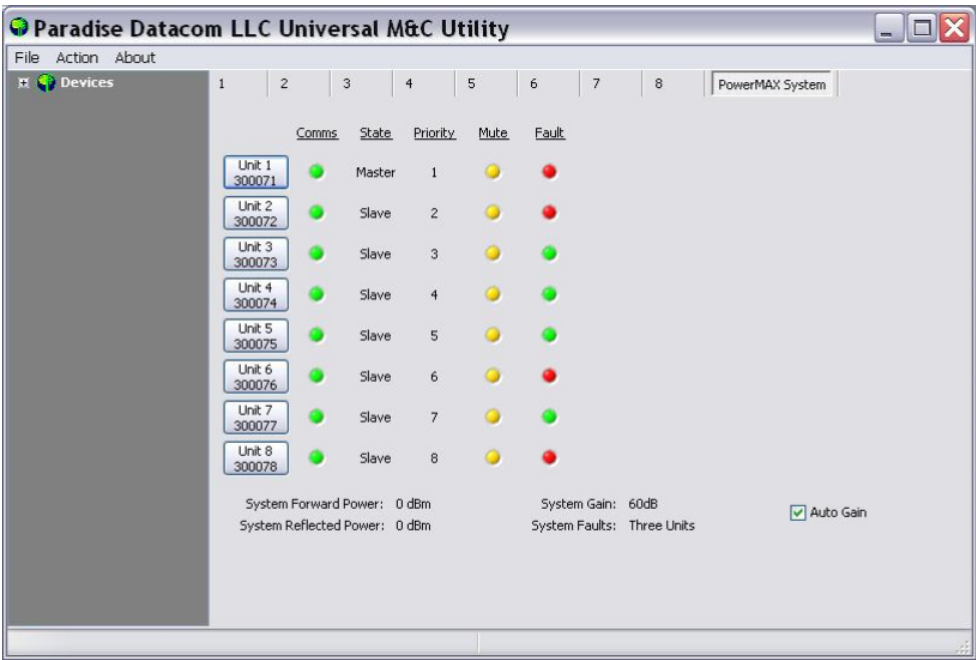


Figure 28: N+1 System Tab

For each unit in the system, the PowerMAX System tab displays the unit's serial number, comms status, master/slave state, N+1 priority in the system, mute state and fault state.

Also shown are the System Forward Power, Reflected Power, System Gain and number of System Faults. A checkbox at the lower right of the window allows the user to quickly enable or disable the Auto Gain function. See the Auto Gain description in the **Touchscreen Menu Structure** section.

By hovering the mouse over the individual unit buttons, as shown in Figure 29, the unit's conditions are detailed.

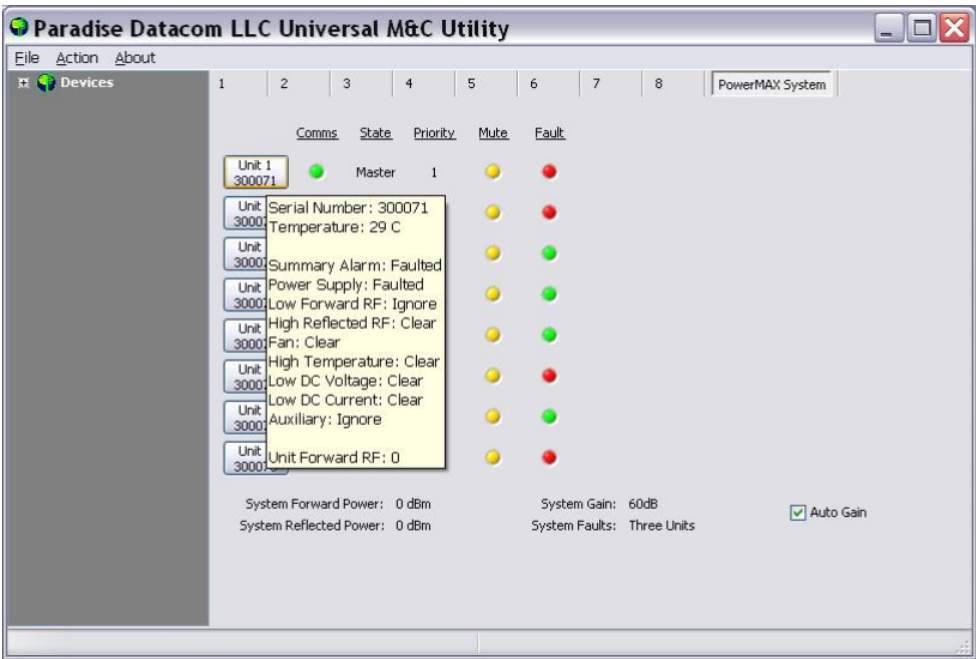


Figure 29: N+1 System Tab > Unit Info on Hover

Clicking on the Unit # button to switch to the Status tab for that unit. You may also click on the unit's tab to navigate to the M&C windows for that unit.

The N+1 tab for each unit shows the N+1 settings for that unit. Depending on whether the unit is assigned Master status or Slave status, the N+1 screen will show slightly different information. Figure 30 shows the display for the Master unit.

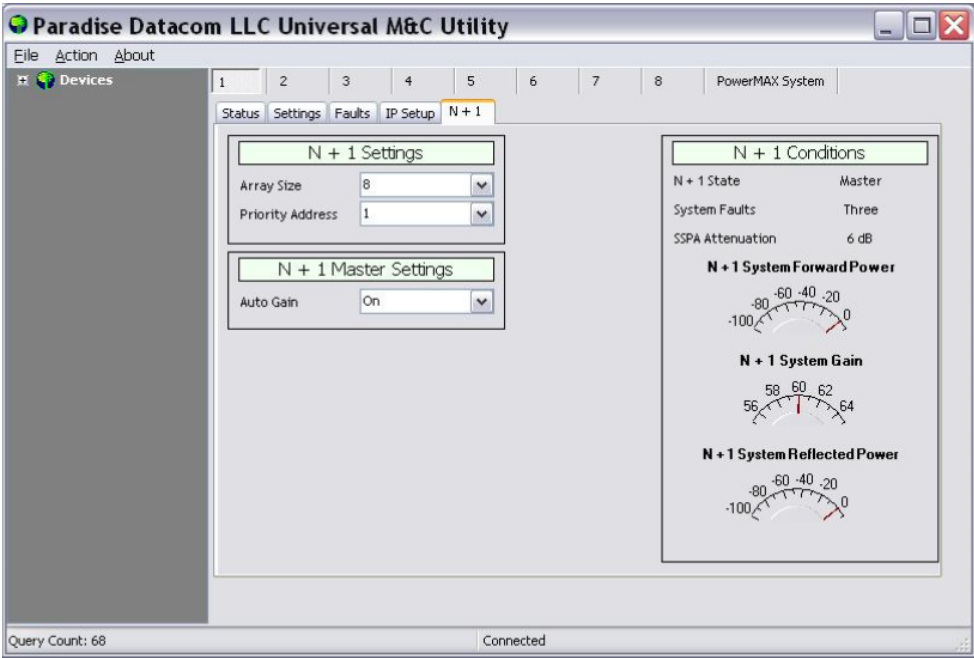


Figure 30: N+1 Tab > Master Unit

Figure 31 shows the display for the Slave units.

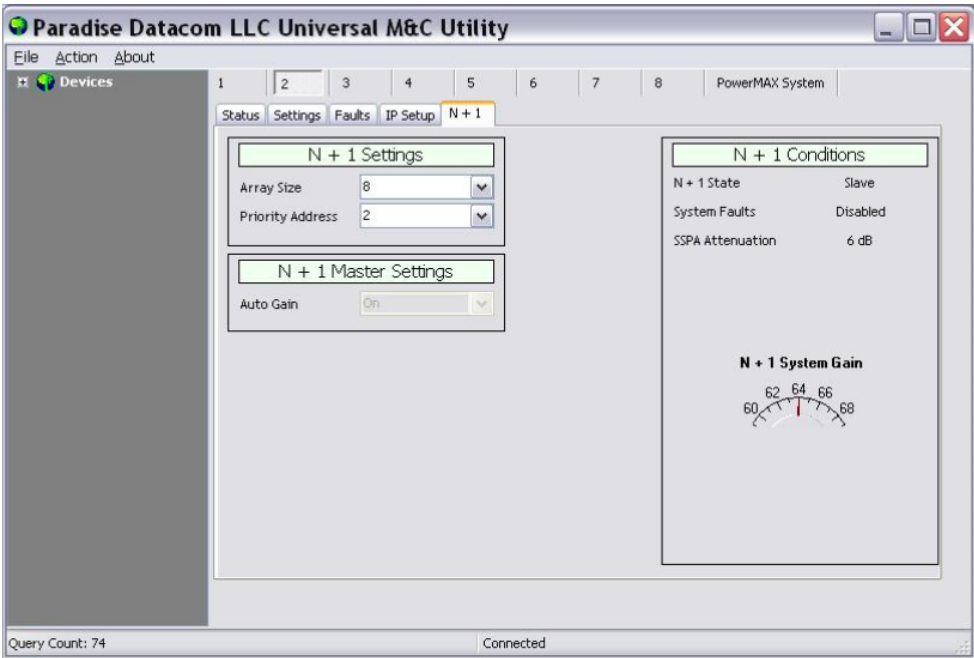


Figure 31: N+1 Tab > Slave Unit

Add Outdoor PowerMAX System to M&C

The Outdoor SSPA Controllers in an Outdoor PowerMAX system can be monitored by the Universal M&C Application. All information is read-only.

The operator must load each of the Outdoor SSPA Controllers individually. Refer to Table 1 for the default IP addresses to use.

Table 1: Outdoor SSPA Controllers, IP Addresses for Universal M&C

Controller ID	IP Address
Outdoor SSPA Controller 1 (Master)	192.168.0.11
Outdoor SSPA Controller 2 (Slave)	192.168.0.12

Launch the Teledyne Paradise Datacom Universal Monitor and Control software from the Programs Menu of your PC. Upon installation, a shortcut to the software may have been added to your desktop.

With the system operating, select the Action pull-down menu, select Add Unit, and select Outdoor PowerMAX Controller Box. See Figure 32.

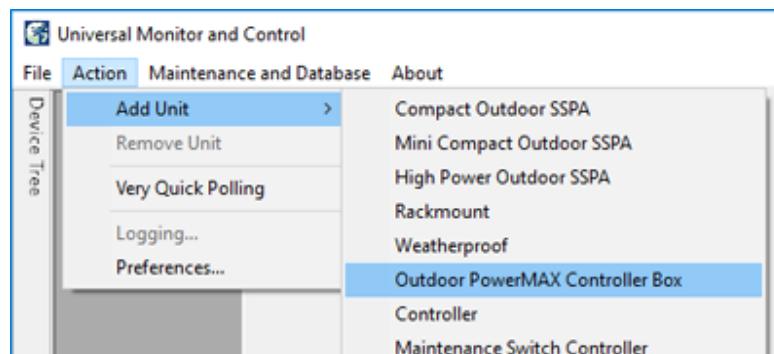


Figure 32: Universal M&C > Add Unit > Outdoor PowerMAX Controller Box

A new dialog window will open. Select the Internet connection. See Figure 33.

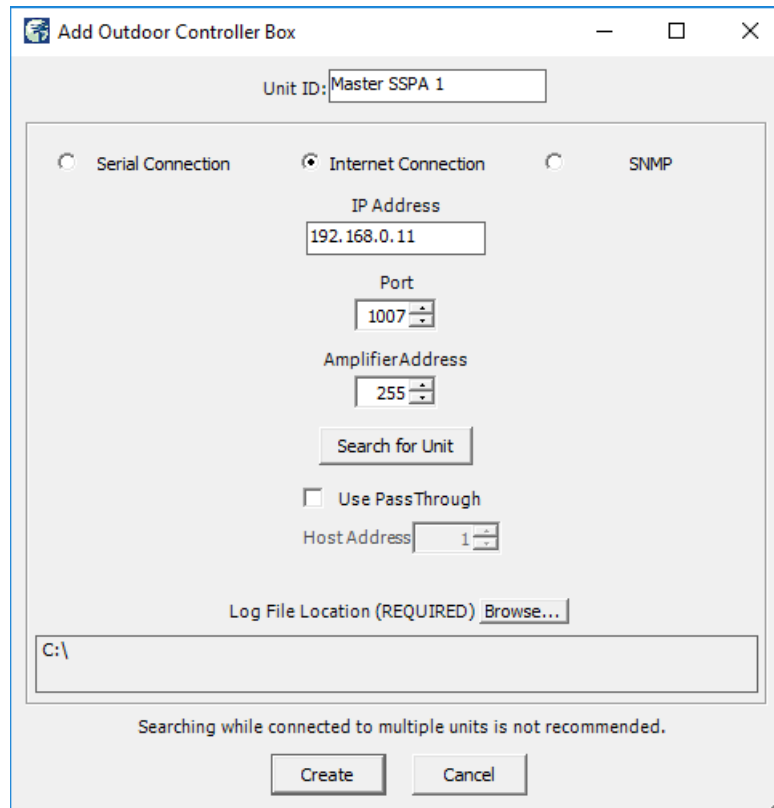


Figure 33: Add Outdoor PowerMAX Controller Box

Enter the Unit ID text that will be used to identify the unit in the M&C application. For example, "Master SSPA 1" for Controller 1.

Enter the IP address of the Master or Slave unit . Refer to Table 1.

Use the default port 1007, or change to reflect the local network.

Enter the global address (255) in the Amplifier Address field, and click on the [Search for Unit] button. The utility will locate the unit on the network. See Figure 34. Click on the [OK] button.

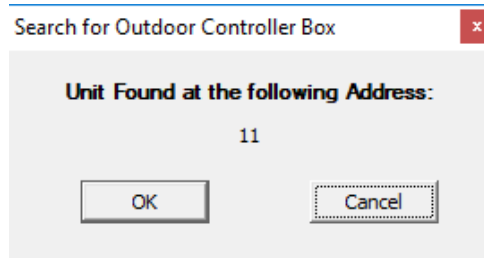


Figure 34: Dialog Window, Search for Outdoor Controller Box

Click on the [Create] button to open the M&C windows.

Repeat for each Outdoor SSPA Controller.

Overview of the Outdoor PowerMAX M&C

This section describes the information available in each of the Universal M&C screens for the Outdoor SSPA Controllers used in Outdoor PowerMAX systems.

Status Window for Outdoor SSPA Controllers

The Status Window for the Outdoor SSPA Controllers (Controller 1, typically the Master controller) shows the operational status of the array of four (4) SSPA modules for that system. See Figure 35.

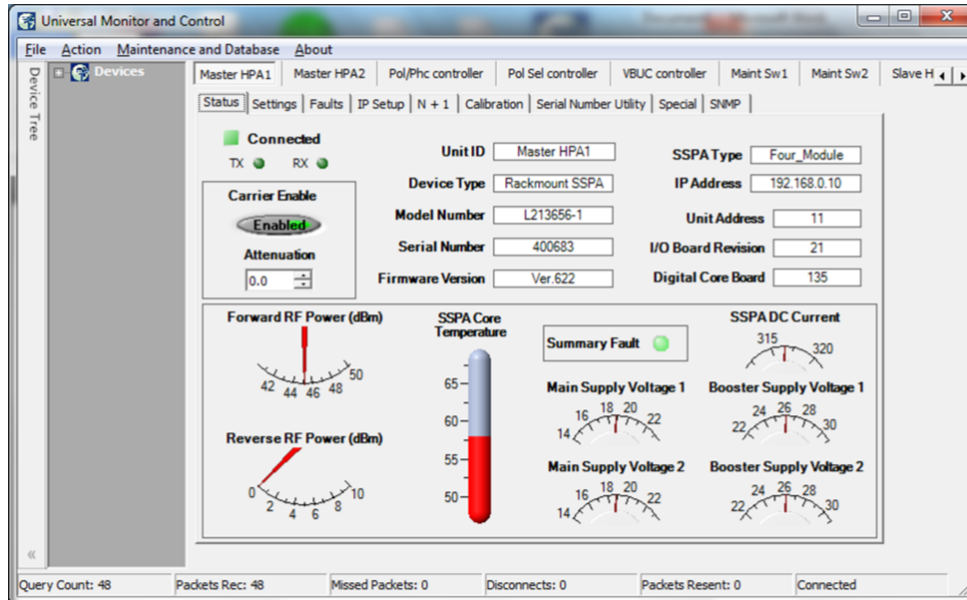


Figure 35: Status Window, Outdoor SSPA Controllers

This window displays the Mute status (Carrier Enable, indicated by "Enabled", if unmuted, or "Muted"), Attenuation and Summary Fault status LED. Also included is information about the System Forward RF Power, Reverse RF Power, SSPA Core Temperature, Main Supply Voltages, DC Current and Booster Supply Voltages.

Note: Changes to Mute Status and Attenuation made in this window will be overwritten by the system.

Settings Window for Outdoor SSPA Controllers

The Settings Window, shown in Figure 36, is common for all controllers, and is used to select the operation settings for the unit.

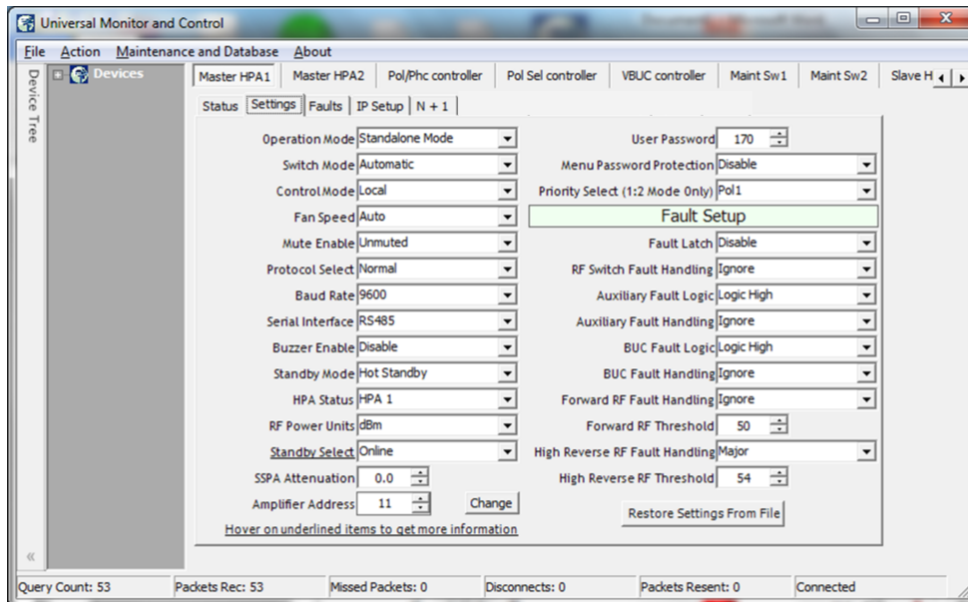


Figure 36: Settings Window, Outdoor SSPA Controllers

See your system manual for the required settings for each controller.

Note: All settings are read-only. Changes made to settings in this window will be overwritten by the system.

Faults Window for Outdoor SSPA Controllers

The Faults Window, shown in Figure 37, is common for all controllers, and is used to monitor the various fault conditions for the SSPA Modules connected to the unit.

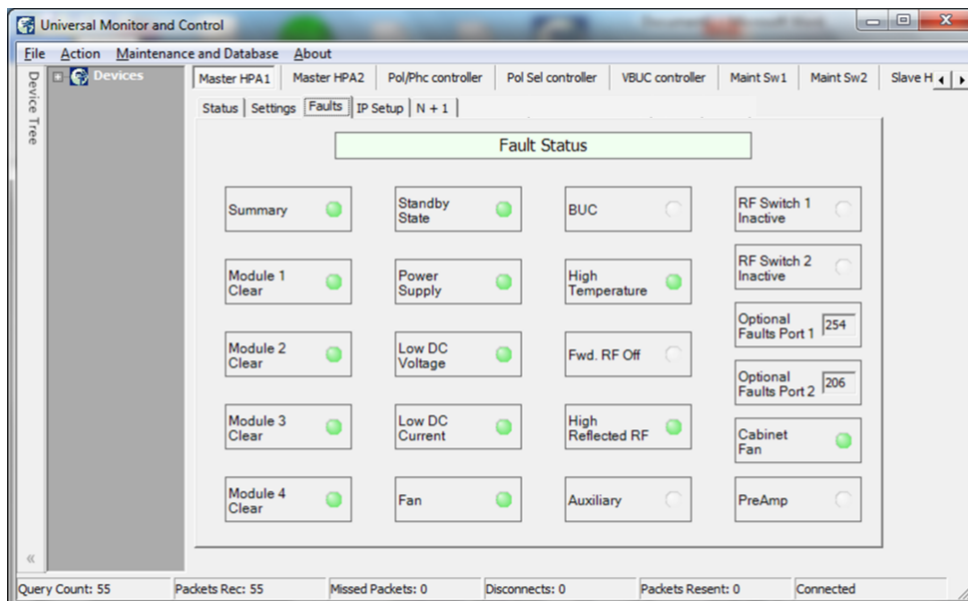


Figure 37: Faults Window, Outdoor SSPA Controllers

Table 2 shows how the fault LEDs in this window correspond with the SSPA Modules for the indicated Outdoor Controller.

Table 2: Identifying SSPA Module Faults in Universal M&C Faults Window

Module # Fault LED	SSPA Module
--------------------	-------------

Module 1 for the Faults Window of Controller 1	SSPA 1.1
Module 2 for the Faults Window of Controller 1	SSPA 1.2
Module 3 for the Faults Window of Controller 1	SSPA 1.3
Module 4 for the Faults Window of Controller 1	SSPA 1.4
Module 1 for the Faults Window of Controller 2	SSPA 2.1
Module 2 for the Faults Window of Controller 2	SSPA 2.2
Module 3 for the Faults Window of Controller 2	SSPA 2.3
Module 4 for the Faults Window of Controller 2	SSPA 2.4

IP Setup Window for Outdoor SSPA Controllers

The IP Setup Window is common for all controllers, and is used to adjust the IP settings for the connected unit. The IP Address, Gateway Address, Subnet Mask, Local Port and IP Lock Address may all be modified. See Figure 38. Changes to these settings require a unit restart before they are applied.

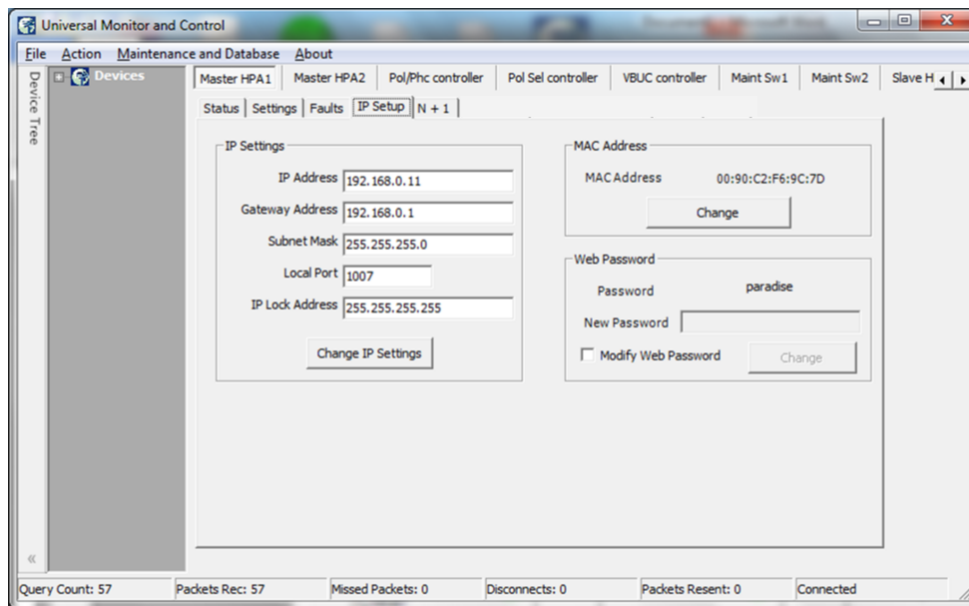


Figure 38: IP Setup Window, Outdoor SSPA Controllers

In addition, the operator may modify the read/write community and web passwords. The operator must check the box to unlock the field for the new password, then click on the [Change] button to implement the change.

Add RCP Unit to M&C

Launch the Universal M&C software. Click on the Action menu and select "Add Unit", then choose "Controller" from the pull-down menu. See Figure 39.

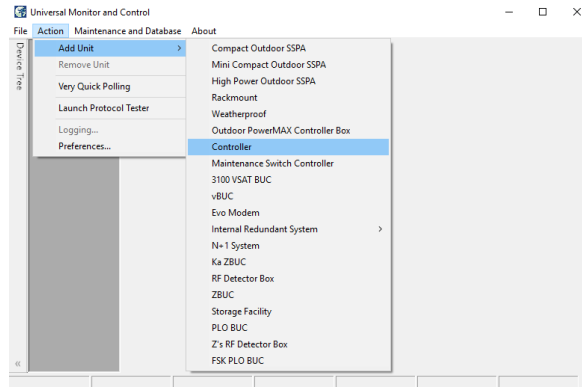


Figure 39: Universal M&C, Add New Controller Unit

A new dialog window will appear. See Figure 40. Select the method of communication (Serial Connection, Internet Connection, or SNMP).

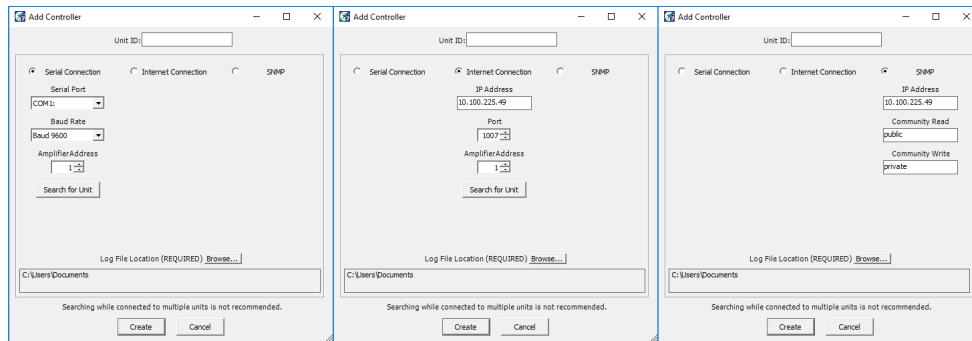



Figure 40: Add Controller (Serial, Internet or SNMP Connection)

For Serial Connections, select the Serial Port and Baud Rate, and select the amplifier address. If you don't know the address of the unit you may search for it. Click the Search for Unit button.

For Internet Connection, enter the IP address of the unit, and select the port and amplifier address. Click the Search for Unit button if you don't know the address of the unit.

 **Note:** The Search for Unit feature is only useful when you have only one unit connected to your PC at a time.

For SNMP, enter the IP address of the unit and the community read/write passwords.

The default Community Read password is **public**.

The default Community Write password is **private**.

A Unit ID is not required although it is recommended. If a Unit ID isn't entered the Unit ID will be assigned by the M&C. Click the Create button to open the M&C windows.

Choose a log file location by clicking the Browse... button. The default is the "My Documents" folder. The log file name will be the UnitID and the extension ".log" appended to it. i.e. "Unit1.log".

Click on the Create button to open the M&C windows.

Overview of the RCP2 M&C

The Universal M&C user interface features five screens which are used to monitor and control the system.

- Status
- IP Setup
- Conditions
- Settings
- HPA Control Panel

Status Tab

The first screen is the "Status" window shown in Figure 41.

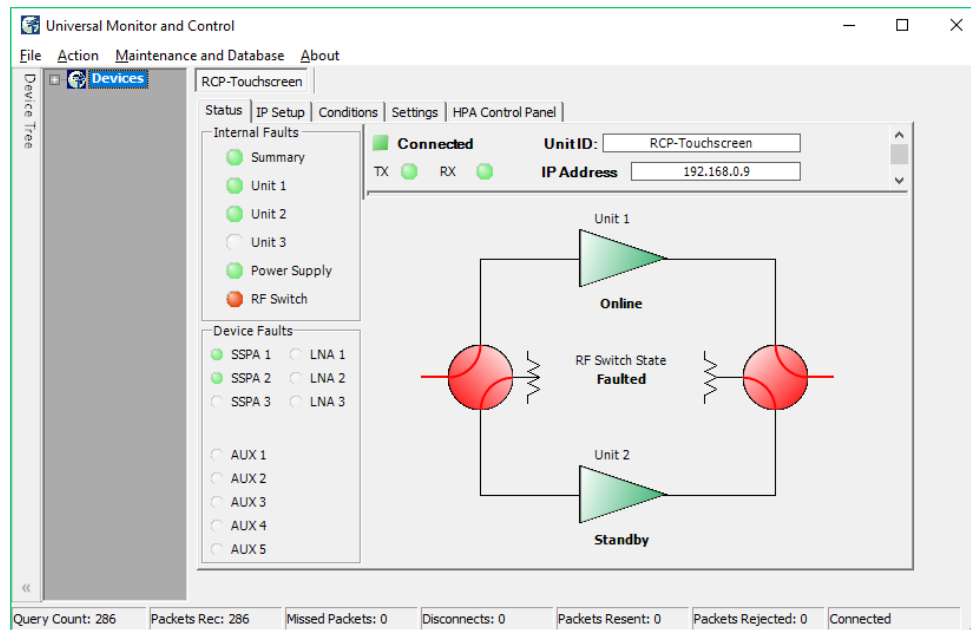


Figure 41: Universal M&C, Status Tab

The status screen reflects the Online/Standby status of each amplifier in the system, and the switch position of each waveguide switch in the system. In addition, Internal and Device fault indicators are displayed. When there is no fault condition on a given unit, the indicator illuminates green. When a fault condition exists, the indicator illuminates red.

Note that in Figure 41 above, there is an RF Switch Fault. The RF Switch fault indicator is illuminated red in the Internal Faults panel, and the RF Switch State in the mimic panel shows "Faulted". In addition, the baseball switch icons are colored red to indicate a switch fault.

The user may click on one of the triangular amplifier icons to set that amplifier as the Standby unit in the system.

IP Setup Window

The second screen is the "IP Setup" window, shown in Figure 42.

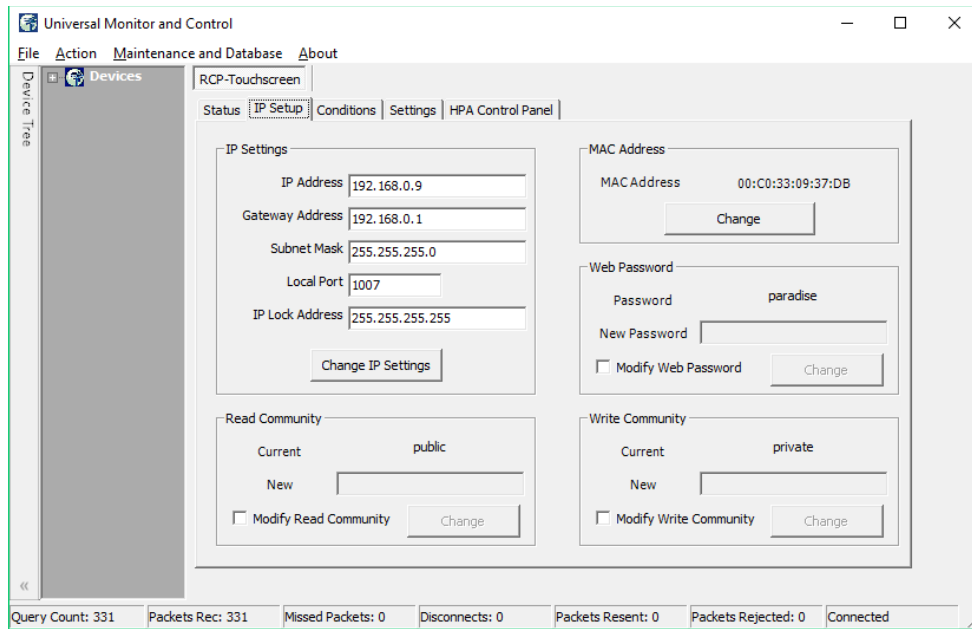


Figure 42: Universal M&C IP Setup Window

It shows the user all of the TCP/IP settings on the unit. When the IP Address is modified the unit must be reset for it to use the new IP Address. Until the unit is reset it will use the old IP Address. The Amplifier Local Port is the port that the unit monitors for UDP requests. The unit also answers requests using the same port.

If the Amplifier Local Port is changed the unit must be reset. The Gateway Address and Subnet Mask are standard settings for TCP/IP communications. If either of these settings is changed the unit must be reset for the new settings to take effect. The IP Lock Address is used for security. If it is set to something besides 0.0.0.0 or 255.255.255.255 it will only answer the address it is set to. For example, if the IP Lock Address is 192.168.0.50 then a request from 192.168.0.100 will not be accepted. The IP Lock Address may be changed without resetting the unit.

Conditions Window

The third screen displays the Conditions of the units connected to the controller, as shown in Figure 43.

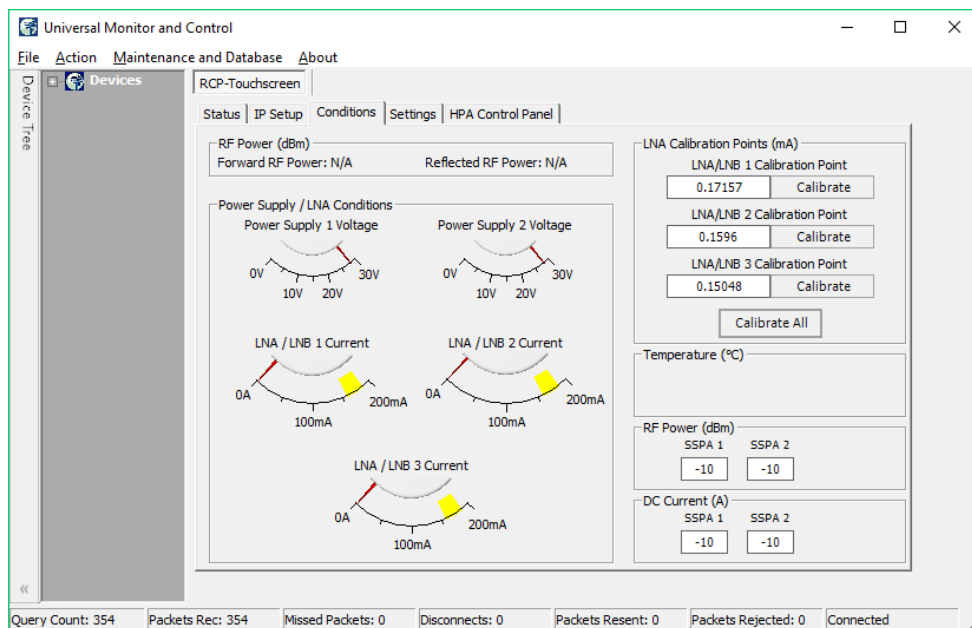


Figure 43: Universal M&C, Conditions Window

The system forward power, reflected power, power supply voltages and LNA/LNB currents and temperatures are all monitored. In addition, the calibration points of each LNA/LNB are displayed.

Settings Window

The fourth screen is the "Settings" screen, shown in Figure 44.

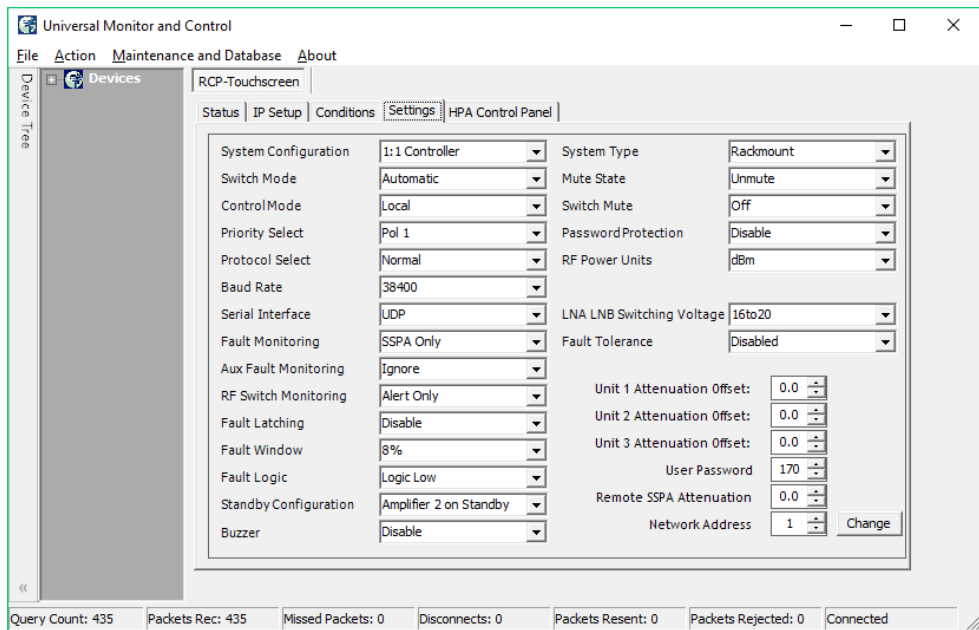


Figure 44: Universal M&C, Settings Window

It shows the user all available settings on the unit. All user-adjustable settings may be modified to suit the specific needs of the customer. However, it should be noted that the units are pre-configured for the customer at the factory. If modification of any settings is necessary, refer to the Table 7 of the **Remote Control Interface** section.

HPA Control Panel Window

The fifth screen is the "HPA Control Panel" screen, shown in Figure 45.

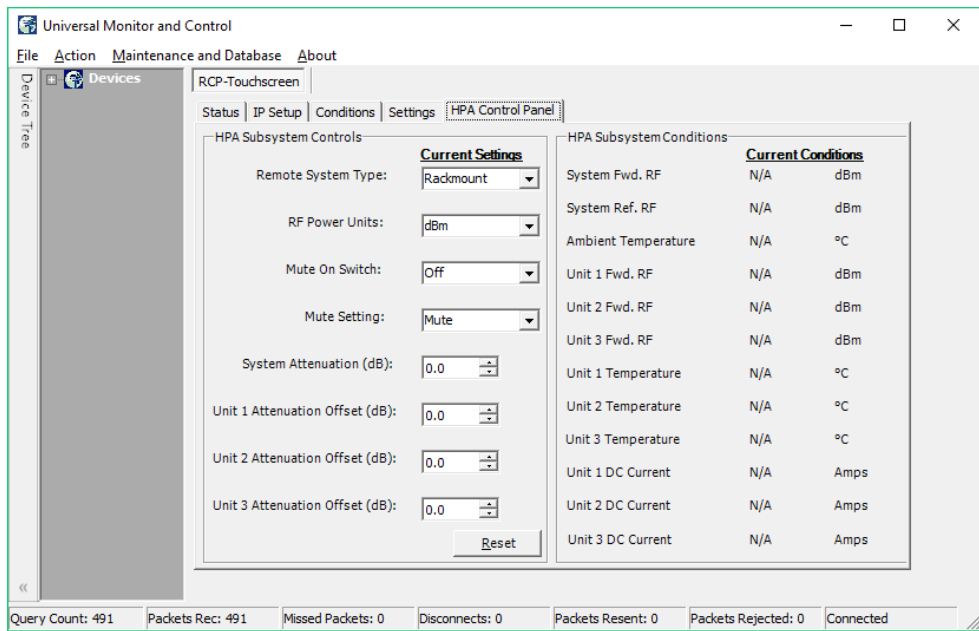


Figure 45: Universal M&C, HPA Control Panel Window

From this window, the user may select the type of amplifier used in the system, choose the RF power units displayed, mute or unmute the system, and set the attenuation levels of the system or individual amplifier offsets. The user may also monitor the forward RF, temperature and DC current conditions of the HPA subsystem.

Universal M&C Advanced Features

Universal M&C Preferences

The user can adjust certain preferences of the Universal Monitor and Control software. Click on the Action pull-down menu and select Preferences. See Figure 46.

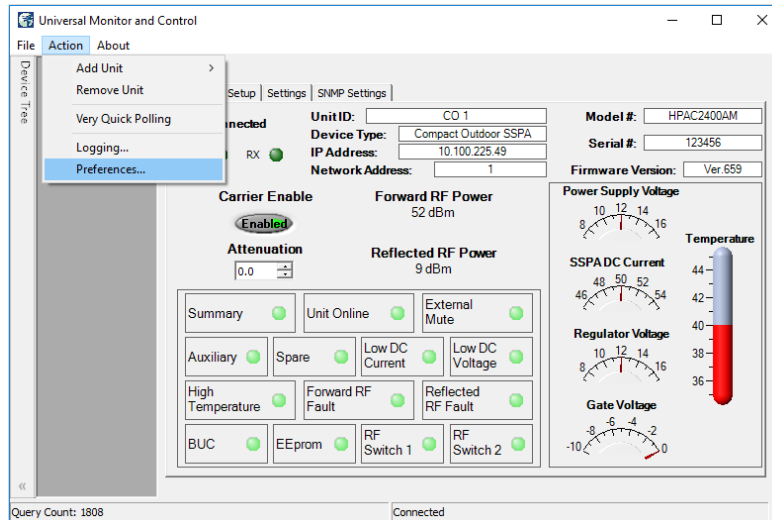


Figure 46: Universal M&C > Action > Preferences

Queries

Click on the Queries icon at left to open the Query Settings menu. Select the PC Source Address. Adjust the interval that the software queries the unit. Tick the Queries Enabled checkbox to begin sending queries to the connected unit. Note that if queries are disabled, there will be no communication with the unit at startup. Untick the bottom checkbox to disable commands on units set to Local Control Mode. See Figure 47.

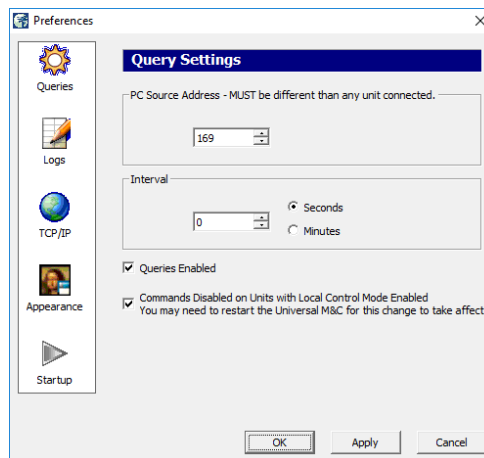


Figure 47: Universal M&C Preferences > Queries

Logs

Click on the Logs icon at left to open the Log Settings menu. Adjust the interval that selected parameters are recorded (in minutes or seconds). Tick the checkbox to enable logging. See Figure 48.

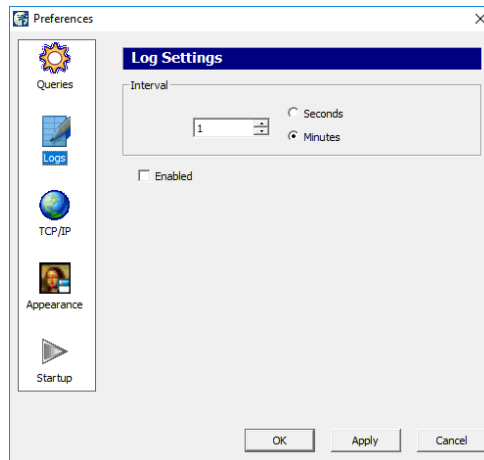


Figure 48: Universal M&C Preferences > Logs

TCP/IP

Click on the TCP/IP icon at left to open the TCP/IP Settings menu. Select the Local UDP Port (the software must be restarted to take effect). Note that each UDP address must be unique. Default Unit UDP Port is 1007. See Figure 49.

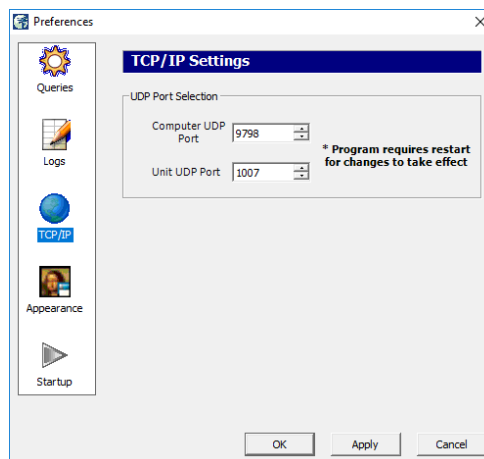


Figure 49: Universal M&C Preferences > TCP/IP

Appearance

Click on the Appearance icon at left to open the Appearance menu. Set the transparency of the M&C Windows. A setting of 0 indicates no transparency. Maximum value is 80. See Figure 50.

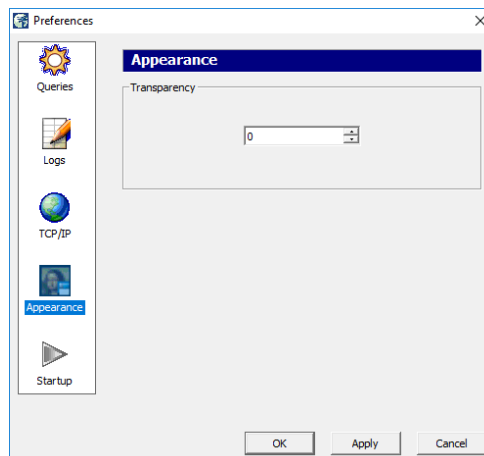


Figure 50: Universal M&C Preferences > Appearance

Startup

Click on the Startup icon at left to open the Startup menu. Tick the checkbox to enable auto-loading of the last-used device configuration. See Figure 51.

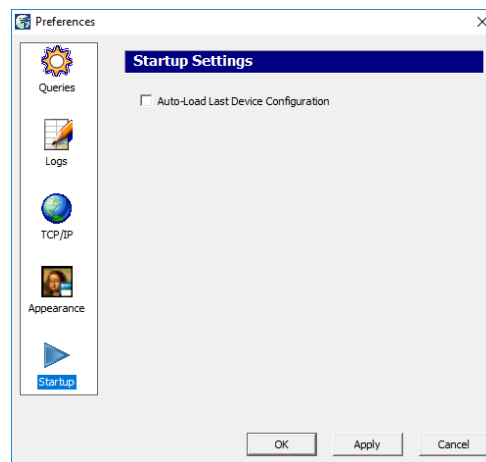


Figure 51: Universal M&C Preferences > Startup

Using the Device Logger

The Universal Logger may be used to show a real-time log of selected parameters. Before opening the logger, at least one unit must be connected and added to the Universal M&C. To open the Logger, click on the Action pull-down menu and select 'Logging...' as shown in Figure 52.

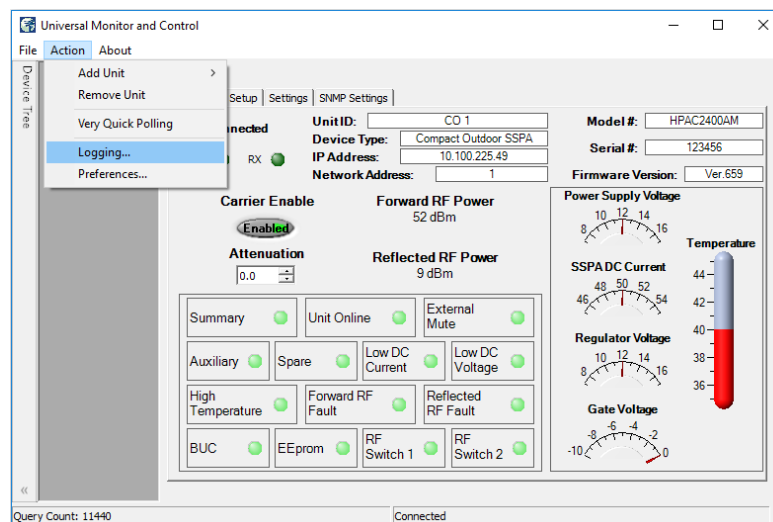


Figure 52: Universal M&C Action > Logging...

The Device Logger will open, as seen in Figure 53.

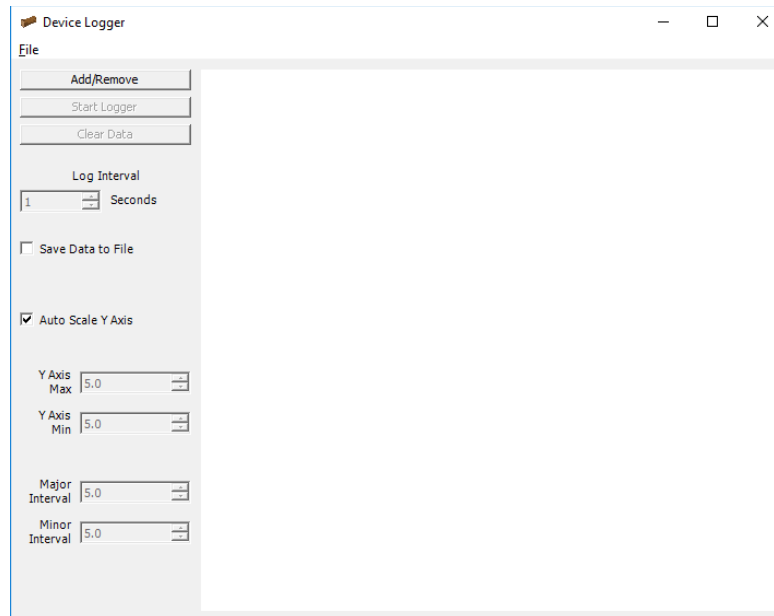


Figure 53: Universal M&C Device Logger Window

Click on the 'Add/Remove' button, which opens a new window as shown in Figure 54. Select the desired device in the Available Devices pull-down menu. Individually select which parameters to log (or remove unwanted parameters).

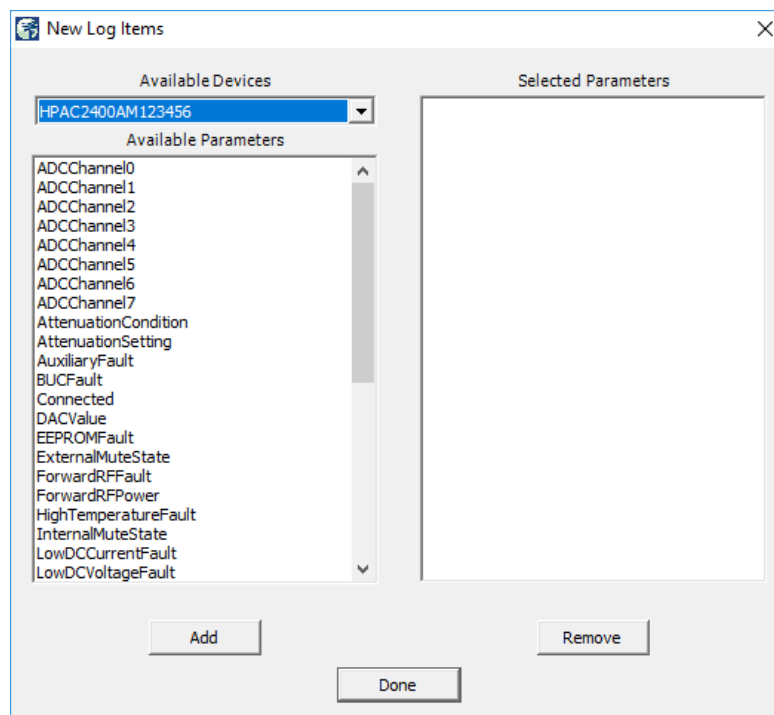


Figure 54: Universal M&C Device Logger > New Log Items Window

After choosing the parameters, the Logger window will be similar to Figure 55. Click on the Done button to accept the list of selected parameters.

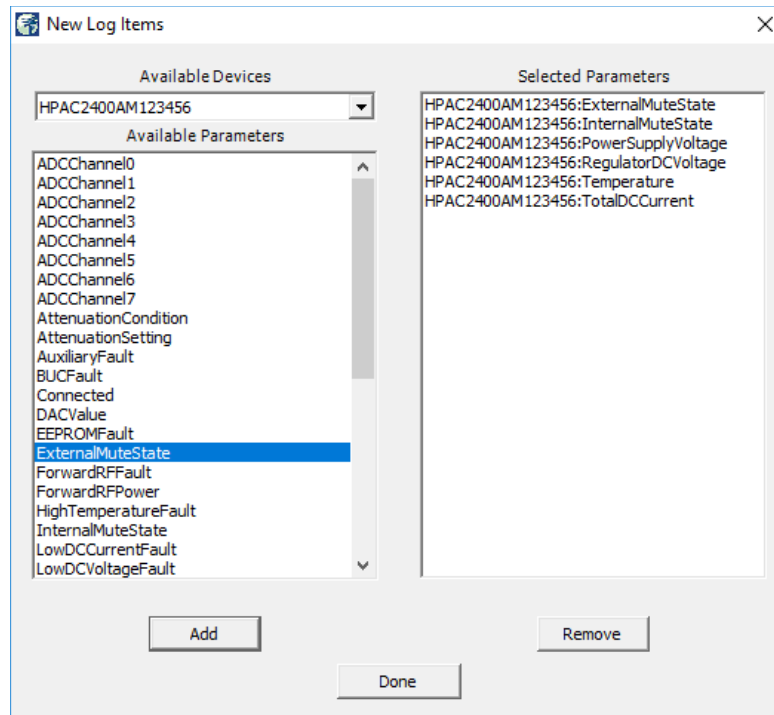


Figure 55: Universal M&C Device Logger > New Log Items > Items Selected

You may modify the log interval by entering the number of seconds between each record. Default interval is 1 second. Click on the Start Logging button to begin logging the selected parameters.

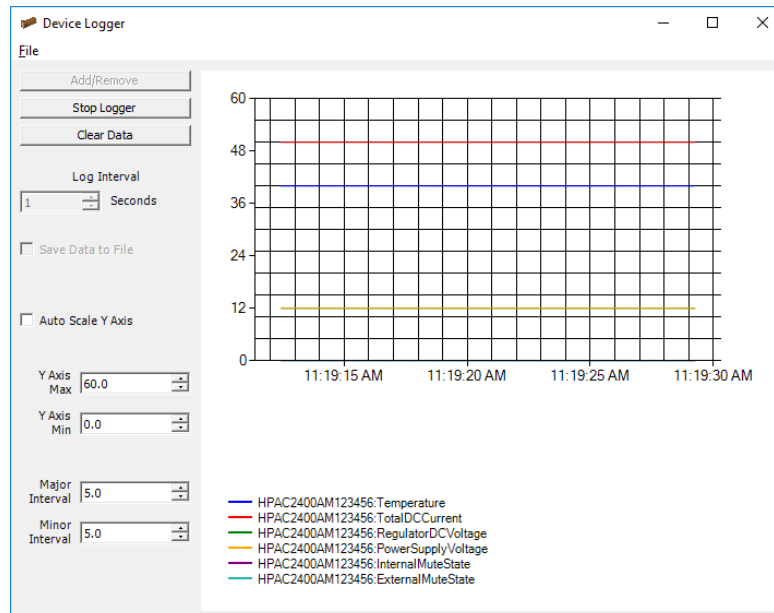


Figure 56: Universal M&C Device Logger > Start Logging

Click on the 'File' menu and select 'Print' to print the graph and legend as shown in Figure 56. You may stop, start, and clear the data at any time.

⚠ While running the Logger, you may continue to use the Universal M&C to monitor the status of or make settings modifications to any connected unit.

Saving M&C Configurations

The Universal M&C allows users to save multiple configurations to a variety of units. In addition, the software features a 'Load Last Configuration' option that will reload the last configuration used by the M&C.

Save a Single Configuration

To save a single configuration, add the desired units to the Universal M&C and select 'Save Configuration' from the 'File' menu. See Figure 57. After saving, a confirmation message will appear that states the success of the save. This saved configuration may be reloaded even after a computer restart. It is important to note that the Universal M&C will occasionally perform this save automatically.

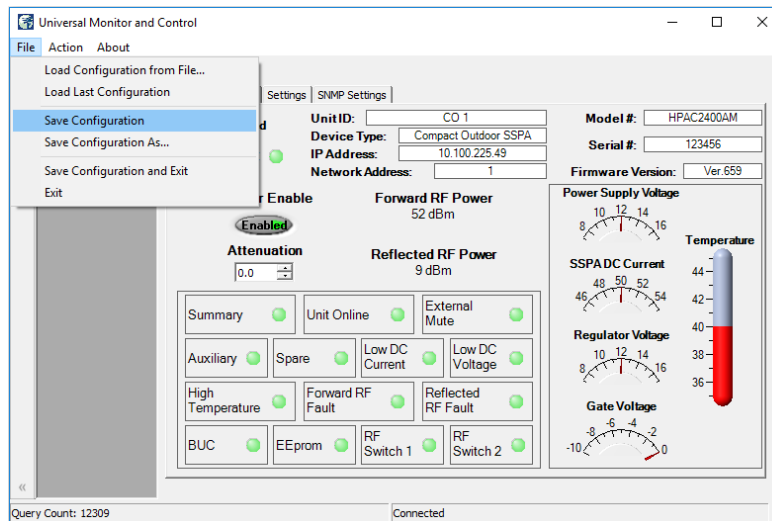


Figure 57: Universal M&C File > Save Configuration

To be certain the proper configuration is saved, select 'Save Configuration As...' from the 'File' menu, and navigate to a directory to which the file will be saved. You may wish to name the file with descriptive text about the connected unit.

Load the Last Configuration

To load the last configuration, select 'Load Last Configuration' from the 'File' menu. See Figure 58. The M&C will load whatever unit(s) were previously loaded. You may set the Universal M&C Preferences to automatically load the last configuration used by the Universal M&C software when the software is run. See the Startup Preferences section.

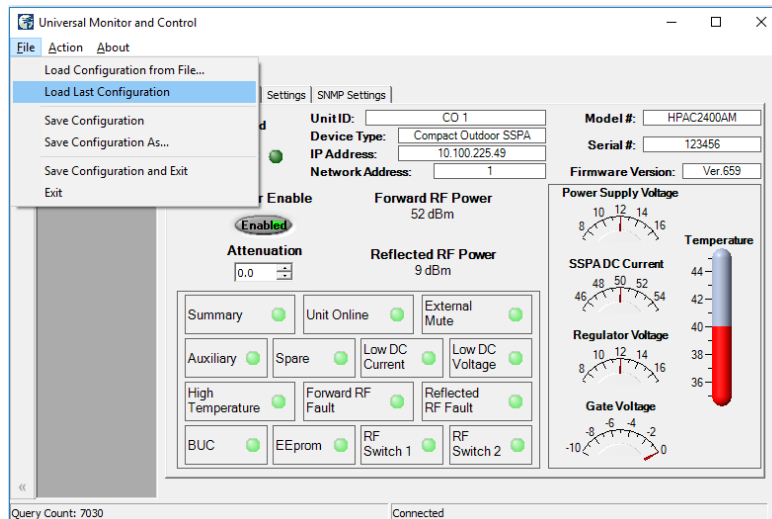


Figure 58: Universal M&C File > Load Last Configuration

Load a Configuration from a File

To load a specific configuration from a file, select 'Load Configuration from File...' from the 'File' menu. Select the location of the file as shown in Figure 59. Click the Open button to load the configuration to the Universal M&C.

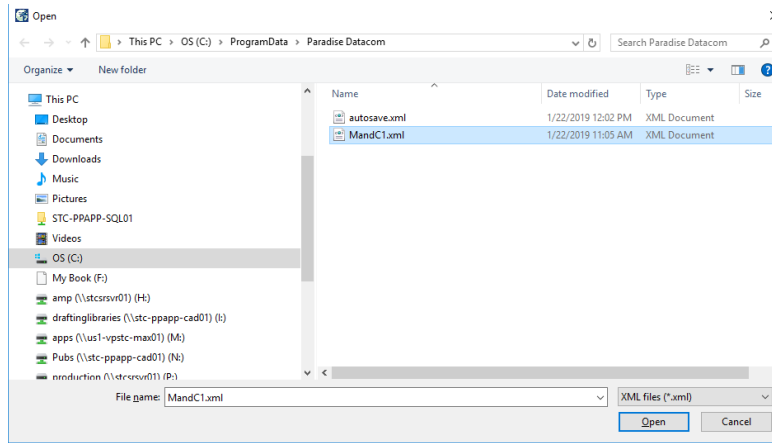


Figure 59: Universal M&C File > Load Configuration from File

Teledyne Paradise Datacom
Drawing Number 216594-2 Revision D
ECO A26152
Last Modified: June 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216594/216594-2.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK

Use and Disclosure of Data

Teledyne Paradise Datacom
Drawing Number: 216594-1 Revision D
ECO A26152
June 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216594/216594-1.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

Use and Disclosure of Data

This product is classified as EAR99 and is subject to U.S. Department of Commerce regulations. Export, reexport or diversion contrary to U.S. law is prohibited.

Proprietary and Confidential

The information contained in this document is the sole property of Teledyne Paradise Datacom. Any reproduction in part or as a whole without the written permission of Teledyne Paradise Datacom is prohibited.

Information in this document is subject to change without notice.

All other company names and product names in this document are property of the respective companies.

Data Security

Teledyne Paradise Datacom amplifiers and controllers do not inherently provide encryption to transmitted data, and have limited security measures to protect it. If the unit will be accessible over the Internet, exercise appropriate data security protocols. Teledyne Paradise Datacom strongly recommends placing the equipment behind a protective Firewall or setting up a VPN link with dual authentication for remote access.

About Teledyne Paradise Datacom

Teledyne Paradise Datacom, a division of Teledyne Defense Electronics LLC, is a single source for high power solid state amplifiers (SSPAs), Low Noise Amplifiers (LNAs), Block Up Converters (BUCs), and Modem products. Operating out of two primary locations, Rancho Cordova, CA, USA, and Chelmsford, England, Teledyne Paradise Datacom has more than a 20 year history of providing innovative solutions to enable satellite uplinks, battlefield communications, and cellular backhaul.

Teledyne Paradise Datacom
11361 Sunrise Park Drive
Rancho Cordova, CA 95742 USA
(814) 238-3450

Teledyne Paradise Datacom Ltd
106 Waterhouse Lane
Chelmsford, Essex, England, CM1 2QU
+44(0)1245 847520

Copyright

© 2015-2022 Teledyne Paradise Datacom

Teledyne Paradise Datacom
Drawing Number 216594-1 Revision D
ECO A26152
Last Modified: June 2022

UNCONTROLLED WHEN PRINTED!

You can view the latest revision of this manual section on the Teledyne Paradise Datacom web site:
<http://www.paradisedatacom.com/xml/216594/216594-1.xml>

USE AND DISCLOSURE OF DATA

EAR99 Technology Subject to Restrictions Contained in <http://www.paradisedatacom.com/xml/216594/216594-1.xml>.

THIS PAGE LEFT INTENTIONALLY BLANK